



ASSEMBLY AND CARE INSTRUCTIONS

ALASKA 7FT SNOWY CHRISTMAS TREE
PLU 158987



ASSEMBLY PART

PARTS:

- A** Tree Top Section x 1
- B** Tree Middle Section x 1
- C** Tree Bottom Section x 1
- D** Four-Legged Bracket x 1
- E** Eye Bolt x 3

A



B



C



D




E



INSTRUCTIONS




1. Assemble the metal bracket by laying it flat on the floor and pull apart the legs of the bracket so that they are x-shaped.

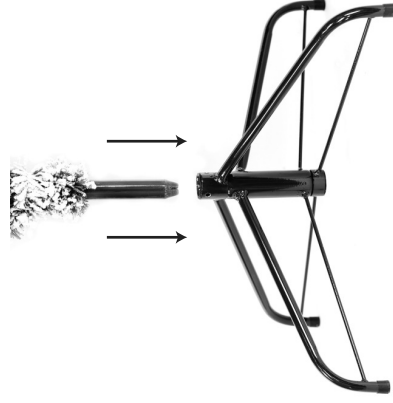


2. Assemble the Christmas tree from the bottom to the top. Start with the bottom section. Make sure the longer pole is firmly inserted and secured into the stand.

INSTRUCTIONS

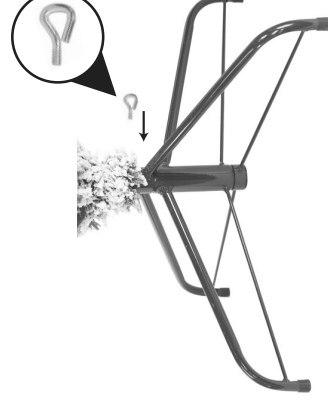


3. When inserting the bottom section of the Christmas tree into the assembled stand, thread the eye bolt into the stand and tighten until the pole is firmly secured.

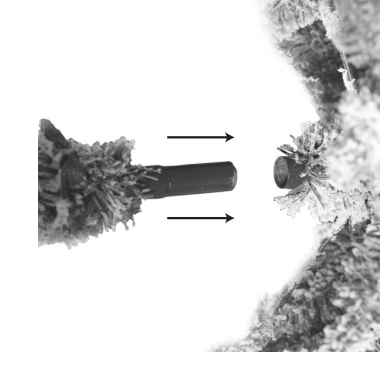


4. Once the bottom part of the Christmas tree is secure on the metal bracket, insert the middle section on top of the section already secured.

INSTRUCTIONS

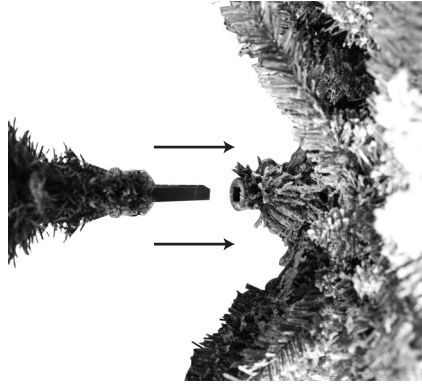

5. When the bottom and middle sections are secure, insert the top section onto the secured sections.

INSTRUCTIONS

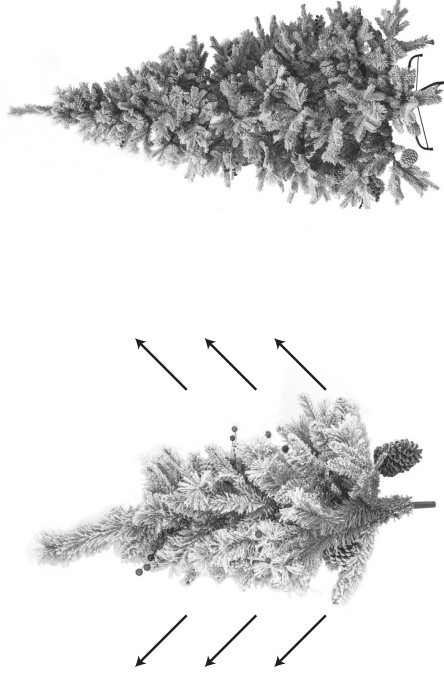

6. Shape the branches and tips working from the bottom to the top. Start with tips farthest from the pole and fan out one to the right, one to the left and one at the center of the main stem. After shaping the entire Christmas tree following the previous step, slightly sweep up all branch tips for a uniform look. Shift branches to fill any gaps. Your Jolly Sleigh ALASKA 7FT SNOWY CHRISTMAS TREE now completed and ready to be decorated.

STORAGE INSTRUCTIONS

1. Remove all ornaments and decorations.
2. Disassemble the Christmas tree from the top to the bottom. Start with the Christmas tree top and gently lift straight up to remove from section below and fold all branches toward the pole.
3. Continue by gently lifting straight up each section(s) from the section below and fold all branches toward the pole until the bottom section is removed from the Christmas tree stand.
4. Dismantle the stand - but remember to keep all the components.
5. We recommend that you tether or cello tape the box to avoid any lost items.
6. Before you place the Christmas tree into storage, check that you have not forgotten any components.
7. When not in use, please store your Christmas tree in a cool, dry place away from sunlight. Exposing your Christmas tree to excessive heat or humidity may damage your Christmas tree.