

**N O R D H A U S™**

**INSTRUCTION MANUAL**

**Personal Smoothie Blender**

**MODEL No: PLU153032**



Please read this manual carefully and completely before using the appliance and keep safe for future reference. Always follow these safety cautions when using the appliance to avoid personal injury or damage to the appliance. This appliance should be used only as described in this manual.

Ensure the user manual is included when passing the product onto any third parties.

## **SAVE THESE INSTRUCTIONS**

## **IMPORTANT SAFEGUARDS**

When using electrical appliances, basic safety precautions should always be followed including the following:

- Read all instructions.
- Do not use the appliance for any other purpose than described in this manual. The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.
- Charge the appliance before using it. Connect the USB port to a power source with the supplied USB cable and charge for about three (3) hours.
- **DO NOT** operate the appliance while it is charging.
- Remove the USB connector from the USB port to disconnect the appliance with the power source. **DO NOT** pull the cord when disconnecting.
- Protect the USB cable:
  - **DO NOT** bend or twist the USB cable cord.
  - Ensure that the cable cord does not touch any hot surfaces.
  - **DO NOT** subject the cable cord to stress where connected to the product.
  - **NEVER** carry the blender by the cord.
  - **DO NOT** let the cable hang over the edge of a table or counter.
- To protect against risk of electric shock - do not immerse the cord, or power base in water or any other liquid. Do not rinse under the tap. Do not let any water or other liquid enter the appliance.
-  **WARNING:** Do not use the appliance if there is any damage on cord or other parts, after a malfunction or after being dropped/damaged in any way. Do not use the cup if it is cracked or chipped.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. Do not allow any unauthorized person to replace or fix the damaged cord.
- **DO NOT** leave the appliance unattended while it is switched on.
- Close supervision is necessary when the appliance is used near children or pets.
- Never leave this appliance within reach of children.
- This appliance shall not be used by children. Keep the appliance and its cable out of the reach of children.
- This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or

instruction concerning use of the appliance by a person responsible for their safety.

- Cleaning and user maintenance should not be made by children.
- Switch off and disconnect the USB cable before fitting or removing tools/ accessories, after use and before cleaning.
- The use of external accessory attachments is not recommended by the appliance manufacturer. Only use the accessories supplied by the manufacturer.
- Always operate the blender with the cover in place. The motor will not work when the blender is uncovered.
- The blender has auto shut-off function and will switch off automatically after approximately 30 seconds but can be turned off anytime by pressing the power button.
- **DO NOT** put liquids hotter than 60°C in the cup for blending. Allow hot foods to cool before processing. Be careful if you pour hot liquid into the blending cup as it can be expelled out of the appliance due to sudden steaming.
- Avoid contact with moving parts. Keep hands, hair, clothing and utensils out of blender while blending to prevent personal injury or damage to the blender.

**⚠ WARNING:** The blades are very sharp. Handle with care and extreme caution when cleaning.

- Never let the power appliance, cord or plug get wet.

**⚠ WARNING:** Do not operate the blender when the blending cup is empty.

- **Caution:** Take care when handling the blade assembly, as the blades may get hot during use. If blending warm ingredients, take care when removing the blade assembly, as there may be a pressure build-up from blending, which could cause the ingredients to eject from the lid.
- Wash the blades in warm soapy water, rinse and dry thoroughly.
- If the appliance develops a fault, stop using it immediately. Repairs should only be performed by qualified personnel. Improper repairs may place the user at serious risk.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- We accept no liability for any eventual injury or damages caused by misuse of the product or noncompliance with these instructions.

## GENERAL DESCRIPTION



1. Lid (with silicone sealingring)
2. Silicone strap
3. Filter (with silicone sealingring)
4. 330ml blendingcup
5. Blade assembly
6. Power base
7. LED signallight
8. Powerbutton
9. Charging micro USB port
10. Slip-resistant base (notpictured)

## BEFORE FIRST USE

1. Remove all the packaging materials.
2. Insert the supplied USB cable into USB port on the power source firmly.
3. Insert the micro USB connector firmly into the charging port at the front of the power base.
4. Charge the blender for the first time for about three (3) hours.
5. The LED signal light will illuminate red during charging and will turn blue when fully charged.

## ASSEMBLY

The blender comes fully assembled.

Wash all parts that come into contact with food (cup, lid, filter and blade) before first use with warm soapy water using a non-abrasive sponge and dry thoroughly. Wipe the outside of the blender with a clean damp cloth and dry thoroughly. Make sure that all parts are clean and dry before assembling the product.

After parts are washed and dried, assemble the blender as per below:

- Twist the cup (with the magnets at the bottom) firmly onto the power base, turning the cup clockwise to secure. Properly connected, the indicator light will briefly flash red and blue.
- Twist the filter firmly onto the cup, then twist the lid onto the filter.

## USING THE BLENDER

- Unscrew the lid and take it off the filter.
- Unscrew the filter and take it off the cup.
- Cut the fruit (and/or vegetables) to be blended into small pieces (1.5x1.5cm) and place them into the blending cup.

**CAUTION:** Fill only up to around 60% of the cup, using the cup measuring scale for guidance.

- Add liquid (water or milk), filling up to around 80% of the cup.
- Place the filter onto the cup, turning it clockwise to secure.
- Place the lid onto the filter and turn it clockwise to secure.
- After you have checked and ensured that the cup is firmly attached to the power base and the lid is secured, press the POWER button to start blending your ingredients. The LED signal light will illuminate blue.
- During operation, hold and shake the cup gently to ensure all ingredients are properly mixed and processed.
- The blender will take around 30 seconds to process most fruit drinks but may take a little longer with harder fruits.
- The blender will stop operating after 30 seconds. You may press the POWER button to turn off the blender at any time before the automatic shut-off.
- After the blades have stopped rotating, unscrew the lid (and filter, if desired) and pour out your fresh fruit drink. Enjoy!

## CLEANING THE APPLIANCE

- We recommend cleaning the appliance immediately after each use.
- **Blade:** To clean around the blade, add a little water to the cup and attach the filter and lid. Pulse the motor for a few seconds to remove food residues from around the blade. Then pour out the water and proceed with cleaning the other parts.
- **Cup, filter and lid:** Wash the cup, filter and lid in warm, soapy water, rinse and dry thoroughly.
- **Power base:** Wipe the power base carefully with a clean damp cloth, taking extra care around the blades. Dry it with a towel.
- **DO NOT** immerse the power base in water or wash it in a dishwasher. Make sure no water comes into contact with the power base. Do not clean any part of the appliance with thinner or harsh chemical cleaners.
- **Safety first:** Keep children away from the power base with blade.

Problem	Possible cause and solution
The appliance does not start. The red light is on.	The appliance has run out of charge. Connect it to a power source using the supplied USB cable.
Liquid is leaking from around the power base.	Take the cup off the power base and check that the silicone sealing ring is in place on the base. If the ring is dirty, take it out, clean it and reinsert it properly.
Liquid is leaking from around the filter/lid.	Take the filter and lid off the blending cup. Both parts have a sealing ring. Check that the silicone sealing rings are properly in their places in the filter and lid. If the rings are dirty, take them out, clean them and reinsert them properly.

Correct Disposal of this product	
	This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased.

Ogalas ULC  
Unit 4 Parkway House  
Ballymount Drive  
Dublin  
D12 ECR9

