

---

# NORDHAUS™

## 3IN1 1000W Stick Blender Set

### INSTRUCTION MANUAL



**Model: PLU169037**

**220-240V ~50/60Hz 1000W**

---

Please read this manual carefully and completely before using the appliance and keep safe for future reference. Always follow these safety cautions when using the appliance to avoid personal injury or damage to the appliance. This appliance should be used only as described in this manual.

## **Important Safety Cautions**

When using electrical appliance, basic precautions should always be followed, including the following:

1. Read the instructions carefully before using your appliances for the first time.
2. This appliance is designed for household use only and not for commercial use.
3. Before connecting the appliance to the power supply, check that the voltage indicated on the appliance corresponds to the mains voltage in your country.
4. Keep the appliance out of the reach of children. Always store and place it in a location that is inaccessible to children to prevent accidents or injury.
5. Close supervision is required when the appliance is used near children or pets. The appliance must never be used by young children or by persons with reduced capabilities without proper supervision.
6. Do not use it outdoors.
7. Use the product only with recommended accessories and components. Improper or incorrect use is dangerous.
8. Unplug your appliance after use and before cleaning.
9. Always disconnect the power supply before disassembling, assembling, cleaning, or when the appliance is not in use.
10. Remove all packaging prior to use. Inspect the product for any damage

---

before use.

11. Do not use the appliance if it has damaged. Contact an approved service centre for inspection or repair.

12. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard. Do not allow any unauthorized person to replace or fix the damaged cord.

13. Do not use if the appliance, cord or plug is damaged.

14. Ensure all parts are correctly installed and securely locked in place before operating the appliance.

15. Keep long hair, scarves and loose clothing away from the blending rod or whisk when the appliance is in operation.

16. Avoid contact with moving parts. Keep hands and utensils out of blades to prevent personal injury or damage to the blender

17. Do not place the appliance near a heat source.

18. Before using your appliance for the first time, clean the accessories thoroughly. Do not immerse motor unit in water or any other liquid.

19. Retain these instructions for future reference.

20. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

**WARNING! The blades are very sharp. Handle with care and extreme caution when cleaning.**

---

## USER INSTRUCTIONS

### How to use Stick Blender

1. Attach the stick blender to the motor unit by twisting it anticlockwise until it locks securely.
2. Plug in the appliance.
3. Do not fill the beaker more than 2/3 full to prevent overflowing.
4. Always blend ingredients with water or another liquid.
5. Do not use the stick blender to process hard foods such as coffee bean, ice cubes, sugar, cereals, chocolate etc.
6. The appliance has two speed settings for different types of ingredients.
7. Adjustable Speed control wheel - the stick blender offers a range of adjustable speed settings, just rotate the wheel on the top to the desired speed level for variable speeds. This allows for easy processing of different types of food materials with precision.
8. **Do not operate the stick blender more than 1 minute at a time. Allow a few minutes' rest before the next use.**
9. Always unplug the appliance before detaching the stick from the motor unit.
10. Caution: **The blades are sharp.** Handle with care to avoid injury.

### How to use Whisk

1. Attach the whisk to the motor unit by twisting it anticlockwise until it locks securely.
2. Plug in the appliance.

- 
3. The appliance has two speed settings suitable for mixing eggs, cream and similar ingredient.
  4. Keep long hair, scarves, and loose clothing away from the rotating whisk to avoid accidents.
  5. Do not press the switch immediately after adding liquid ingredients to avoid splashing.
  6. The appliance should be used continuously for no more than 1 minute at a time. After 1 minute of operation, allow it to rest before using again to prevent motor overheating.
  7. Always unplug the appliance after use before cleaning.

## **How to use Chopper**

1. Fill the chopper bowl with ingredients such as meat, cheese, onions, herbs, garlic, carrots, almonds, prunes etc.
2. Attach the gear box to the chopper bowl by turning it clockwise until it locks.
3. Place the motor unit onto the gear box and plug in the appliance.
4. Press the switch to operate the chopper. Hold the motor unit with one hand and the chopper bowl with the other during operation.
5. After use, unplug the appliance and remove the motor unit from the gear box; then remove the gear box from the bowl.
6. Carefully remove the blade. It is sharp — handle with caution!
7. Remove the processed food from the chopper bowl.

### **CAUTION:**

- Do not exceed 1 minute of chopping at a time.

- 
- Ensure the food quantity does not exceed 500 ml.

## Cleaning and Storage


1. Unplug the appliance before cleaning.
2. Clean the motor unit of the appliance with a damp cloth. Do not immerse it in water or any other liquid.
3. The chopper gear box may be rinsed under running water, but do not immerse it in water.
4. Clean the blades and accessories immediately after use to prevent bacterial growth. Handle the blades with care — they are very sharp!
5. For convenient storage, place the accessories on the chopper gear box holder. Attach the motor unit to the holder, then store the whisk and blender stick separately on the accessory holder.

## TECHNICAL DATA

Voltage: 220-240V~

Frequency: 50/60Hz

Power: 1000W

Correct Disposal of this product	
	<p>This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased.</p>