

INSTRUCTION MANUAL

PLU: 167193 GLENARIFF WATER FOUNTAIN

Thank you for purchasing this fine decorative fountain. This product combines our latest design with a creative theme, and is carefully packaged, inspected, and tested to ensure safe operation. The following instructions and safety guidelines will enable you to use the product for trouble-free operation. Please read the instructions and safety guidelines entirely before using the product.

The product consists of: (1) Fountain Top (2) Reservoir (3) Pump

Instructions for use:

1. Remove plastic bag from packaging. Read this instruction sheet before proceeding.
2. Place base on a flat surface, and insert reservoir onto base.
3. Read pump user manual. Insert the water pump into water tube.
4. Insert fountain top on reservoir and put pump into water. Water should be higher than the pump.
5. Make sure the water tube is properly connected with the pump, and is not crimped.
6. The concave edge of the fountain top should adhere to the convex part of the reservoir. Be sure that the electric wire is passed through the wire opening.
7. Connect the power cable to outlet. If installed properly, water flow in the fountain will begin shortly.
8. Please do not use the electrical plug in wet weather conditions.
9. Please do not use in adverse weather conditions.

Please note: On first use, there may be air in the pump. It may take several minutes until all the air escapes.

Safety Guidelines:

1. Read all instructions and safety guidelines thoroughly. Failure to follow guideline and instructions could result in serious injury and/or property damage.

2. Do not pump flammable liquids such as gasoline or fuel oil with the fountain pump.
3. Make sure the water tube is properly connected with the pump and the upper layer, and the tube is not crimped. This could cause a blockage, and water will not come out.
4. During operation, the area around the pump will be covered with water. Take care when handling the pump; do not pull it out of the water (when running) by the power cord, and do not move the product while in operation.
5. Unplug the pump from electric power before servicing, cleaning, or moving.

Cleaning and Maintenance:

1. If, after time, the pump starts to lose power or stops working, you should check for the build-up of sediment or scale at the bottom of the pump housing, or in the reservoir.
2. Remove the blockage or any dirt and scale which may have built up and close the case back up.
3. Periodically change water and keep water clean. We recommend distilled water to prevent mineral build-up. This will improve the waterfall effect.

