OUTDOOR SNOW FALLING AND LASER PROJECTOR LIGHT



THESE INSTRUCTIONS ARE FOR YOUR SAFETY. PLEASE STUDY ALL INSTRUCTIONS AND WARNING LABELS BEFORE USING AND RETAIN FOR FUTURE REFERENCE.

Product specification

PLU: 098173

Light Type: 1W LED x 2 and LASER x 2


(RED LASER: λ=660nm, Green LASER: λ=530nm, Max Output:P≤1mW)


Power: 5W

Voltage (V): DC 5V / 1000mA IP Grade: IP44

Size: H47 x W15.5 x D19cm


Projection image size diagram

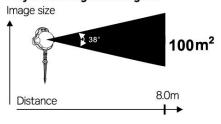

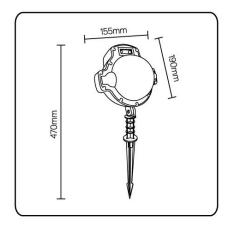


Contents list

Outdoor projector light 2. Remote control (1 CR2032 button cell battery included)
Adapter 4. Ground stake 5. Instruction manual 6. Stand

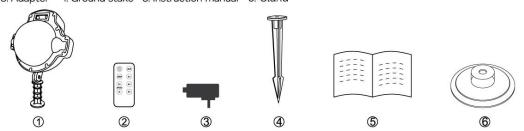

Product features

 

- Turn on/off the light.
- Mode 1: Red light steady on/twinkle. Mode 2: Green light steady on/twinkle.
 - Mode 3: Red and green light steady on/twinkle/chasing.
- (s+) Speed up the snowfall speed of rotation.
- Slow down the snowfall speed of rotation.
- • Mode 1: Red light. Mode 2: Green light. Mode 3: Red and green light. Mode 4: White light.
 - Mode 5: Red and white light. Mode 6: White & green light. Mode 7: Red, white and green light.
- 2 hours of light, 22 hours of sleep. Bright lights and dormancy timing cycle.
- 4 hours of light, 20 hours of sleep. Bright lights and dormancy timing cycle.
- 6 hours of light, 18 hours of sleep. Bright lights and dormancy timing cycle.

Battery replacement (remote)

Follow equipment instructions carefully and always use the recommended type of battery (1 x CR2032 included). Do not allow children to fit the battery without adult supervision. Ensure that the battery is fitted the right way round, observing signs on the battery and the product. Remove battery if equipment is not going to be used for extended periods of time.

WARNING

Do not ingest the battery. Chemical burn hazard.

The remote control supplied with the projector contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and may lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, go to the Accident and Emergency department and seek medical attention immediately.

Disposal and recycling



Electrical products are labelled with the wheelie bin symbol to indicate that they are to be collected and recycled at end of life. Users of electrical products should not dispose of them as unsorted municipal waste but use the separate collection facilities available. Check with your local authority for recycling advice. Customer participation is encouraged to minimise any potential effects on the environment and human health from the potential presence of hazardous substances.

