



GILL & HOBBS

— LIGHTING —

# 6" DESK FAN

PLU - 134287

INSTRUCTION MANUAL



# Welcome

Thank you for purchasing this product. Please read all instructions and warnings carefully before use, failure to follow instructions listed may result in electronic shock, fire or serious injury.

---

## Your 6 Inch Desk Fan

### In The Box

Carefully remove your 6 inch desk fan from the box.

- 6 Inch Desk Fan
- Instruction Manual

## Assembly

- Place the fan motor assembly onto the base and insert the hand wheel screw and fit the nut.
- Adjust the angle of the fan and tighten the hand wheel to lock it in position.



# Using Your 6 Inch Desk Fan

- Connect the mains plug to a suitable outlet.
- Select the desired speed using the speed control:
  - 0 = device off
  - 1 = Low speed
  - 2 = High speed

## Cleaning & Maintenance

- Before cleaning, always unplug the fan until it is completely cool down, DO NOT dis-assembly the fan guard for cleaning.
- To clean the fan, use a soft cloth to wipe off any dust. If the fan is very dirty, use a damp cloth and wipe dry.
- Do not use any chemicals, abrasives or solvents that could damage the fan.
- Store the fan in its original packaging in a dry, well ventilated area.
- The motor bearings are permanently sealed and do not require additional lubrication.

# Technical Specification

PLU	134287
Power Supply	220-240V~
Rated Frequency	50 - 60Hz
Power	15W
Dimensions (HxWxD)	290 x 195 x 160mm
Weight	0.6 kg

Product information requirements	
Maximum fan flow rate (F)	6,4 m <sup>3</sup> /min
Fan power input (P)	13.1 W
Service value (SV)	0.5 (m <sup>3</sup> /min)/W
Measurement standard for service value	(EU) No 206 / 2012+ (EU) 2016 / 2282 IEC 60879:2019 EN 50564:2011 EN 60704-1:2010+A11:2012 EN IEC 60704-2-7:2020
Standby power consumption (PSB)	0 W
Fan sound power level (LWA)	45.8dB(A)
Maximum air velocity (c)	1.9 meters/sec



OGALAS ULC  
D12 ECR9  
MADE IN CHINA

Cleaning and user maintenance shall not be made by children without supervision.

# Disposal of the unit

## WEEE

### **Information on Waste Disposal for Consumers of Electrical & Electronic Equipment**

This mark on a product and/or accompanying documents indicates that when it is to be disposed of, it must be treated as Waste Electrical & Electronic Equipment (WEEE).

Any WEEE marked waste products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used.

For proper treatment, recovery and recycling; please take all WEEE marked waste to your Local Authority Civic waste site, where it will be accepted free of charge.

If all consumers dispose of Waste Electrical & Electronic Equipment correctly, they will be helping to save valuable resources and preventing any potential negative effects upon human health and the environment, of any hazardous materials that the waste may contain.

# General safety

- Ensure that you read all of the safety instructions before using this product.
- This product has been designed and manufactured to meet European safety standards, but like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.
- Do read the operating instructions before you attempt to use the product.
- Do ensure that all electrical connections (including the mains plug, extension leads and interconnections between pieces of equipment) are properly made in accordance with the instructions.
- Switch off and remove the mains plug or mains adapter when making or changing any connections.
- Do consult your dealer if you are ever in doubt about the installation, operation or safety of your product.
- Don't remove any fixed covers as this may expose you to dangerous voltages.
- Don't continue to operate the product if you are ever in doubt about it working normally, or if it is damaged in any way. Switch it off, withdraw the plug from the mains and consult your dealer.
- There are no user serviceable parts in the product. When servicing, refer to qualified service personnel.
- Don't leave the product switched on when it is unattended for long periods of time, unless it is specifically stated that it is designed for unattended operation or has a standby mode.

- Don't obstruct the ventilation vents on the product, for example with curtains or soft furnishings, as this may cause overheating.
- Do not place the product in closed bookcases or racks without proper ventilation.
- Do not use the product in humid or damp conditions or allow it to be exposed to rain or moisture.
- Store the product in a clean, dry environment.
- The product shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on it.
- Position the power cable and other connected cables so that they are not likely to be walked on, pinched or where items can be placed on or against them.
- Never allow children to insert foreign objects into holes or slots on the product.
- No naked flame sources, such as lighted candles, should be placed on the product.
- Disconnect the product from the mains supply before cleaning.
- Do not use any liquids or aerosol cleaners, as this may damage the product. Use a soft, dust-free cloth.
- Contact local authorities for means of disposal.
- Make sure that other people in your household are conversant with operation of the product.

# Product Safety

## **READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.**

When using electrical appliance basic safety precautions should be followed, including the following:

- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children without supervision. Ensure that the fan is switched off from the supply mains before removing the guard.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- There are no user-serviceable parts in this product. Refer servicing to qualified personnel.
- Do not operate this fan with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- Do not insert anything through the grille when the fan is in use.
- Make sure that the fan is on a stable surface when operating.
- It is recommended to unplug the fan from the mains socket when not in use.



# Electrical information

## (Fixed Mains Plug Only)

The mains lead supplied with this product is fitted with a BS1363/A 13 amp plug. If it is not suitable for your supply sockets it must be replaced with an appropriate plug.

If the plug becomes damaged and/or needs to be replaced please follow the wiring instructions on the next page. The plug removed must be disposed of immediately. It must not be plugged into a supply socket as this will be an electrical hazard.

If the fuse needs to be replaced it must be of the same rating and ASTA approved to BS1362. If the plug is changed, a fuse of the appropriate rating must be fitted in the plug, adapter or at the distribution board. If the fuse in a moulded plug is replaced, the fuse cover must be refitted before the appliance can be used.

## Wiring instructions

The supply cable will be either 2-core or 3-core. Follow the appropriate wiring instructions shown. In both cases ensure that the outer sheath of the cable is firmly held by the cable clamp.

# Electrical information

## (Power adapters only)

Never open the power adapter, you risk getting an electric shock.

Only use the power adapter that is supplied with your product.

You must always connect the power adapter to the product before connecting to the mains power supply.

 
The power adapter must be used indoors only, and must not be subjected to damp conditions.

The power adapter does not have any user serviceable parts.

## 2-core plug




**WARNING:** Do not connect either wire to the earth terminal.



This symbol indicates that this 2-core appliance is Class II and does not require an earth connection.

The wire coloured blue must be connected to the terminal marked with the letter N or coloured black.

The wire coloured brown must be connected to the terminal marked with the letter L or coloured red.

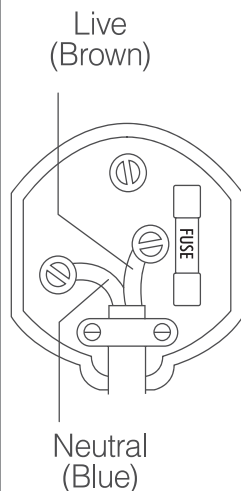

## 3-core plug



**WARNING:** This appliance must be earthed.



The wire coloured green and yellow must be connected to the terminal marked with the letter E, or by the earth symbol, or coloured green or green and yellow.

The wire coloured blue must be connected to the terminal marked with the letter N or coloured black.

The wire coloured brown must be connected to the terminal marked with the letter L or coloured red.

