

NORDHAUS™

8 in 1 Air Fryer Grill User Manual



Model No.: MS-201 / PLU 142970

220-240V~, 50-60Hz, 1700W

Suitable for family use

This product is an electric heating appliance. For your safety and convenience, please read this User Manual carefully and follow the steps. Please keep it for future reference.

I. WARNING

Please observe the following safety precautions before using this product.

SAVE THESE INSTRUCTION

1. Please read this User Manual carefully before using the product.
2. Do not immerse the power cord, plug and indoor grill in water in case of electric shock.
3. Before using this indoor grill, be sure to untie all the power cords wrapped around the back to avoid the accident.
4. When the electric indoor grill is working or after use, the external surface temperature is high, and touch is not allowed to prevent burns.
5. Use this product with extra care when children are around. Children are not allowed to use this product on their own or keep it out of reach of children
6. When the unit is on, do not swing the plug or socket to avoid strong currents and injuries by sparks.
7. Never hang the power cord on the edge of a cabinet/table or on a hot surface.
8. If the power cord or plug is damaged, or the oven fails, stop using it and seek a professional to repair or replace it.
9. If the power cord is damaged, it shall be replaced by the manufacturer or a professional to avoid danger.
10. Do not damage, bend, stretch, or twist the power cord; do not place heavy objects on the power cord or clamp the power cord.
11. When the indoor grill is not in use, the plug shall be pulled out of the socket to avoid electric shock or electric leakage fire due to insulation aging.
12. The matching accessories shall be used correctly to avoid fire or injuries caused in operation.
13. The indoor grill shall be placed in a dry environment and shall not be used outdoors.
14. During the use of the indoor grill ,provide at least 6 inches of space above and on all sides for air circulation..
15. Keep the indoor grill in a stable place and keep it away from flammable materials.
16. Only consumable food can be cook in the grill. Do not put large pieces of food or metal objects in the indoor grill in case of fire or danger.
17. Do not place the following items in the grill for grilling, such as paper, cards, plastic, cloth, and flammable items.
18. When moving or repairing the indoor grill, unplug the power cord and wait for the grill to cool before proceeding.

19. When the indoor grill is working, do not open the hood to move the cooking tray or other accessories to avoid burns caused by high temperature or high-temperature liquid.
20. Do not place anything on the indoor grill. Do not cover or obstruct the heat dissipation position of the indoor grill.
21. This product is for home use only. Do not use this grill for any other purpose not specified.
22. All maintenance must be carried out by professional personnel.
23. This appliance cannot be operated with an external timer or a separate remote control.
24. This device cannot be used by children, mental patients, people with physical challenges and those who are slow to respond unless guided by a person who is able to use it.
25. This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
26. Do not use this appliance for deep-frying.

II. Names of Main Parts

non-stick grill plate	
non-stick cooking pot	
non-stick crisper basket	



Hood

Splatter Shield
(removable)

Main unit

Control panel

III . Know your indoor grill

The control panel display shows time in an HH:MM format. Cooking temperature and cooking



time show alternating.

FUNCTION BUTTONS

Air crisp:For crispiness and crunch with little to no oil, like French fries.

Roast:Tenderize meats,roast vegetables and more.

Dehydrate: Dehydrate meats,fruits,and vegetables for healthy homemade snacks.

Bake:use to bake cakes,treats,desserts and more.

Pizza:use to cook pizza, fit for 8 inches pizza.

Broil: this function is suitable for thawing all kinds of meat.

Grill:Grill indoors while creating even char,grill marks and grilled flavor.

Manual: it is an additional function for manual setting for different kinds of food and different flavor.

TIPS BUTTONS

Preheat:Press the **START/STOP** button to begin preheating after choose the preset program (Function buttons above mentioned), or if need to adjust the time or temperature (these time and temperature adjusting are specially for cooking process, preheat process cannot be adjusted) .The light of preheat button will turn on. It takes about 5 minutes to preheat, depending on the selected temperature setting.

NOTE: Time or temperature of preheat process are set, cannot be adjusted. If no need the preheat process, press the chosen function/program button again during the preheat process, then cancel the preheat process and **ADD FOOD** light turn on for notification.

Add food: When preheating is complete ,the unit will beep and the light of Add Food button will turn on . Open the hood and place ingredients on the cooking plate. Once the hood is closed, cooking will begin and the timer will start counting down. **If need to open the hood during the cooking process, unit will pause temporary; close the hood, unit will continue the previous working automatically, no need to press START/STOP button again. After 3 seconds, if press START/STOP button, then pause cooking process.** During the cooking process, time and temperature can be adjusted by pressing the **TIME & TEMP** arrow button.

If the hood do not open to add the food inside after the preheat process finished, unit will keep working as the preheat mode. If still not open the hood and add food after 30 minutes, the unit will

turn off automatically.

OPERATING BUTTONS

Power Button:

Once the unit is plugged in, press the  power button to turn on the unit. It will enter the standby mode, lights of power button and display turn on. Pressing it during cooking stops the current cooking function and turns off the unit.

Once the cooking process finished, unit will beep 5 sounds and display shows END, lights of buttons will be off except the Power button, heating element stops working, motor will keep working 1 minute then display turn off, all lights turn off, enter into switch off mode. If need to stop working in advance, press power button to switch off.

TEMP arrows:

Use the left and right  TEMP  arrows to adjust the cooking temperature in any function, **choosing any program and then adjust the cooking temperature if need, then press START/STOP button to start cooking.** When using the Grill function, toggle the GRILL button or TEMP arrow button to adjust cooking temperature mode --LOW,MED,HIGH,MAX.

To adjust the temperature, every adjustment with 10°F/5°C by pressing one time the arrow buttons, if long press the arrow buttons more than 2 seconds, every adjustment with 30°F/10°C fast change.

TIME arrows:

Use the left and right  TIME  arrows to adjust the cook time in any function, **choosing any program and then adjust the cooking time if need, then press START/STOP button to start cooking.** To adjust the time, every adjustment with 1 minute by pressing one time the arrow buttons, of long press the arrow buttons more than 2 seconds, every adjustment with 5 minutes fast change.

NOTE: To adjust temperature or time during cooking ,press the up and down arrows.The unit will then resume at those setting. **All the time or temperature adjustments before preheating, during preheating and cooking are referring to cooking process, not preheat process.**

START/STOP button: After selecting temperature and time,press the START/STOP button to begin cooking. **During the preheat process, press the START/STOP button, unit pause working, display flash - - - -; press START/STOP button again, continue working. During cooking process, press the START/STOP button, unit pause working, display showing time stops, press button again, continue working.**

If need to re-choose the function during the preheat and cooking process, need to press START/STOP button and then re-choose the function.

STANDBY MODE: The unit will power off if no any interaction with the control panel for 1min .The unit will power off if choosing function is stop or canceled and no any interaction with the control panel for 5 min.

Under the standby mode, in the same time,press Temperature  arrow button and

Broil button together to change temperature symbol °C and °F, display will show F or C, after chosen, will confirm in 3 seconds. During the preheat and cooking process, can change the temperature symbol in the same way.

IV BEFORE FIRST USE

- 1, Remove all packaging material, promotional labels, and tape from the unit.
- 2, Remove all accessories from the package and read this manual carefully. Please pay particular attention to operational instructions, warnings, and important safeguards to avoid any injury or property damage.
- 3, Wash the grill grate, splatter shield, crisper basket, cleaning brush, veggie tray, griddle kebabs, and cooking pot in warm, soapy water, then rinse and dry thoroughly. The grill grate, splatter shield, crisper basket, cooking pot are also dishwasher safe. NEVER clean the main unit in the dishwasher.

V USING YOUR 8 IN 1 INDOOR GRILL

SPLATTER SHIELD

Located on the underside of the hood, the splatter shield keeps the heating element clean. ALWAYS ensure the splatter shield is installed when cooking. Failure to use the splatter shield will result in oil buildup on the heating element, which can cause smoking.

Removing the splatter shield

Remove the splatter shield for cleaning after every use. First allow the splatter shield to cool completely, then remove it by using your thumb to release the front clip by pushing the front clip upward and using your other hand to pull one of the tabs toward you. This will release the splatter shield, allowing you to pull it out of the slot along the back of the hood.

Installing the splatter shield

To install, gently push the splatter shield into the back of the hood. Insert the back tab of shield with the slot on the back of the hood. Then push the splatter shield upward until it clicks into the clip on the front of the hood.

COOKING FUNCTIONS

Ensure the unit is plugged in before turning it on. Press the power button.

Grill

- 1 Place the cooking pot in the unit with the indent on the pot aligned with the rear bump on the main unit. Then place the grill grate in the pot.
- 2 Press the GRILL button. The default temperature is HIGH 400°F / 205°C and default time is 20 minutes. Press Grill or TEMP arrow buttons to adjust the temperature setting include Low, Med, High, Max and press TIME arrow to adjust cooking time from 1min to 30 min.
- 3, Press the START/STOP button to begin preheating. The light will turn on during preheating.
- 4, When Preheating is complete, the light will turn off and beep for 5 sounds.
- 5, The light of ADD FOOD will turn on.

6,Open the hood and place ingredients on the grill grate. Once the hood is closed, cooking will begin and the timer will start counting down.

NOTE: during cooking,you can open the hood to check on or flip your food. The timer will pause when the hood is opened and then automatically resume after it is closed.

7, When cook time is complete,the unit will beep 5 sounds and END will appear on the LED display screen. Keep the hood open after removing you food so the unit will cool down more quickly.

GRILL CONTROL

When using the Grill function,you will need to select the grill grate temperature setting. Below are recommended temperature levels for common ingredients.

LOW 300°F/150°C	MED 350°F/175°C	HIGH 400 °F/205°C	MAX 450°F/230°C
Bacon Sausages	Frozen meats	Steaks	Fruit
Using thick barbecue sauce	Marinated sauced meat	Chicken wings	Frozen seafood
Calzones		Whole Chicken	Kebabs
		Hot dogs	

Air Crisp

1 Place the cooking pot in the unit with the indent on the pot aligned with the bump on the main unit.Place the crisper basket in the pot,then close the hood.

2 Press the AIR CRISP button .The default temperature is 400°F/205°C and default time is 18 minutes. Press TEMP arrow button to adjust the temperature setting from 120°F/50°C to 450°F/230°C and press TIME arrow to adjust cooking time from 1min to 60 mins.

3,Press the START/STOP button to begin preheating. The light will turn on during preheating.

4,When Preheating is complete,the light will turn off and beep for 5 sounds.

5,The light of ADD FOOD will turn on.

6,Open the hood and place ingredients on the grill grate. Once the hood is closed,cooking will begin and the timer will start counting down.

7,For best result, we recommend shaking ingredients frequently. When you open the hood,the unit will Pause.Use silicone tipped tongs when tossing your food or oven mitts to shake the basket.When done,replace the basket and close the hood . Cooking will automatically resume after hood is closed.

Roast

1,Place cooking pot in the unit with the indent on the pot aligned with the bump on the main unit,then close the hood.

2, Press the ROAST button.The default temperature is 400°F/205°C and default time is 25mins will display, .Use the TEMP arrows to adjust cooking temperature from 120°F/50°C to 400°F/ 220 °C and press TIME arrow to adjust cooking time from 1min to 240 mins.

3,Press the START/STOP button to begin preheating. The light will turn on during preheating.

4,When Preheating is complete,the light will turn off and beep for 5 sounds.

5,The light of ADD FOOD will turn on.

6,Open the hood and place ingredients in the pot. Once the hood is closed,cooking will begin and the timer will start counting down.

Bake

- 1,Place cooking pot in the unit with the indent on the pot aligned with the bump on the main unit,then close the hood.
- 2, Press the BAKE button.The default temperature is 350°F/175°C and default time is 25mins will display, .Use the TEMP arrows to adjust cooking temperature from 120°F /50°C to 400°F /205°C and press TIME arrow to adjust cooking time from 1min to 120 min.
- 3,Press the START/STOP button to begin preheating. The light will turn on during preheating.
- 4,When Preheating is complete,the light will turn off and beep for 5 sounds.
- 5,The light of ADD FOOD will turn on.
- 6,Open the hood and place ingredients in the pot. Once the hood is closed,cooking will begin and the timer will start counting down.

Dehydrate

- 1,Place cooking pot in the unit with the indent on the pot aligned with the bump on the main unit,then add a single layer of ingredients to the bottom of the pot.Place the crisper basket in the pot and add a layer of ingredients to the bottom of the basket.Close the hood.
- 2, Press the DEHYDRATE button.The default temperature is 120°F /50°C and default time is 360mins will display, .Use the TEMP arrow buttons to adjust cooking temperature from 120°F/50°C to 200°F/ 90°C and press TIME arrow buttons to adjust cooking time from 0.5H to 24H. **If long press the arrow buttons more than 2 seconds, every adjustment with 30 minutes fast change.**
- 3,Press the START/STOP button to begin .The unit does not need to preheat.
- 4, When dehydration time is complete,the unit will beep and END will appear on the display screen.Remove your food and close the hood.

NOTE:The unit does not preheat in this function.

Pizza

- 1,Place pizza plate in the unit with the indent on the pot aligned with the bump on the main unit,then close the hood.
- 2, Press the Pizza button.The default temperature is 380°F/195°C and default time is 25mins will display, .Use the TEMP arrows to adjust cooking temperature from 120°F /50°C to 400°F /205°C and press TIME arrow to adjust cooking time from 1min to 90 mins.
- 3,Press the START/STOP button to begin preheating. The light will turn on during preheating.
- 4,When Preheating is complete,the light will turn off and beep for 5 sounds.
- 5,The light of ADD FOOD will turn on.

6,Open the hood and place ingredients in the pizza plate. Once the hood is closed,cooking will begin and the timer will start counting down.

Broil

- 1,Place cooking pot in the unit with the indent on the pot aligned with the bump on the main unit,Place ingredients in the pot ,then close the hood.
- 2, Press the Broil button.The default temperature is 400°F/205°C and default time is 10mins will display, .Use the TEMP arrows to adjust cooking temperature from 120°F/50°C to 450°F/230°C and press TIME arrow to adjust cooking time from 1min to 60 min.
- 3,Press the START/STOP button to begin . The unit does not preheat in Broil mode.
- 4,When cook time is complete,the unit will beep and END will appear on the display screen.Remove your food and close the hood.

NOTE: The unit does not preheat in this function.

Manual

- 1,It is a special function for different food and different flavor .
- 2,The default temperature is 120°F /50°C and default time is 1 min will display, .Use the TEMP arrows to adjust cooking temperature from 120°F/50°C to 450°F /230°C and press TIME arrow to adjust cooking time from 1min to 120 min.

NOTE:The unit with preheat in this function.

Tips:

After the cooking is finished, the motor will keep on working 60 seconds to cool down the unit, it is recommended to open the hood after the motor stops working.

VI. Clean and Maintenance

1. Unplug the power cord before cleaning the indoor grill and allow the grill to cool down completely.
2. The inner and outer surfaces of the grill, grill plate ,cooking pot and crisper basket can be cleaned with a soft cotton cloth or sponge with a neutral detergent and cleaned with water.
3. Do not use hard brushes or articles for cleaning to avoid damaging the inner surface of the grill and the protective layer of the accessories.
4. Do not use toxic and corrosive cleaning agents such as gasoline, thinners, or polish.
5. The cleaned parts must be wiped dry before plugging in.

6. Please do not clean the heating tube.
7. Do not immerse the grill in a liquid such as water.

VII. After-sales Service

1. The Company offers a one-year free warranty for the whole machine.
2. The start date of the warranty shall be the date on the invoice.
3. Each of the following situations is not covered by the warranty:
 - Damage caused by improper use, storage and maintenance by consumers.
 - Damage caused due to disassembly and repair by the maintenance points not designated by the Company.
 - No valid invoices.
 - Damage caused by force majeure.
4. The company's customer service center is still eager to serve you for the products that are not covered by the warranty.
5. If the product is faulty, please contact our designated service point or customer service center.

VIII. Special Statement

1. All contents of this document have been carefully checked. If there is any misunderstanding of print or content, the company reserves the right of final interpretation.
2. For the technical improvements of the product, they will be compiled into the new manual without prior notice; if the appearance and color of the product are changed, the actual product shall prevail.
3. This product is for home use only.

Safety Statement

1. Under any condition, if heating element works, motor should work in the same time.
2. Under working condition, if open the hood, unit goes into pause stage, heating element and motor should stop working. Close the hood, unit continue working.
3. During working condition, if open the hood more than 4 minutes no other operation, unit beeps 2 sounds every 10 seconds, after 1 minute, unit switches off automatically.
4. Under working or standby mode, open the hood, display shows OPEN; under switch off mode, open the hood, display shows - - - -.
5. Unit with function self-checking and defectives notification.