Xiongli Decoration Co., Ltd		
Size:	210 (W) x 297 (H)mm	
Color:	■ 100K	Die-cut
Material:	Card	Front & Back
Item:	114305	
Date:	10-09-2021	
Designer:	Tom	

210 x 297 mm Front Back




# 114305 BALI CREAM MACRAME STYLE HAMMOCK Assembly Instruction IMPORTANT: RETAIN THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE. PLEASE READ CAREFULLY. ONE PERSON WITH MAX WEIGHT 100KG CAN USE ON THIS PRODUCT


## Warning!


- Warning risk of injury if not used or installed correctly.
- · Keep away from fire.
- For occasional use only. Not for commercial use.
- Do not hang over sharp objects, water, concrete, asphalt, packed earth, or any hard surface can result in serious injury to the user.
- Please make sure that this product is not used as a swing, jungle gym or a piece of gymnastics apparatus.
- Excessive movement of the swing could result in risk of tipping over and causing injury.
- Do not allow children to use this product.
- This is not a climbing frame or toy.
- We recommend to use this chair over shock absorbing grounds such as carpeting or outdoor grass, to minimise the risk of injury in the event of falling from the chair.
- This chair is only intended to support one person at a time.
- Always ensure weight is distributed evenly where possible to avoid tipping.
- Not recommend pregnant women and persons with reduced physical capabilities to use this item.
- · Maximum loading weight for this chair is 100kg.
- Check the product for any damages before each use.
- Check the product is stable and suspended correctly before each use.
- Periodically ensure all the components and fixings are secure and the item is stable and retighten as necessary. Only use a suitable stand or suspension equipment for this product.
- To install your hanging chair safely, please contact a building expert or DIY store for advice, we recommend you purchase any additional equipment needed. Ensure that the suspension attachment (such as hooks) are installed correctly and is secure before each use (not included). The suspension eye is included, other hooks are not included


### **Assembly Instructions**


- The assembly of this product should only be carried out by an adult.
- Only use a suitable stand or suspension equipment for this product.
- The attachment of this product can also be carried out using ropes on a tree/beams or using hooks on a tree or ceiling (not included). To install you chair safely, please contact a building expert or DIY store for advice, we recommend you purchase any additional equipment needed.
- Ensure that the suspension attachment (such as hooks) are installed correctly and is secure before each use (not included).
- Ensure all suspension cords run in a straight line and are not twisted or knotted, as this can lead to tipping over.
- The rope may stretch by around 15% when in use so adjust suspension accordingly.
- The chair should be secured at seat height approx. 70cm above the ground.

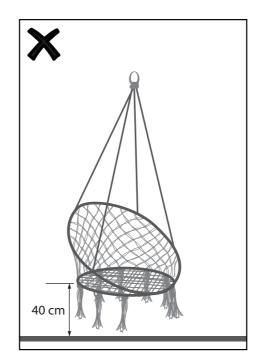


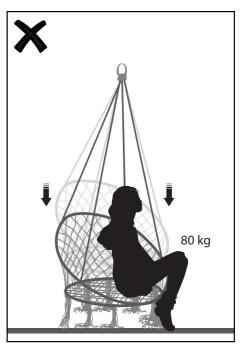

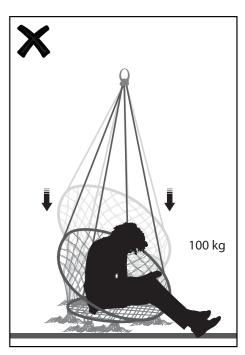

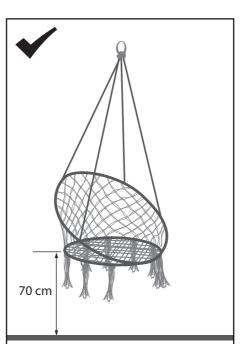

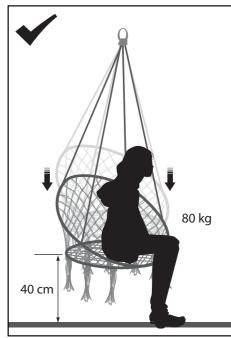

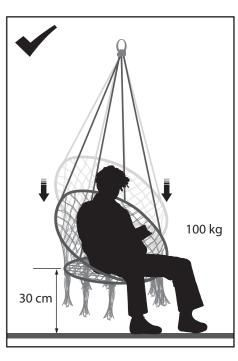

# Getting in & out of your hanging chair

- Let another adult help you get in and out of the chair to minimise any risk of falling.
- Stand in front of the middle of the chair
- Balance the chair with your hand
- · While balancing the chair with your hand carefully sit down at the same time
- · Reverse these steps to get yourself out

# Clean and care

- Do not use, or leave out, in adverse weather conditions (including wind and rain), or during the winter months.
- Damp wipe only and dry naturally.
- Please ensure chair is dry before storing.
- Periodically ensure all the screws and fixings are secure and the item is stable.
- We strongly advise covering up or storing away your furniture when not in use to protect it from the elements.
- Caution! The weather can fade and damage the material chair (e.g. sunlight, UV rays, rain etc) and reduce its performance and max weight specification.