


nedis

HTPA16Exx

Patio heater

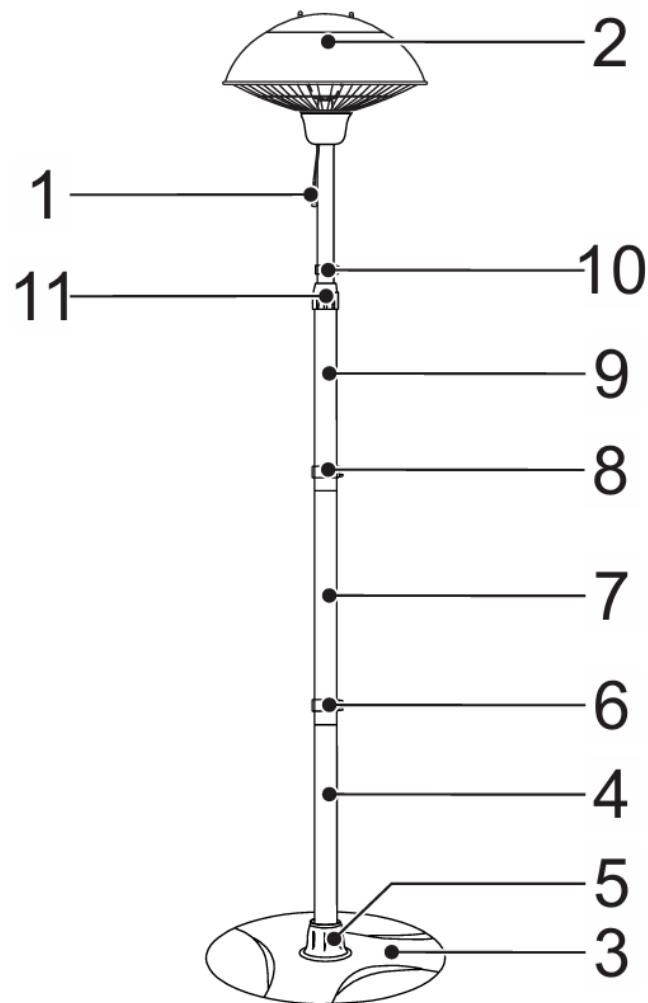

Specifications:

- AC220-240V, 50/60Hz
- Power: 1500Watt
- IP34

English - Description

The patio heater is a device used to provide comfort heating in an outside area.

1. Pull-cord switch	<ul style="list-style-type: none"> • Pull the cord once to switch on the device (750 W). • Pull the cord twice to switch on the device (1500 W). • Pull the cord again to switch off the device.
2. Heater head	<ul style="list-style-type: none"> • Mount the bottom tube to heater base using four screws (M6*35mm). • Slide the decorative cover over the bottom tube to place it onto the heater base. • Place the first cable support onto the bottom tube. • Mount the middle tube to the bottom tube using three screws (M5*6mm). • Place the second cable support onto the middle tube. • Mount the top tube to the middle tube using three screws (M5*6mm). • Place the third cable support onto the top tube. • Mount the heater head to the top tube using two screws (4*10mm). • To adjust the tube height: <ul style="list-style-type: none"> - Loosen the height adjustment knob. - Set the top tube to the required height. - Tighten the height adjustment knob. • Guide the mains cable through the three cable supports.
3. Heater base	
4. Bottom tube	
5. Decorative cover	
6. Cable support 1	
7. Middle tube	
8. Cable support 2	
9. Top tube (extension tube)	
10. Cable support 3	
11. Height adjustment knob (top tube)	

Safety

General safety

- Read the manual carefully before use. Keep the manual for future reference.
- The manufacturer is not liable for consequential damages or for damages to property or persons caused by non-observance of the safety instructions and improper use of the device.
- The device can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the device in a safe way and understand the hazards involved. Children shall not play with the device. Cleaning and user maintenance shall not be made by children without supervision.
- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom his electricity. This RCD must have a rated residual operating current no higher than 30mA. Ask your installer for advice.
- Only use the device for its intended purposes. Do not use the device for other purposes than described in the manual.
- Do not use the device if any part is damaged or defective. If the device is damaged or defective, replace the device immediately.
- The device is suitable for indoor use only. Do not use the device outdoors.
- The device is suitable for domestic use only. Do not use the device for commercial purposes.
- Do not use the device near bathtubs, showers, basins or other vessels containing water.
- If you use the device in a bathroom, remove the mains plug from the wall socket after use. The presence of water can cause a risk of personal injury or damage to the device even when the device is switched off.
- Do not use a timer or a separate remote-control system that switches on the device automatically.
- Do not expose the device to water or moisture.
- Do not cover the device.
- Do not block the ventilation openings.
- Do not insert foreign objects into the ventilation openings.
- Place the device on a stable, flat surface.

Electrical safety



- To reduce risk of electric shock, this product should only be opened by an authorized technician when service is required.
- Disconnect the product from the mains and other equipment if a problem should occur.
- Do not use the device if the mains cable or mains plug is damaged or defective. If the mains cable or mains plug is damaged or defective, it must be replaced by the manufacturer or an authorised repair agent.
- Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.
- Do not move the device by pulling the mains cable. Make sure that the mains cable cannot become entangled.
- Do not immerse the device, the mains cable or the mains plug in water or other liquids.
- Do not leave the device unattended while the mains plug is connected to the mains supply.

Cleaning and maintenance

Warning!

- Before cleaning or maintenance, always switch off the device, remove the mains plug from the wall socket and wait until the device has cooled down.
- Do not use cleaning solvents or abrasives.
- Do not clean the inside of the device.
- Do not attempt to repair the device. If the device does not operate correctly, replace it with a new device.
- Do not immerse the device in water or other liquids.

- Clean the outside of the device using a soft, damp cloth.
- Clean the airflow outlet using a vacuum cleaner.

Support

If you need further help or have comments or suggestions please visit www.nedis.com/support

Contact

NEDIS B.V., De Tweeling 28, 5215 MC 's-Hertogenbosch, The Netherlands