




# 8M GAZEBO RETRACTABLE ROPE LIGHT

## PLU-165977

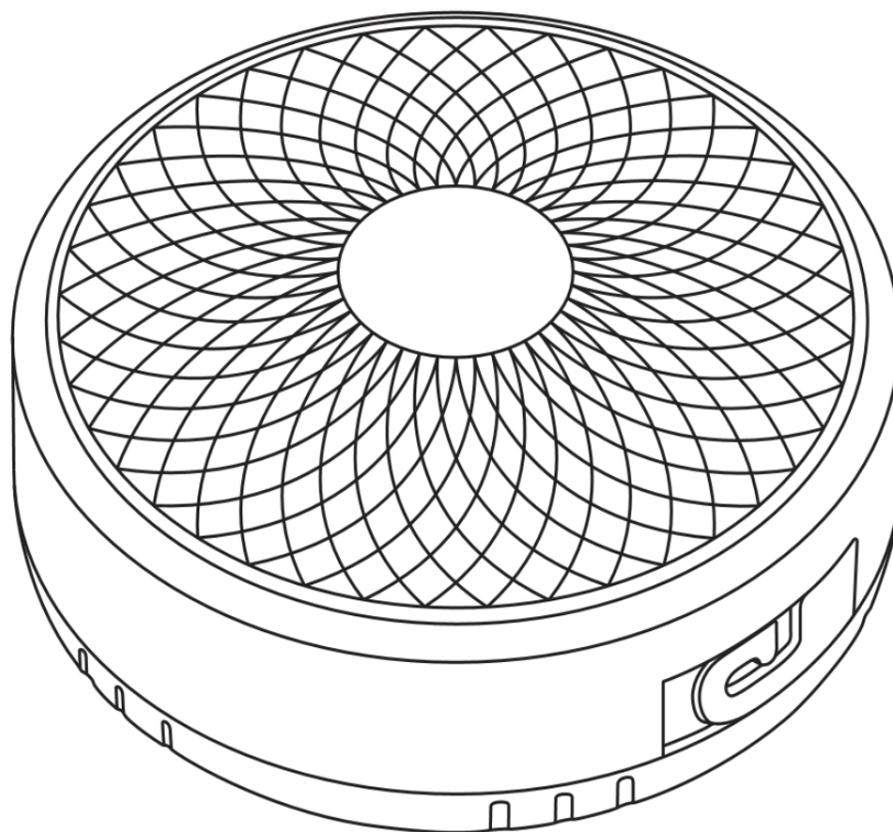


### Key Features & Uses

- **Perfect for Gazebos:** The 8-meter length is ideal for draping or wrapping around gazebo frames, providing perfect mood lighting for dining and relaxing outdoors.
- **Retractable & Tangle-Free:** Features a convenient, self-winding reel for quick setup and easy, neat storage—no more knotted cords.
- **Versatile Secondary Uses:** A brilliant light for camping, hiking, garden decorations, terraces, bedrooms, and party atmospheres.
- **Weather Resistant:** Designed to withstand outdoor conditions, making it a durable choice for your gazebo and beyond.
- **Portable Power:** Powered by a rechargeable battery, offering cord-free illumination wherever you need it.

### Product Parameter

<b>Product Model:</b> 165977	<b>Battery Specification:</b> 1 X Li-ion 18650 1500mAh 3.7V Rechargeable Battery (included)
<b>Product Length:</b> 8 meters	<b>Charging Time:</b> 3.5 hours
<b>Product Size:</b> (Dia)11CM x (W)4CM (Approx.)	

## Introduction

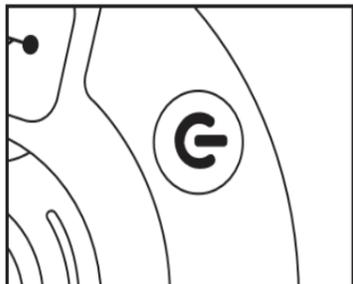


### Click switch

1. Main light ON (Ultra Bright - Warm White)
2. Main light ON (Regular - Warm White)
3. Main light flashing (Warm White)
4. String light ON (Multicolour)
5. String light breathing (Multicolour)
6. String light ON (Warm White)
7. String light breathing (Warm White)
8. String light flashing (Warm White + Multicolour)


### Long-press switch

Main light ON (Ultra Bright - Warm White) +  
String light ON (Multicolour)

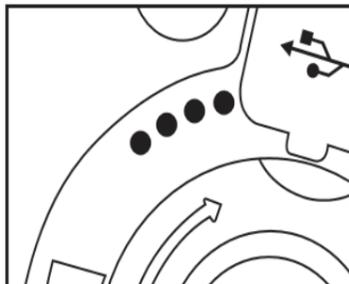


### Battery life

Strong light - 8h  
Low light - 11h  
Flash - 9.5h

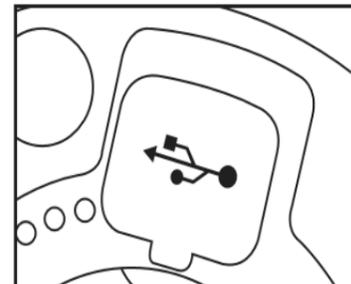


USB charging port  
TYPE-C charging port  
USB-C PD power bank  
output


## Instruction

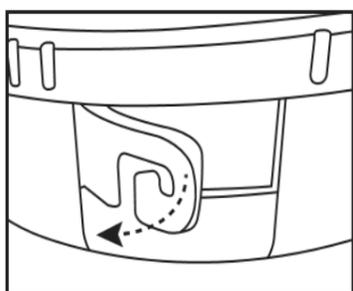

1. Open the hooks on the side.

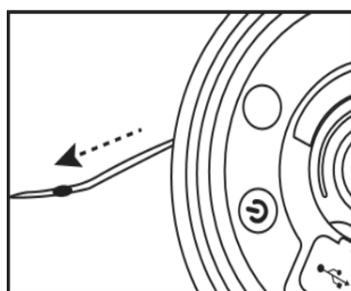

2. Pull out the string of lights.

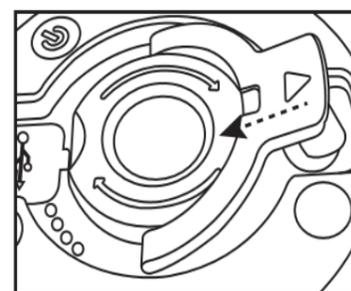

3. Open the lever and rotate to the right to retract the string of lights.

## Attention

1. Use A USB output device with stable supply at least DC5V0.5 A.
2. Please do not charge in direct sunlight or in a high temperature environment over 50 degrees.
3. Please do not cover the fuselage with cloth during charging to avoid fire.
4. If there is a burning odor or smoke during charging, remove the USB cable immediately.
5. This product is simple waterproof specification, please do not use in heavy rain.
6. If you do not use it for a long time (more than 3 months), please fully charge it before use.
7. In order to maintain storage capacity, please fully charge once every 3 months.
8. Please keep away from high temperature and humidity.

## Disposal and Recycling of Batteries

To protect the environment, batteries must not be thrown in the domestic garbage, nor disposed of in a fire as they contain dangerous materials.

Dispose of batteries by taking them to your local waste collection service to be recycled.

Replacement batteries can be purchase at most electrical retailers.

### WARNING!

**THIS IS NOT A TOY. KEEP AWAY FROM CHILDREN AND PETS.  
FOR DECORATIVE PURPOSES ONLY.**

OGALAS ULC  
UNIT 4 PARKWAY HOUSE  
BALLYMOUNT DRIVE  
DUBLIN, D12 ECR9  
MADE IN CHINA

IP44

CE



UK  
CA

