
ELECTRIC BBQ

INSTRUCTION MANUAL



Model: PLU167029

230V ~50Hz 2200W

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed. These instructions should be saved for future reference:

- Read and familiarise yourself with all operating instructions before using this Grill.
- Before plugging your unit into the mains, visually check that it is intact and has not suffered any transit damage.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- Do not use this product with a programmer, timer, separate remote-control system or any other such device.
- Do not immerse this appliance in water or any other liquids.
- Cooking appliances should be positioned in a stable situation with the handles (if any) positioned to avoid spillage of liquids.



- **DO NOT touch hot surfaces.** Accessible surfaces are liable to get hot during use. Always use any handles provided.
- Oven gloves should be used whilst using the Grill.
- Close supervision is required when using this appliance near children.
- Never leave this appliance within reach of children.
- This appliance shall not be used by children from 0 to 8 years.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Keep the appliance and its cord out of reach of children less than 8 years.
- Cleaning and user maintenance shall not be made by children.
- Do not leave the appliance unattended during use.
- Do not leave the appliance unattended whilst connected to the mains supply.
- Always use this appliance on a solid, level, non-flammable surface.
- Do not use charcoal or other combustible fuels in this appliance. This grill is not designed for charcoal use and a fire could result. The fire could create an unsafe condition and damage the grill.
- It is imperative to unplug the power cord after the appliance has been used, before it is cleaned and whilst being repaired.
- Regular, periodic checks should be carried out on the supply cord to ensure no damage is evident. Should there be any signs of damage the appliance should not be used.
- If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
- Do not operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- Do not allow the mains cable to hang over sharp edges or come in contact with hot surfaces.
- Allow the unit to cool before storage.

-
- Never place the appliance near to flammable material or high- pressure containers.
 - This appliance is intended for household use only and should not be used for industrial purposes.
 - Do not use any accessories or attachments with this appliance other than those supplied or recommended by supplier.
 - Do not use this appliance for anything other than its intended use.
 - Do not push objects into any openings as damage to the appliance and/or electric shock may occur.
 - Ensure appliance is situated in an open area, do not allow it to come in contact with cupboards, curtains, wall coverings, clothing or other flammable materials.
 - Unplug after each use. Grasp the plug, not the cord.
 - Do not cover this appliance.
 - Never place this appliance on an electric, gas, or any other type of hob.
 - Ensure adequate ventilation whilst cooking foods that are prone to giving off smoke.
-
- **WARNING** do not attempt to move the Grill whilst it is hot.
 - **WARNING** this appliance must be earthed.
 - Clean the cooking plate with clean damp soft cloth - do not use harsh abrasives or chemicals.
 - Do not use as a heater.
 - The grease tray must be in position at all times during barbecue operation.
 - Do not use this grill in wet or damp conditions.

CAUTION: IF USING THIS GRILL OUTDOORS IT MUST BE CONNECTED TO A SUITABLE IP RATED SOCKET OUTLET PROTECTED BY A RESIDUAL CURRENT DEVICE (RCD) HAVING A RATED RESIDUAL OPERATING CURRENT NOT EXCEEDING 30mA.

- **EXTENSION LEADS MUST NOT BE USED WITH THIS APPLIANCE.**

Description of Parts



1. Wind Shield
2. Side Tray
3. Cooking Plate
4. Temperature Control Knob
5. Stand
6. Drip Tray (At Rear)
7. Grill Tray
8. Support Tray
9. Utensil Tray

Before the first time you use your Grill

Please read these operating instructions thoroughly and keep them in a safe place for future reference.

Remove all packing materials and discard of responsibly.

Before using the Grill for the first time, wipe over the cooking plate using a soft, clean damp cloth.

Do not use metal cooking utensils with your Grill to prevent damage to the non-stick surface, use only wooden, silicone or other non-metallic utensils.

Assembly Instructions

Place the grill tray (7) on a dry level surface.

- Place the cooking plate (3) onto the grill tray so that both drains in the grill tray and cooking plate are aligned.

Ensure the cooking plate has locked into the grill tray.

If the cooking plate is locked in place, the grill can now be used.

If you would like to use the grill outdoors it is advised to fit the wind shield.

- Place the side ends of the wind shield (1) on the left or right side of the grill tray.
- From above, push the back of the wind shield into the two mounting brackets on the back wall of the grill tray.

The Grill can also be mounted on a stand, including a utensil tray.

- From below insert one of the legs through one of the openings at the corner of the utensil tray.
- Push the leg up until the two holes in the leg and utensil tray are aligned.
- Insert one of the supplied bolts through the holes from the front and secure at the rear using the supplied wing nut.
- Repeat this for the other three legs.
- Place the support frame onto the four support legs so the support legs run into the guide bars and the holes in the support legs and the guide bars are aligned.
- Insert a screw through each of the holes and secure using the supplied wing nuts.
- Place the grill tray onto the support base ensuring it clicks into place and place the cooking plate onto the grill tray following the steps above.

The grill is now ready to use.

Operating Instructions

- 1 Ensure that the Grill is disconnected from the mains supply.




2



Place the Grill on a solid level, non-flammable surface. Add a little cooking oil to the surface before cooking whilst the Grill is cold.

- 3 Insert the plug into a suitable earthed power socket.

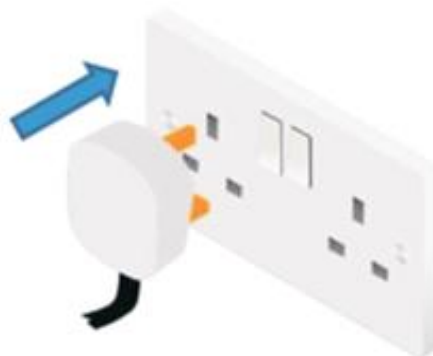

4



Set the temperature control to the desired temperature

- 5 Your Grill is now ready, load the Cooking Plate with the food to be cooked.

Cooking Tips

- Pre-heat the grill for 20 minutes before cooking on it.
- A light coating of oil will help brown your food evenly and stop it sticking to the grill plate.
- Always brush or spray oil onto your food not onto the cooking plate.
- When using a marinade, sauce or glaze with high sugar content, only brush onto the food during the last 10-15 minutes of cooking.

Care and Use of your Grill

- Always unplug the Grill from the mains supply before cleaning.
Allow the unit to cool before cleaning.
- Do not clean any part of your Grill in a dishwasher.
- Do not submerge any part of your Grill or its mains cable in water or any other liquids.
- Wipe the outside of the Grill clean with a soft damp cloth.
- Wipe clean the Cooking Plate with a clean damp cloth using a little washing- up liquid.
- Never clean any part of the Grill with harsh or abrasive cleaners.
- Store the grill indoors


Technical Data

Voltage: 230V~ 50Hz 2200W

Rated power: 2200Watts

Protection class: I

Model Number: PLU167029

Correct Disposal of this product	
	<p>This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased.</p>



Ogalas ULC

CE

Unit 4 Parkway House Ballymount Drive Dublin

D12 ECR9