
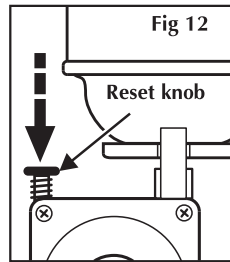


5./ HOW TO RESET THE SAFETY DEVICE

When using fuel cartridge with high pressure (normally refilled cartridge) safety device will automatically close, refuse fuel flow into the governor --> no flame although ignite.

- Follow article No. 4 to take the cartridge out of appliance.
- Turn the ignition knob to ON position to release fuel out of governor (Fig. 11).
- Press the reset knob (red color) until you hear a cloud click to set the governor on default setting (Fig. 12).
- Replace a new fuel cartridge with acceptable pressure and follow article No. 2 to install.

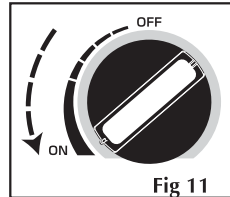


Attention: Do not change the frame of governor & other components of appliance in any situation.

6./ TROUBLE SHOOTING

If fail to ignite the burner after 4-5 attempts --> follow below steps:

- A) Check the fuel cartridge: If it is empty --> replace a new cartridge.
- B) If there is fuel in cartridge, a common problem is the pressure in cartridge is too high (especially with refilled cartridge), safety shut-off device closed automatically, refuse fuel into governor, see article No.5
- C) If there is fuel in cartridge & the pressure is acceptable (brand-new cartridge) --> Check the position of spark plug: the gap between the plug and the head burner is 3-->4 mm (Fig. 13)
- D) If still cannot ignite, contact the supplier agent, store.

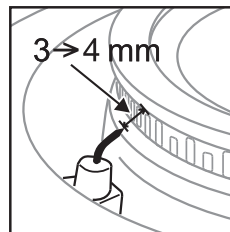

Do not change the frame of governor in any situation.


MADE IN CHINA
OGALAS ULC - D12 ECR9



INSTRUCTION MANUAL



CAMPING GAS STOVE

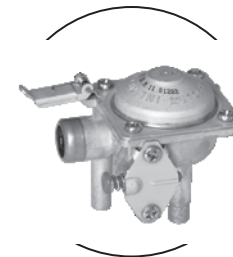

(*) High safety function
with direct gas cut-off device

Use new standard governor as Japan technology,
automatically cut-off gas inside , Anti Explosion Safety
Device

Materials & Accessories are used by prime grade as
export standard

JIA standard burner head system with the optimal
capacity , low CO concentration (< 800PPM)

PLU 168001

Before operating this unit, please read these instructions completely.

PLU 168001

1./ IMPORTANT CAUTIONS

FOR SAFE & EFFICIENT USE, READ THE INSTRUCTION MANUAL CAREFULLY AND FOLLOW MANUFACTURER'S INSTRUCTIONS.

- Use only butane gas cartridge with low pressure (3-5 kg/cm²), do not use refilled, old, rusty or deformed fuel cartridge.
- Do not use fuel cartridge that expose in sun light or store at temperature above 40°C.
- Do not use appliance in windy place (Fig. 1)
- Place appliance on a stable and flat surface (Fig. 2)
- Do not use oversize pot with diameter of bottom > 24cm (Fig. 3)

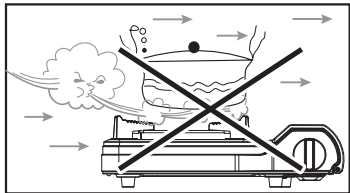


Fig. 1

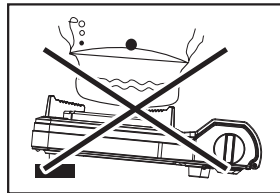


Fig. 2

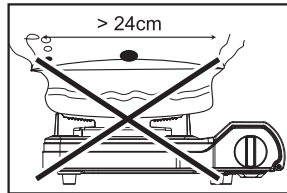


Fig. 3

2./ INSTALLING THE FUEL CARTRIDGE

- Make sure the cartridge is not empty and follow article No. 3 to use the appropriate fuel cartridge.
- Open the bomb cover, make sure the ignition knob in OFF position (Fig. 4)
- Put the fuel cartridge in the right position: locate the notch collar on top of fuel cartridge, align the notch collar with the fuel cartridge index arm (Fig. 5A - 5B)
- Press down the lock lever knob until it is in the LOCK position (Fig. 6) and close the bomb cover.
- When the fuel cartridge in right position, the appliance is ready to ignite.

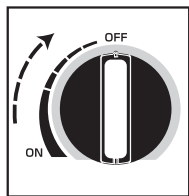


Fig. 4

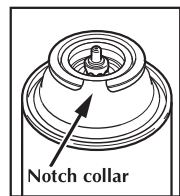


Fig. 5A

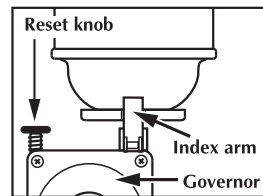


Fig. 5B

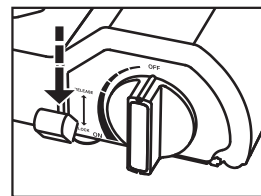


Fig. 6

Attention: while installing the fuel cartridge, if you hear a hissing sound, take the cartridge out and reinstall. Do not ignite the appliance when the cartridge is not in the right position.

3./ HOW TO IGNITE AND ADJUST THE FLAME

- Turn the ignition knob to IGNITE position (Fig. 7) until you hear a “click”, flame will ignite automatically.
- If there is no flame, turn the ignition knob to OFF position and repeat the ignition procedure.
- If there is no flame after 4-5 attempts, follow article No. 6.
- Turn the ignition knob from High to Low to adjust the flame from strong to small (Fig. 8).

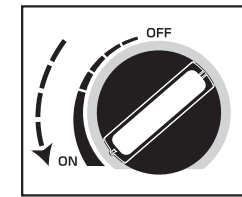


Fig. 7

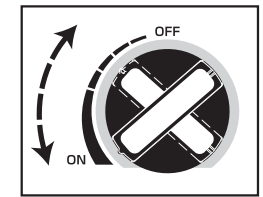


Fig. 8

Attention: After the first time ignition, the flame may not spread heat burner, after 10-15 seconds use or put the pot on the appliance, the flame is adjusted automatically and steady burn.

4./ HOW TO TURN OFF THE FLAME & TAKE THE CARTRIDGE OUT

- Turn the ignition knob to OFF position (Fig. 9).
- Lift up the lock lever knob to RELEASE position to disengage the fuel cartridge from governor (Fig. 10).
- Open the bomb cover and remove the cartridge out of the appliance.

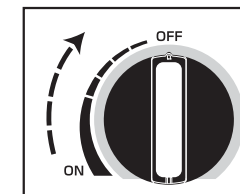


Fig 9

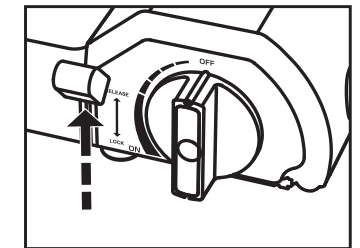


Fig 10

Attention:

- When interrupting use, turn the ignition knob to OFF position and switch lever knob to RELEASE position to extinguish the flame and disengage the cartridge out of the governor.
- After use, take the fuel cartridge out of the appliance.