

22" - 55" TILTING
TV BRACKET
ASSEMBLY INSTRUCTIONS




PLU 073628

1. Technical parameter

Size of flat panel TV :	22" ~ 55"	Maximum load :	75kg
Pitching angle :	0° ~ -10°	Distance from wall :	50mm
Adjustable angle :	swing angle 0°		

2. Part List


Please check the parts in the package against the following list.

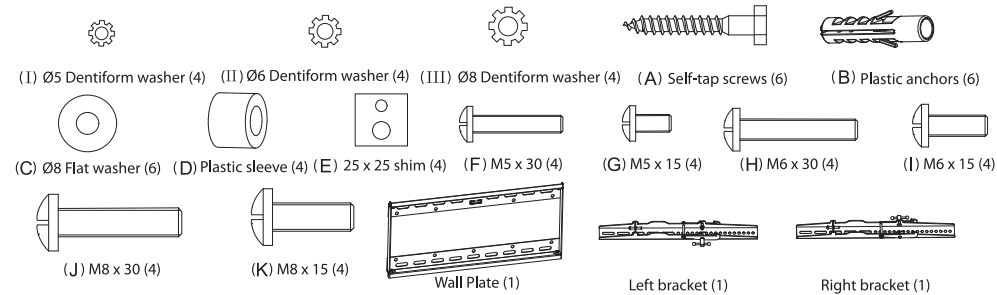

3. Installation and operation instructions


Note: Please read the instructions carefully before installation!

STEP 1 - a

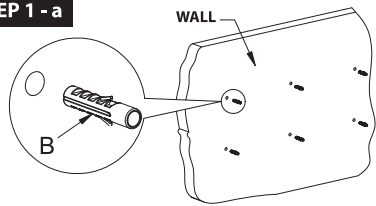


Use the wall plate as a template to mark 6 drill holes on the wall. Drill 4 holes on the top of the plate and 2 holes on the bottom. Use a spirit level to ensure the holes are level and in the required position for your TV. Drill holes of 10mm diameter and 50mm depth and firmly insert 6 plastic anchors.

STEP 2 - a

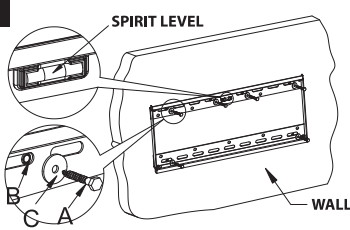


Install the wall plate. Put the wall plate on the wall, and then screw six self-tap screws into each plastic concrete anchor through metal washer to fix the lag bolt, the plastic concrete anchor and the wall.

STEP 1 - b

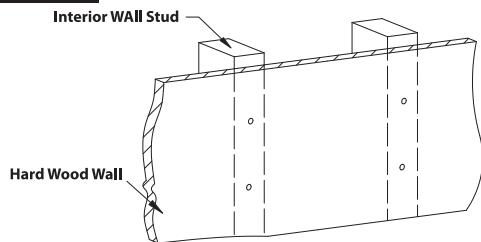


Drill mounting holes for wall plate. Using an electronic stud finder, identify and mark the locations of 2 interior wall studs. Using the wall plate as a template, mark and then drill 4 holes with 3/16" diameter drill bit. Note: We do not recommend installation in hollow core concrete blocks, only solid blocks using concrete anchors.

STEP 2 - b

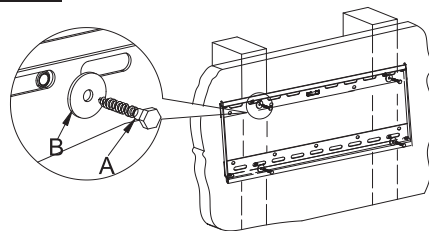


Install the wall plate. Put the wall plate on the wall, and then screw four self-tap screws into each hole through metal washer to fix the wall plate on the wall tightly.

STEP 3

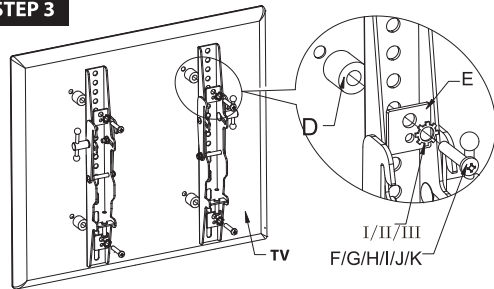


Attach the left and right bracket to the TV. Each bracket should be attached with two screws matching the thread holes of your TV. The screws should be equally spaced from the top and bottom of the TV and as central as possible. The tilt adjustment knobs should face outwards.

STEP 4

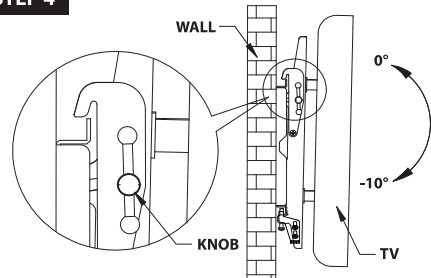

Loosen the tilt adjustment knobs. Carefully hang the TV brackets onto the wall plate. Do not loosen your grip until you are sure the bracket is securely connected. You may need the assistance of another person to safely attach the TV. Adjust the TV to the desired position and re-tighten the adjustment knob.

STEP 5

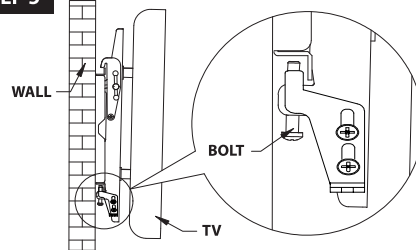

There is a security bolt at the bottom of each bracket. Fully loosen each bolt prior to installation. Once the position of the TV is fixed fully tighten the bolts to secure the TV brackets to the wall plate.

Notes:

1. Choose the correct place to install the TV bracket. The bracket must be installed on a solid concrete wall that can support 150kgs. If in doubt consult a qualified professional.
2. Check the product regularly to ensure it works normally, safely and securely. Check all screws / bolts are secure.
3. Dust using a soft dry cloth.
4. Not for outdoor or bathroom use.
5. Never position directly above a cot or bed.

PLEASE RETAIN FOR FUTURE REFERENCE.

BATCH NO.: 00087076
OGALAS ULC
FIRST FLOOR, QUADRANT HOUSE,
M50 BUSINESS PARK,
BALLYMOUNT AVENUE,
DUBLIN 12, D12 VP28
MADE IN CHINA

