

# HEATED WEARABLE BLANKET

YOUR SAFETY &  
INSTRUCTION MANUAL  
**PLEASE READ CAREFULLY**


MODEL **C81149**  
Applicable to All Variants

### Need help?

For advice, spares and returns.  
**Call: +44 (0)333 220 6060**  
8.30am to 6.00pm Monday-Friday  
Visit: [www.carmen-products.co.uk](http://www.carmen-products.co.uk)



## TECHNICAL DATA

Model:	C81149 Applicable to All Variants
Adapter:	
Input:	100-240V~50/60Hz 0.8A
Output:	12V  2.0A
Rated Product Power:	24W

---

## WARRANTY

This product is guaranteed for 12 months from the date of original purchase. If any defect arises due to faulty materials of workmanship, the faulty products must be returned to the place of purchase. Refund or replacement is at the discretion of the retailer.

The following conditions apply:

- The product must be returned to the retailer with proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- RK Wholesale LTD has limited liability for incidental or consequential loss or damage.
- This guarantee is only valid in the UK and Eire.

**An extended warranty is available for this appliance.**

**See back page for details.**

## ELECTRICAL SAFETY

### (Power adapters only)

Never open the power adapter, you risk getting an electric shock.

Only use the power adapter that is supplied with your product.

You must always connect the power adapter to the product before connecting to the mains power supply.

The power adapter must be used indoors only, and must not be subjected to damp conditions.

The power adapter does not have any user serviceable parts.

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug – disconnect it from the mains – and then cut it off of the mains lead and immediately dispose of it in a safe manner. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

### **WARNING:**

Do not attempt to open any part of the power adaptor or plug.

## PRODUCT SAFETY

When using **any** electrical appliance, basic safety precautions should always be followed including the following:

- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- DO NOT immerse cords, plugs, controller or any part of the appliance in water or any other liquid.
- DO NOT leave the appliance unattended while it is plugged in or operating. DO NOT leave the appliance operating while away from your home. Check on the appliance regularly during the heating process.
- Close supervision is necessary when any appliance is used by or near children or pets.
- Heated blankets are intended for human use only. DO NOT use on animals and pets.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. An adult should always supervise the use of the blanket when a child is involved. The adult should control the heat setting.
- Children should not play with the appliance.
- Cleaning and user maintenance should not be made by children without supervision.
- Switch off at the wall socket then remove the plug from the socket when not in use or before cleaning.
- If the supply cord or appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer or its service agent or a similarly qualified person. Check the appliance regularly for signs of wear and tear.
- DO NOT let the cord come into contact with any hot surfaces.
- DO NOT place on or near heat sources.

- Keep the power cord free from knots and kinks.
- The use of accessory attachments is not recommended by the appliance manufacturer, apart from those supplied with this product.
- DO NOT use any controller other than the one supplied with the blanket.
- DO NOT pull the plug out by the cord as this may damage the plug and/or the cable.
- DO NOT pull, lift or carry the appliance by the power cord.
- DO NOT use this product for anything other than its intended use.
- This appliance is for household use only.
- DO NOT insert pins or sharp objects into the blanket or controller.
- DO NOT expose the appliance to rain or moisture and DO NOT operate the appliance outdoors or with wet hands.
- DO NOT place objects on the blanket whilst in operation.
- DO NOT cover the controller.
- Keep the controller, cord and power socket outside of the bedding/blankets/throws etc. Ensure that the controller and supply cord cannot be trapped in any bed or bedding.
- DO NOT attempt to repair, disassemble or modify the appliance. The unit has no user-serviceable parts contained within.
- In case of technical problems, switch off the product and DO NOT attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above mentions precautions and instructions, could affect the safe operation of this product.
- Your appliance must never be switched on through an external timer or any kind of separate remote control system.
- DO NOT use the unit with an extension lead.

- DO NOT use the product near baths, basins or other vessels containing water or other liquids, or when standing in or on damp or wet surfaces.
- In the event where the appliance is dropped into the water, turn off the power at the power outlet and remove the plug immediately.
- DO NOT REACH INTO THE WATER TO RETRIEVE IT. It is important to note that the appliance will have to be inspected by a qualified technician before using it again.
- DO NOT use the blanket if it is damp or wet.
- DO NOT use this unit as a substitute for medical attention.
- The blanket is not intended for medical use or in hospitals.
- This electric blanket must NOT be used by infants, children or other persons sensitive to heat or by vulnerable people who may not be able to react to overheating (e.g. after taking pain relieving medication, after drinking alcohol) or with

medical illness such as high blood pressure, diabetes, high skin sensitivity, persons with skin changes related to illness or persons with scarred skin where the heat is applied. Seek medical advice before use.

- **WARNING:** Excessive exposure to heat can lead to heat stroke or burns.
- Discontinue use immediately if redness develops on the skin, if you experience over-heating or discomfort.
- This electric blanket is fitted with a safety system which provides protection against overheating across the entire surface of the electric blanket. The electric blanket will automatically switch off in the event of a fault.
- DO NOT use a hot water bottle, heating pad or any other heat generating product at the same time as using the blanket.



- DO NOT use the electric blanket on or under a water bed, mechanically adjustable beds, bunk beds or sofa beds.
- DO NOT tuck the blanket under the mattress.
- Ensure that the heat controller is securely inserted into the electric blanket.
- In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from Customer Services.

## WHAT'S IN THE BOX

Instruction Manual

Heated Wearable Blanket

Remote Control and Cord

1. Blanket
2. Front Pocket
3. Temperature Controller and Power Cord
4. Heat Selection Button and Indicators
5. Power ON/OFF Button and Indicator



---

### BEFORE YOUR FIRST USE:

1. Remove your appliance from the packaging.
2. Check that there is no damage to the cord or any visible damage to the body.
3. Read the Instruction Manual and retain for future reference.
4. Plug the appliance into the mains
5. Your appliance is now ready for normal use.

**Dispose of the packaging in a responsible manner.**



## USING YOUR APPLIANCE

### Turning the Appliance ON/ OFF:

1. Attach the temperature controller to the connector in the front pocket.
2. Press the Power On/Off button to turn on the heating function. The red LED indicator on the body of the controller will light up to show the heating function has been activated.
3. Once the heating function is turned on, press the Temperature Selection button to cycle between the 3 available heat settings. The corresponding indicator on the body of the controller will light up in the corresponding colour to show each setting has been selected: green for Low, yellow for Medium and red for High.
4. Press the Power button again while the heating function is active to turn it off.

**WARNING!** Excessive exposure to heat can lead to burns.

**Note:** Unplug the heated wearable blanket from the mains socket when not in use

### Additional Features:

Use the front pocket to keep your hands warm or for carrying items.

The long sleeves enable you to keep warm whilst keeping your hands free.

## CLEANING AND CARE

1. Unplug the product from the mains before attempting to clean it.
2. Spot clean the electric blanket with a damp cloth and a little mild detergent. DO NOT machine wash the electric blanket unless absolutely necessary. Place in a wash bag and DO NOT exceed 3 machine washes, at a maximum temperature of 30°C, over the life span of the electric blanket.
3. Once cleaned, store in a cool, dry place, out of the reach of children.

**Note:** ALWAYS detach the temperature controller and power cord from the blanket before attempting to wash it.

### Storage

- Ensure that the heated wearable blanket is fully cooled down before storing.
- Store in its original packaging in a safe, dry, cool, place out of reach of children.
- DO NOT wrap the cord around the heated wearable blanket.

## NOTES

### WARNING:

DO NOT IMMERSE ANY ELECTRICAL PART OF THE APPLIANCE IN WATER SUCH AS MOTOR UNITS OR PLUGS.

PLEASE SEE CLEANING SECTION FOR FURTHER INSTRUCTIONS.



### DISPOSAL OF THE UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk) or [www.recyclenow.co.uk](http://www.recyclenow.co.uk) for access to information about the recycling of electrical items.

Please visit [www.weeeireland.ie](http://www.weeeireland.ie) for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill.

Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.

## NOTES

**We hope you enjoy your appliance for many years.**

As a thank you for purchasing one of our fantastic products,  
we are offering you an extra 2 year peace of mind.

\*To receive your extra guarantee period, register your appliance online  
within 28 days of purchase by visiting:

**[www.carmen-products.co.uk](http://www.carmen-products.co.uk)**

Make sure to retain your original receipt.



## **Need help?**

**For advice, spares and returns.**

**Call: +44 (0)333 220 6060**

**8.30am to 6.00pm Monday-Friday**

**Visit: [www.carmen-products.co.uk](http://www.carmen-products.co.uk)**

**Distributed throughout the UK by RK Wholesale LTD**

# CARMEN®

STYLE AND WELL-BEING SINCE 1965