

37" - 70" FULL MOTION
TV BRACKET

ASSEMBLY INSTRUCTIONS

PLU 135855




1. Technical parameter

Size of flat panel TV: 37"~70"	Maximum load : 45kg	Fits up to: 600x400
Adjustable angle : swing angle $\pm 20^{\circ}$	Distance from wall : 75-460mm	

2. Part List

Please check the parts in the package against the following list.

IMPORTANT: We are not responsible for any personal injury or product damage due to mishandling, incorrect mounting, incorrect assembly or incorrect use of this product. NOTE: The supplied wall mounting hardware is not for use on steel stud walls or cold cinder block walls. If you are uncertain what material your wall is constructed of or any question regarding the proper installation of this wall mount, contact a qualified contractor. If the hardware required is not included, please contact your local hardware store. CAUTION: This LCD/Plasma wall mount is intended for use with a television that does not exceed the maximum weight capacity designated. Using this mount with products heavier than the maximum weight indicated may result in instability causing possible injury.

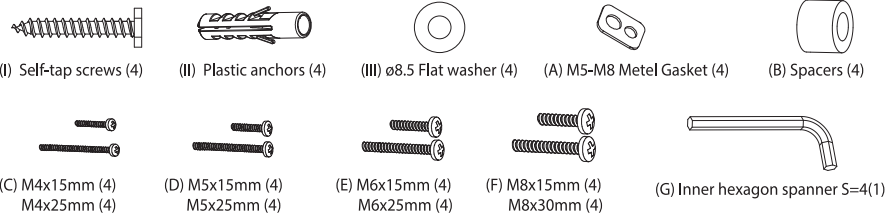

3. Instruction of installation and operation

STEP 1

Mount wall plate on wall (Brick/ Concrete/ Stone)
Using the wall plates as a template and using a spirit level to ensure the wall plate is level (Installed at Wall plate). Mark 4 locations for the Lag Bolts. Pre-drill these holes with a $\phi 10$ mm bit to at least 50 mm deep in concrete brick and stone wall. Wall anchors (II) are inserted into four holes on the wall. Next mount the wall plate to the wall using the lag bolt (I) and fat washer (III).

Pilot Hole Size	Pilot Drill Depth
3/8" inch	2.36" inch
10 mm	60 mm

For Wood studs:
Once wood studs should be used for installation. Using a stud finder to locate the one wood stud. Use the wall plate as a template and use spirit level (Installed at Wall plate) to ensure the wall plate is level. Mark the 4 location for the bolt. Pre-drill these holes with a 5mm bit to a least 60 mm deep. Next mount the wall plate to the studs using the lag bolt (I) and flat washer (III).

Pilot Hole Size	Pilot Drill Depth
7/32" inch	2.36" inch
5 mm	60 mm

STEP 2

Refer to your TV manual to determine the diameter of the screw, spacer and washer necessary for the size, height and position of the holes on your TV. Attach the Adapters to the back of the TV with the hooks facing down. Use selected components as below to attach TV and once aligned tightly secure the bolts. Install the spacers (B) between the TV and the Adapters. And then use screw (C/D/E/F), Metal Gasket (A) to attach Adapters and TV together.

STEP 3

Hook the TV with Adapters onto the top of the wall plate first. Then slowly lower the TV until it fits the wall plate completely. Finally, tighten fasten screws on the left and right side of safety bolts in the wall plate.

STEP 4

Adjusting the TV display.
The TV can be adjusted to desired position using the tilt actions.

Notes:

1. Choose the correct place to install the TV bracket. The bracket must be installed on a solid concrete wall that can support 100kgs. If in doubt consult a qualified professional.
2. Check the product regularly to ensure it works normally, safely and securely. Check all screws / bolts are secure.
3. Dust using a soft dry cloth.
4. Not for outdoor or bathroom use.
5. Never position directly above a cot or bed.

PLEASE RETAIN FOR FUTURE REFERENCE.

BATCH NO.: 00087076
OGALAS ULC
FIRST FLOOR, QUADRANT HOUSE,
M50 BUSINESS PARK,
BALLYMOUNT AVENUE,
DUBLIN 12, D12 VP28
MADE IN CHINA