 


BIGHORN[®]

 
BIGHORN LOUISIANA Wood Burning Firepit

Product size assembled:
64x31.5x64cm


PLU:154740
Model:SRLF250-B

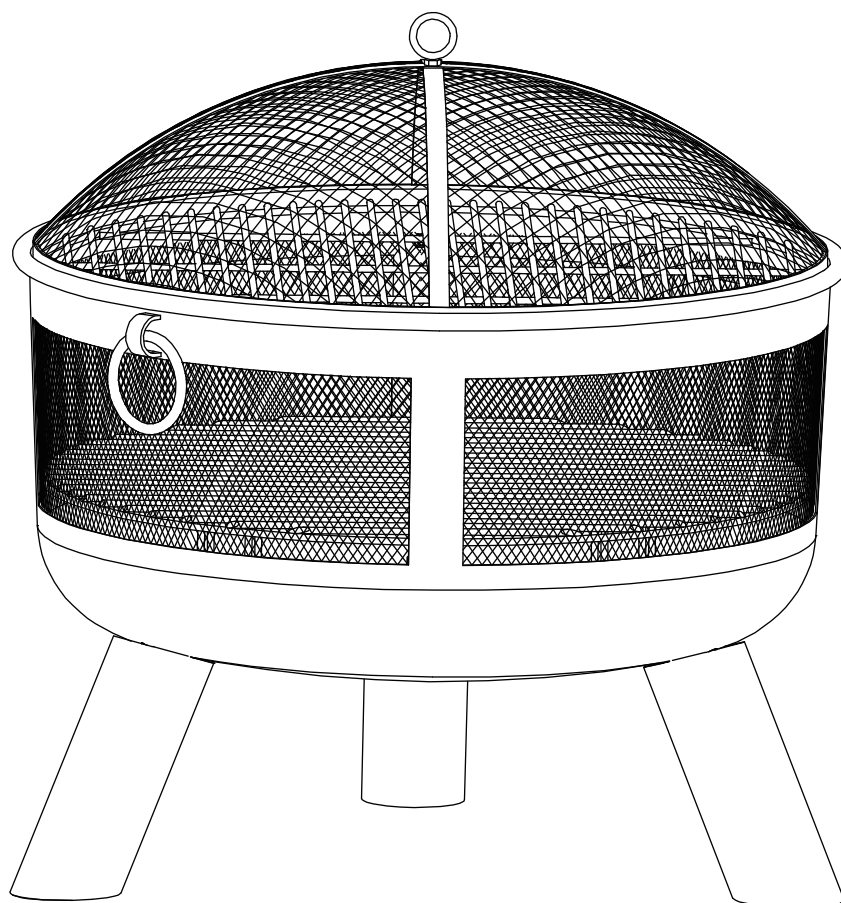

PACKAGE CONTENTS

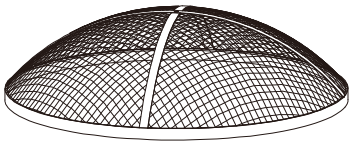


[01] x 1

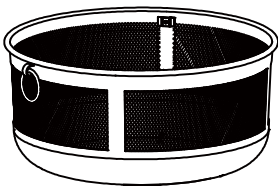 


[02] x 1



 
[03] x 3



[04] x 3

 


[05] x 1

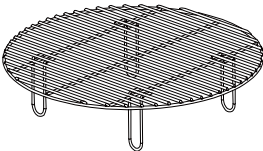 


[06] x 1



 [07] x 2




[08] x 1

 


[A] x 1

 HARDWARE CONTENTS (shown actual size)



[B] x 1
(M6)

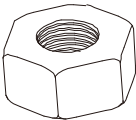 


[C] x 6
(M8)



[D] x 6
(Ø18x Ø9mm)

 PACKAGE CONTENTS

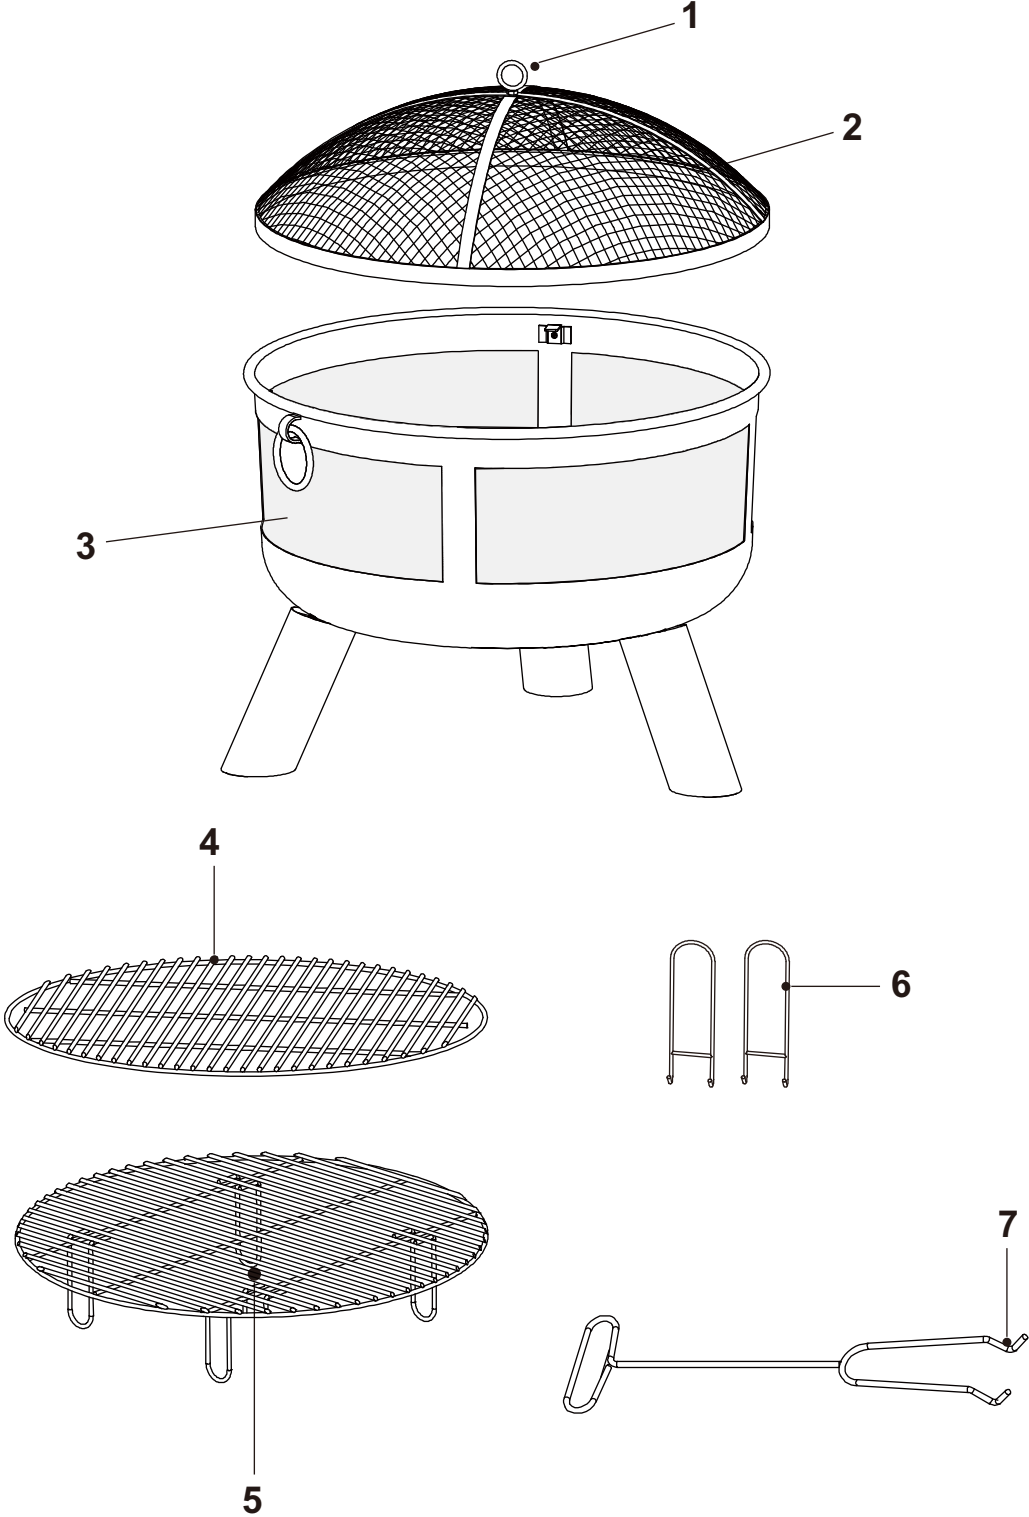



SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.



WARNING:

- FOR OUTDOOR USE ONLY.
- This appliance should be kept away from artificial grass, decking tiles, garden furniture, wooden fences or any flammable product.
- Do not use the fire pit indoors. Carbon monoxide fumes, due to lack of ventilation, can cause death.
- Do not use gasoline or kerosene to start fires in the fire pit. Keep all flammable liquids away from the fire pit.
- This unit is designed to burn charcoal and untreated wood only. Fill the bottom of the bowl with sand until the surface of sand is 0.5cm below the grid.
- Do not use under or on combustible structures/surfaces including wooden decks.
- Use protective gloves and long-handled tools with this fire pit.
- Dispose of packaging materials properly.
- Keep children away from hot fire pit.
- Fire pit remains very hot for a period of time after using.
- Be sure fire pit is cool before attempting to move it.
- Do not place the PVC cover too close to fire pit when it's burning.
- Do not let hot or burning debris from the fire get inside the PVC cover.
- Do not burn more than 0.7kg of charcoal or 1.4kgs of untreated wood at one time.
- The handles of the tools may become hot during and after use. The fire pit should be placed no closer than 61cm from walls during use.
- Don't touch the ash tray handle during use until the fire is completely out and cooled down.

CAUTION: Assemble the fire pit on a non-abrasive surface.

PREPARATION




Before assembling product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 15 minutes





Tools required for assembly (not included): Phillips screwdriver.

Carbon Monoxide Poisoning Hazard	Do Not Use in Motor Homes	Do Not Use Indoors	Do Not Use in Tents	Use in Open Spaces

   01

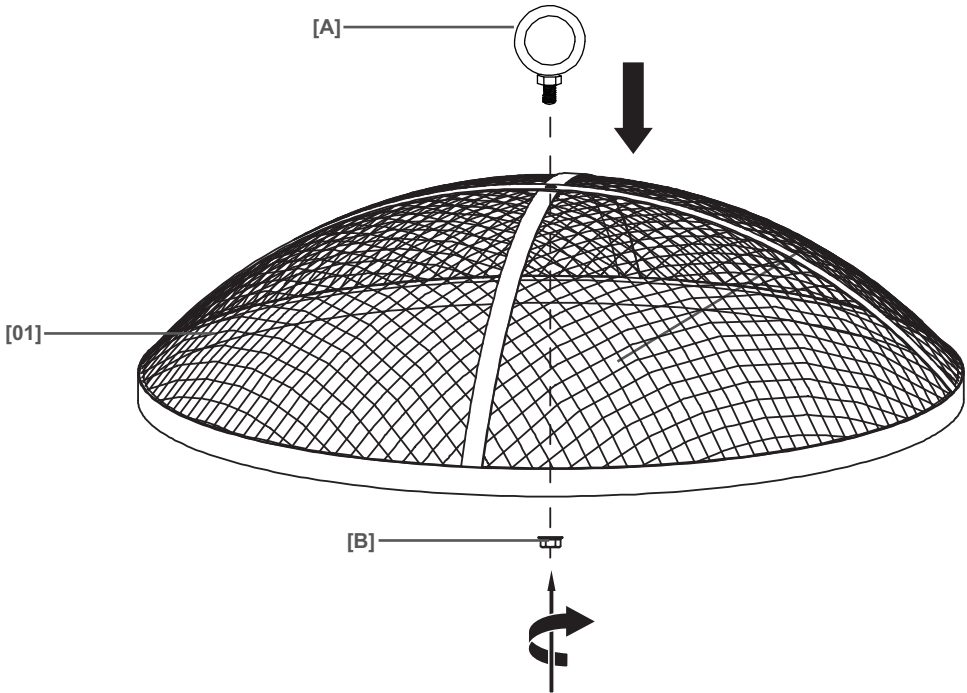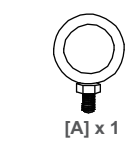

02

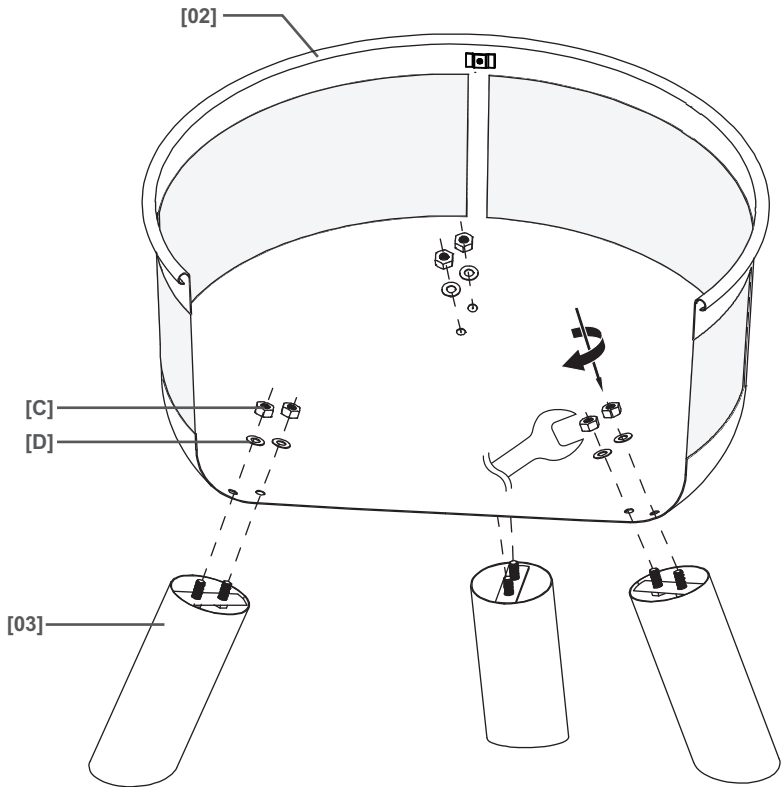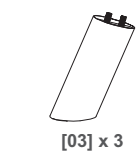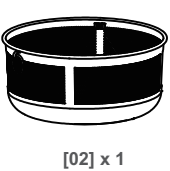    


ASSEMBLY INSTRUCTIONS


03



 
[06] x 1

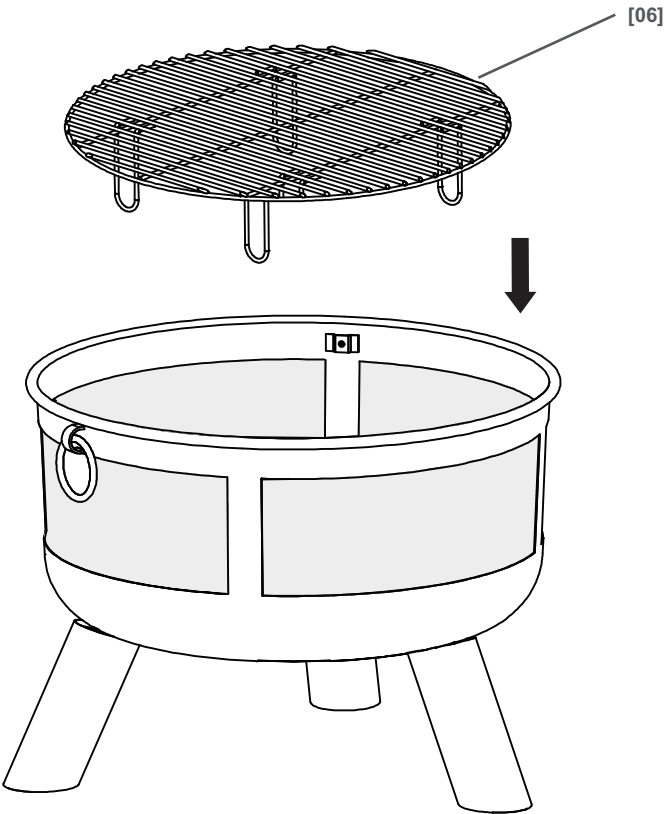

04

 

[04] x 3

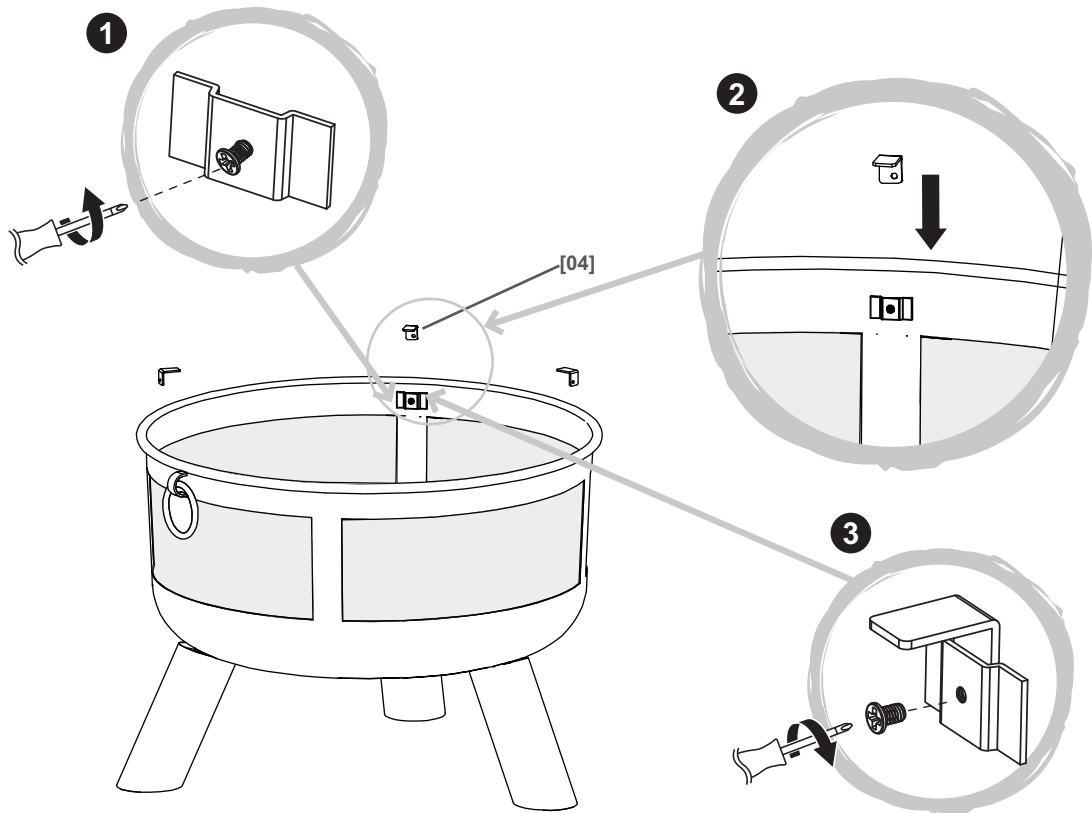 


ASSEMBLY INSTRUCTIONS


05



 
[06] x 1

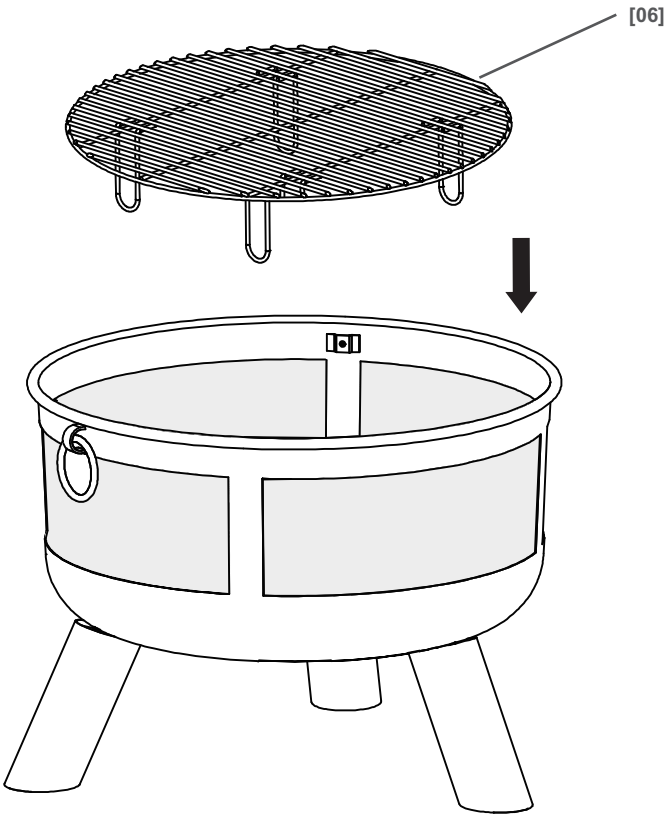

06

 

[04] x 3

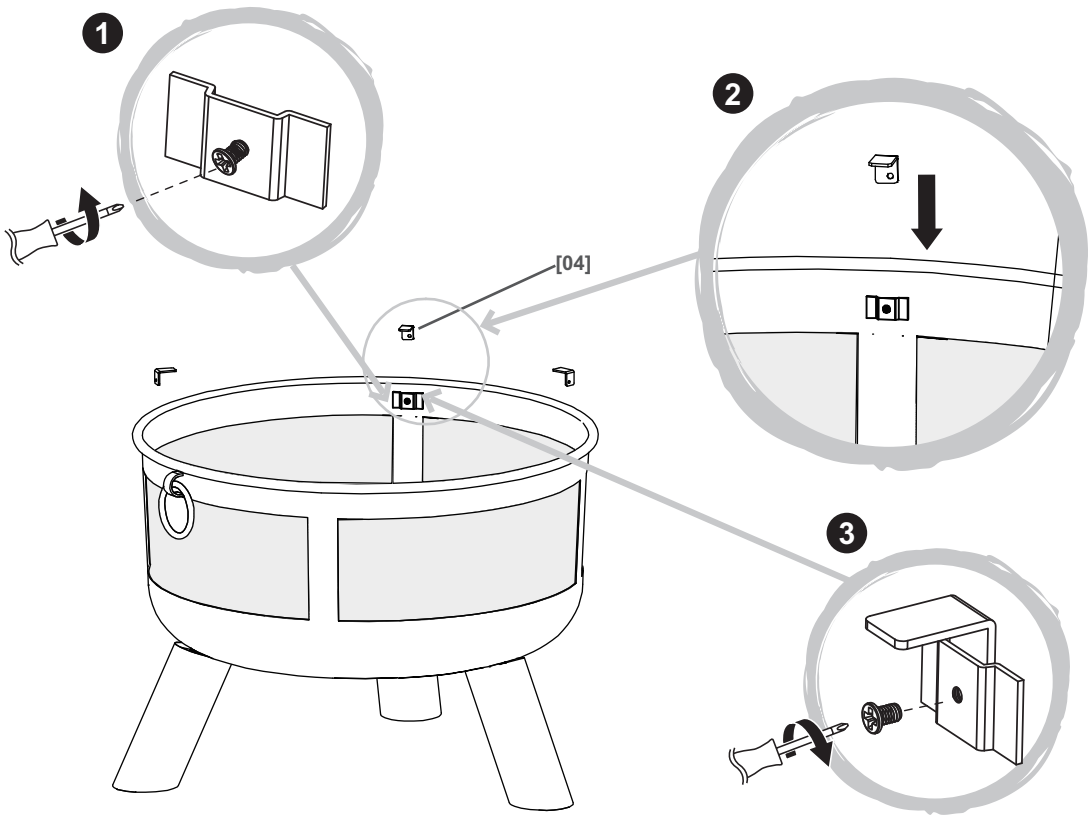 


07



[05] x 1




 [07] x 2

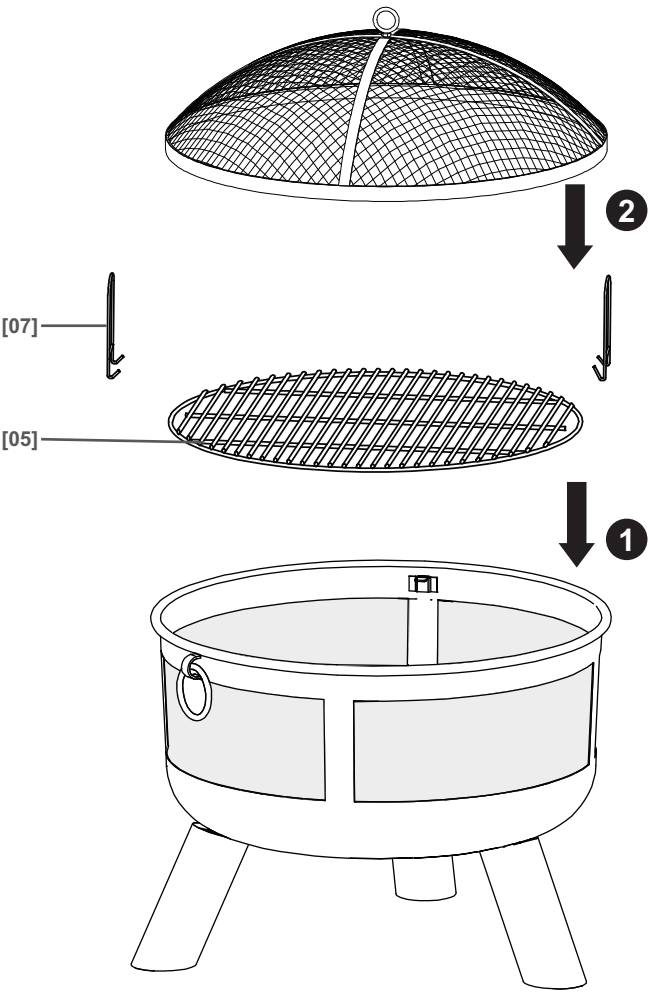


INSTRUCTIONS

 
01

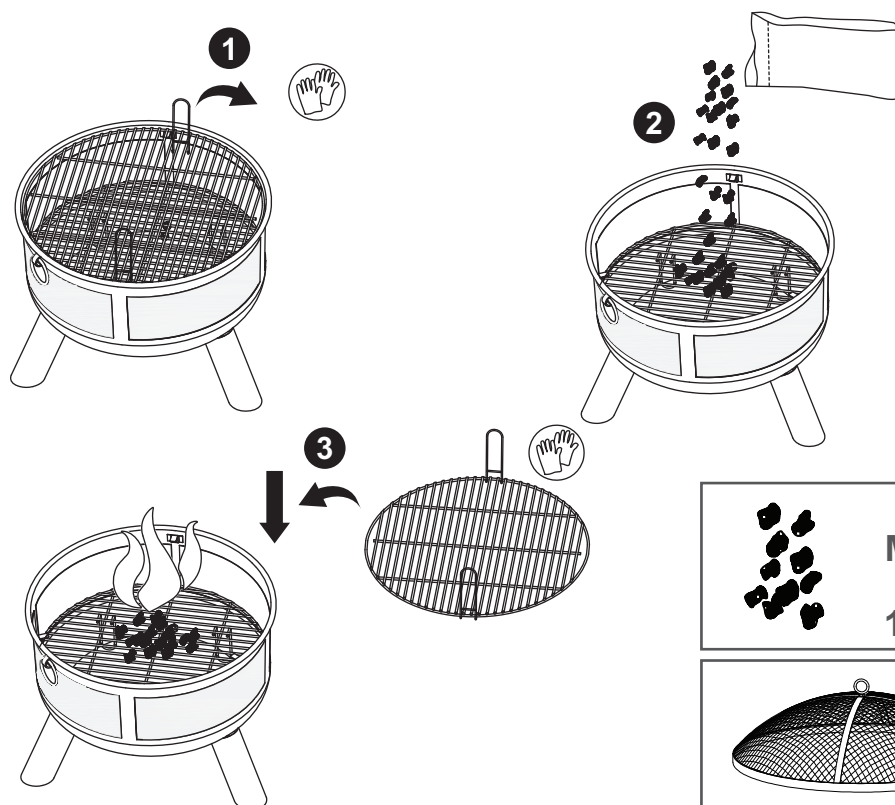


Max. /
Maks. /
макс.
1.25 kg

 

02

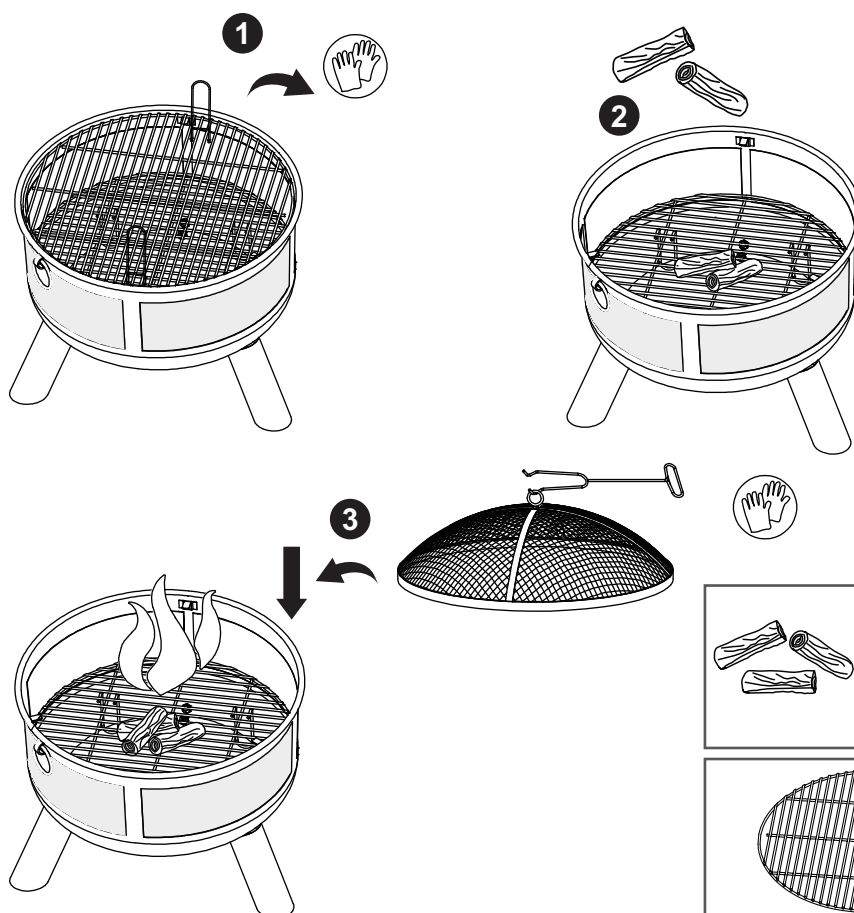 

Max. /
Maks. /
макс.
1.25 kg

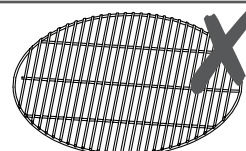 

CARE AND MAINTENANCE

Inspecting

Inspect this fire pit on a regular basis to ensure product safety and longer product life.

DO NOT attempt to inspect this outdoor fire pit until the fire is COMPLETELY out and cooled down.

- Check handles to make sure they are secure.
- Check components for any signs of damage or rust.
- If any component is damaged, do not operate until repairs are made.

Cleaning

Clean this outdoor fire pit on a regular basis to promote safer use and longer product life.

Note: After repeated use, the finish may discolor slightly.

DO NOT attempt to clean this outdoor fire pit until the fire is COMPLETELY out and cooled down.

DO NOT use oven cleaner or abrasive cleaners as they will damage this product.

DO NOT clean any part of this outdoor fire pit in a self-cleaning oven as it may damage this finish.

- Wipe exterior surfaces with a mild dishwashing detergent or baking soda.
- For stubborn surfaces, use a citrus-based degreaser and a nylon scrubbing brush.
- Rinse clean with water.
- Remove built-up creosote from components with a chimney cleaning product.

Storage

DO NOT move or store this outdoor fire pit until the fire is COMPLETELY out and cooled down.

- Once the fire is out, coals are cold and outdoor fire pit is cool to touch, remove ashes and properly dispose.
- Cover outdoor fire pit with the PVC cover.
- Store assembled in a location away from children and pets.

Note: If you do not use a cover, store this outdoor fire pit in a dry location to maximize product life.