

# ASSAGING EATED VIBRATION ASSAGE WAIST WRAP



## Owner's Manual

Model Number 164215

1 2 3

## INSTRUCTIONS FOR USE

1. Use a rechargeable battery pack that connects via the provided USB cable. Before first use, fully charge the battery. For subsequent use, connect the power bank to the USB cable located in the wrap's pocket.
2. Wear the wrap. Place the wrap around your waist or lower back, positioning the heating elements over the area you want to treat. Secure the wrap with the velcro straps for a comfortable, snug fit, but do not over-tighten it.
3. Power on. Press and hold the power button for a few seconds to turn on the device.
4. Adjust heat settings. Press the heat button to cycle through the 3 temperature levels. The settings (Low, Medium, and High) are indicated by different coloured lights (green, blue, and red).
5. Adjust massage settings. Press the vibration or massage button to cycle through the 3 massage modes and intensity levels.
6. Combine functions. You can often use the heat and vibration functions simultaneously or separately.
7. Power off. To manually turn off the wrap, press and hold the power button.
8. Store the wrap. Once the device has completely cooled, you can store it safely by laying it flat or folding it gently.

## IMPORTANT SAFETY INSTRUCTIONS

### PLEASE READ ALL INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE REFERENCE.

- This appliance has been designed and manufactured to meet British safety standards, but like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- This appliance (including its accessories) is not a toy. Keep away from children and pets. Children should be supervised to ensure they do not play with the appliance.
- Don't continue to operate the appliance if you are ever in doubt about it working normally, or if it is damaged in any way. Switch it off, remove the appliance and any of its accessories from the power supply and consult your dealer.
- This appliance contains no user serviceable parts. If the appliance and any of its accessories are malfunctioning or it has been dropped or damaged, only a qualified person should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance away from water, and any other liquid.
- Do not operate the appliance if it has been exposed to water, moisture, or any other liquid, to prevent against electric shock, explosion and/or injury to yourself and damage to the appliance.
- Do not operate the appliance with wet hands.

Do not use the appliance or its accessories for anything other than its intended use.

Do not use the appliance in excess of its output rating. Overloading outputs above their rating may result in a risk of fire or injury to persons

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not put any foreign objects into any of the openings.

Do not attempt to short-circuit the appliance.

Do not stack up with other electrical or electronic appliances to avoid overheating.

This appliance is intended domestic use only. It should not be used for commercial purposes.

It is not intended to provide treatment or to alleviate any physiological condition. This is a non-professional appliance, designed for personal use and intended to provide a soothing massage to worn muscles. Do not use as a substitute for medical attention.

Do not drop or roughly handle your appliance. It is robust but not indestructible.

Do not continue to operate your appliance if you are ever in doubt about it working normally, or if it is damaged in any way. Switch it off, withdraw from the power supply and discontinue use.

Check the condition of the appliance and its cables and for damage before each use. If damaged Do not use!

Do not pull, twist, or strain any included cables.

There are no user serviceable parts in your appliance. When servicing, refer to qualified service personnel.

DO NOT machine wash.

DO NOT hand wash. To clean fabric part, wipe with well-wrung cloth only.

## PRODUCT OVERVIEW



3 vibration levels

3 heat levels

Heat and Vibration functions can be activated separately or simultaneously by following the below instructions:

VIBRATION FUNCTION 		3 LEVELS
Press and hold to turn on	Red: Strong and continued vibrations	
2nd press	Blue: Medium and long Intermittent vibrations	
3rd press	Green: Low and short intermittent vibrations	
Press and hold to turn off	No light: Off	

HEAT FUNCTION 		3 LEVELS
Press and hold to turn on	Red: High heat	
2nd press	Blue: Medium heat	
3rd press	Green: Low heat	
Press and hold to turn off	No light: Off	

## CLEANING & CARE

### Before attempting any cleaning ensure that your neck wrap is turned off and disconnected from the mains power supply.

- DO NOT machine wash or handwash. DO NOT immerse the wrap in water or any other liquid for cleaning or for any other reason.
- To clean the fabric, wipe with a well-wrung damp cloth and allow to dry thoroughly before reusing.
- Wipe cables with a soft, dry, static resistant cloth. Do not dampen the cloth or expose any electrical components to liquid.
- Use of strong chemicals, detergents or abrasive cleaners are not recommended as may damage the fabric.
- Store in a cool, dry place between uses.

## TECHNICAL SPECIFICATION

Model Number: 164215

Power: 7W

Rated Voltage: DC 5V 1.4A



### Information on Waste Disposal for Consumers of Electrical & Electronic Equipment

This mark on a product and/or accompanying documents indicates that when it is to be disposed of, it must be treated as Waste Electrical & Electronic Equipment (WEEE).

Any WEEE marked waste products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used.

For proper treatment, recovery and recycling; please take all WEEE marked waste to your Local Authority Civic waste site, where it will be accepted free of charge.

If all consumers dispose of Waste Electrical & Electronic Equipment correctly, they will be helping to save valuable resources and preventing any potential negative effects upon human health and the environment, of any hazardous materials that the waste may contain.

MADE IN CHINA

OGALAS ULC  
UNIT 4 PARKWAY HOUSE  
BALLYMOUNT DRIVE  
DUBLIN  
D12 ECR9

