


Safety Instructions


When using electrical appliances, basic safety precautions should always be followed. Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply. Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should be supervised to ensure that they do not play with the appliance. Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, do not use. Only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance out of the reach of children when it is switched on or cooling down. Do not leave the appliance unattended whilst connected to the mains power supply. Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand. Do not pull or carry the appliance by its power supply cord. Do not use the appliance for anything other than its intended use. Do not use any parts/accessories other than those supplied with this appliance. Do not direct steam at people or animals or towards equipment containing electrical components, such as the interior of ovens.

Never add aromatic, alcoholic or detergent products into the appliance, as this may damage the appliance or make it unsafe for use. Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories. Always unplug the appliance after use and allow to cool fully before any cleaning or maintenance. Use of an extension cord with the appliance is not recommended. This appliance must only be used and rested on a stable surface. This appliance should not be operated by means of an external timer or separate remote control system. This appliance is intended for domestic use only. It should not be used for commercial purposes.

 **Caution:** The appliance emits very hot steam; always exercise extreme caution during use.

 Hot surface - do not touch the hot section or heating components of the appliance.

 **Warning:** Danger of scalding. Keep the appliance away from flammable materials.

Care and Maintenance

STEP 1: Drain the remaining water from the water tank.

STEP 2: Wipe the ceramic soleplate with a soft, damp cloth and dry thoroughly.

STEP 3: If polyester has burnt onto the ceramic soleplate, wipe it with a soft cloth dipped in methylated spirits. Clean off the methylated spirits and dry thoroughly.

STEP 4: To remove any build-up around the steam holes, use a cotton wool tip dampened with methylated spirits. Wipe off the methylated spirits and dry thoroughly.

Description of Parts



- | | |
|---------------------------------------|-----------------------|
| 1. 3100 Watt Ultra Ceramic Steam Iron | 8. Spray nozzle |
| 2. Temperature control dial | 9. Water tank |
| 3. Temperature indicator light | 10. Water tank cap |
| 4. Steam control dial | 11. Max. fill mark |
| 5. Steam burst button | 12. Easy-grip handle |
| 6. Water spray button | 13. Ceramic soleplate |
| 7. Self-clean button | 14. Cord guard |
| | 15. Heel rest |
| | 16. Measuring jug |

Instructions for Use

Before First Use

STEP 1: Check that the iron is unplugged from the mains power supply.

STEP 2: Wipe the exterior surface of the iron with a soft, damp cloth and dry thoroughly.

STEP 3: To remove any impurities that may have occurred during the manufacturing process, it is best to use the iron on an old piece of cloth, making sure that it is on the highest temperature setting suitable for the material.

Note: When using the iron for the first time, a slight odour and a small amount of smoke may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the iron when it is in use.

Filling the Water Tank

Caution: Do not fill the water tank past the max. fill mark; it is best to check the water level when the iron is on the heel rest.

Warning: Never add descaling, aromatic, alcoholic or detergent products to the water tank, as this could cause damage to the iron or injury to the user.
Do not fill the water tank when the iron is on.

Using the 3100 Watt Ultra Ceramic

Ironing with Steam

The steam settings are ideal for removing creases from fabrics such as cotton and linen with ease.

STEP 1: Fill the water tank.

STEP 2: Plug in and switch on the iron.

STEP 3: Rotate the temperature control dial until the desired heat setting is reached. The temperature indicator light will illuminate to signal that the iron is heating up; this will switch off once the iron is ready to use.

STEP 4: Select the desired steam setting by rotating the steam control dial to the desired position. The steam setting can be switched off at any time by rotating the steam control dial to the off position.

STEP 5: After use, rotate the temperature control dial to the 'Min.' position and then switch off and unplug the iron from the mains power supply. Allow to cool thoroughly.

Note: The iron will only produce steam when the temperature control dial is set to the 3-dot heat setting.

Allow the iron to reach the desired heat setting before use; not doing so may cause water to drip from the ceramic soleplate. The temperature indicator light will cycle on and off during normal use as the iron maintains the selected temperature.

Warning: Never leave the iron's ceramic soleplate resting on fabric for any longer than 15 seconds.

Ironing without Steam

For removing creases from more sensitive fabrics, iron without steam.

STEP 1: Rotate the steam control dial to the 'Off' position.

STEP 2: Plug in and switch on the iron.

STEP 3: Rotate the temperature control dial until the desired heat setting is selected.

STEP 4: Test the iron on a small area of the fabric to check that the selected temperature is suitable; adjust if necessary.

Steam Burst Function

For creases that are stubborn and difficult to remove, use the steam control dial to select the desired steam setting; if necessary, press the steam burst button for extra steam. Wait approx. 5 seconds in-between each burst to prevent any water leaking out from the steam holes.

Self-clean Function

The self-clean function removes limescale and impurities from within the ceramic soleplate. It is recommended to use this function on a fortnightly basis or more often if the iron is used in a hard water area. Further details can be found in the online instruction manual.

Storage

Check that the iron is cool and dry and that the water tank is empty before storing in a cool, dry place. Wrap the cord loosely around the iron; never wrap it tightly as this could cause damage.

Specifications

Product code: BEL0820 Output: 3100 W
Input: 220-240 V ~ 50-60 Hz Water tank capacity: 300 ml

If this product does not reach you in an acceptable condition please contact our Customer Services Department at www.beldray.com. Please have your delivery note to hand as details from it will be required. If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Go to www.beldray.com/manuals.html and search **BEL0820** to access the instruction manual for your product.

* To be eligible for the extended guarantee, go to www.beldray.com and register your product within 30 days of purchase.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out.

Contact your local authority for details of where to take the item for recycling.



FULL INSTRUCTION MANUAL AT
www.beldray.com/manuals.html
PRODUCT CODE: **BEL0820**





 
 
 



 
 
 



 
 
 
Beldray^{est 1872}[®]
3100 WATT
ULTRA CERAMIC
QUICK START GUIDE

Find us on 

www.facebook.com/Beldray

Manufactured by:
UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.
MADE IN CHINA.
www.beldray.com

CD110320MD000000/V1

		Manchester OL9 0DD United Kingdom www.upgs.com																	
ULTIMATE PRODUCTS HOME OF BRANDS																			
Artworker:	SCARLETT CHESTER-ROBERTS																		
Date:	02/12/2020																		
Project Name:	HCH200220 UPG BEL0820 QSG																		
Type of Artwork:	Quick Start Guide																		
Size:	A4 Folding Leaflet Double-sided																		
Software Used:	Indesign CC20																		
Typefaces:	Avenir Next																		
<table border="0"> <tr> <td></td> <td><input type="checkbox"/> Cyan</td> </tr> <tr> <td></td> <td><input type="checkbox"/> Magenta</td> </tr> <tr> <td></td> <td><input type="checkbox"/> Yellow</td> </tr> <tr> <td></td> <td><input checked="" type="checkbox"/> Black</td> </tr> <tr> <td></td> <td><input type="checkbox"/> PMS</td> </tr> <tr> <td></td> <td><input type="checkbox"/> PMS</td> </tr> <tr> <td></td> <td><input type="checkbox"/> PMS</td> </tr> <tr> <td></td> <td><input type="checkbox"/> PMS</td> </tr> </table>			<input type="checkbox"/> Cyan		<input type="checkbox"/> Magenta		<input type="checkbox"/> Yellow		<input checked="" type="checkbox"/> Black		<input type="checkbox"/> PMS		<input type="checkbox"/> PMS		<input type="checkbox"/> PMS		<input type="checkbox"/> PMS	<div>Artwork Version 2</div> <div>Artwork Scale 1:1</div> <p>©2020 UP Global Sourcing. All designs, images and artwork are the copyright of UP Global Sourcing. No copying, alterations or amendments to the artwork, design can be undertaken without prior written permission of UP Global Sourcing. Any costs incurred as a result of unauthorised amendments will be recovered from the supplier responsible.</p>	
	<input type="checkbox"/> Cyan																		
	<input type="checkbox"/> Magenta																		
	<input type="checkbox"/> Yellow																		
	<input checked="" type="checkbox"/> Black																		
	<input type="checkbox"/> PMS																		
	<input type="checkbox"/> PMS																		
	<input type="checkbox"/> PMS																		
	<input type="checkbox"/> PMS																		

DO NOT PRINT THIS PAGE
 ARTWORK REFERENCE ONLY