

TOWER[®]

over 100 YEARS of quality

T513003/T513003BLG

VL30

22.2V Cordless

3 in 1 Vacuum Cleaner



3*

**YEAR
GUARANTEE**

SAFETY AND INSTRUCTION MANUAL PLEASE READ CAREFULLY

 
 
 
 
*Subject to registering your Extended Guarantee online at www.towerhousewares.co.uk.

Specifications:

This box contains:

Instruction Manual
3 in 1 Vacuum Cleaner
Vacuum Cleaner
Battery Pack
AC Adaptor
Filter
Floor Head
2 in 1 Brush and Crevice Tool
Crevice Nozzle
Wall Mounting Kit

1. Charging port
2. Battery Pack
3. Battery release switch
4. Charging Indicator Lights
5. Power ON/OFF Speed Selection button
6. Speed Indicator
7. Dust tank lock button
8. Dust tank
9. Extension Pole release button
10. Extension pole
11. Floor Head Release Button
12. Floor head
13. Brush Roller
14. 2 in 1 Crevice Brush
15. Adaptor
16. Crevice Tool

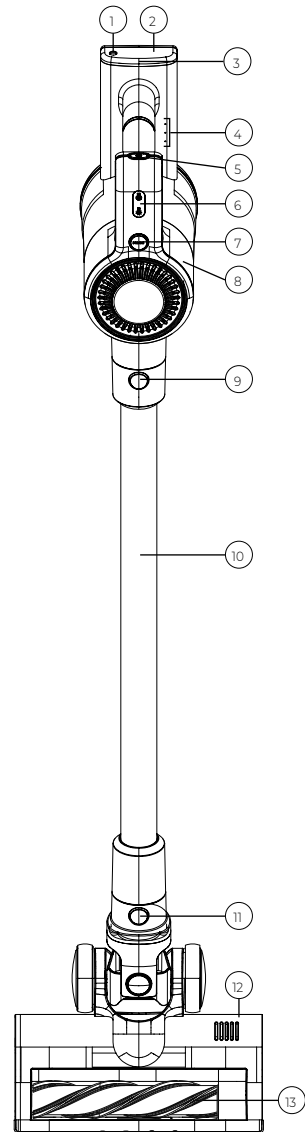

Technical Data:

Description:	22.2V Cordless 3 in 1 Vacuum Cleaner
Model:	T513003/T513003BLG
Adaptor Input:	100-240V, 50/60Hz 0.4A
Adaptor Output:	27V 0.5A
Battery:	22.2V 2000mAh Li-Ions
Rated Power:	150W
Charging Time:	Approx. 4 hours
Run Time:	Approx. 35 minutes on the lowest setting

(Power adapters only)

Never open the power adapter, you risk getting an electric shock.

Only use the power adapter that is supplied with your product.

You must always connect the power adapter to the product before connecting to the mains power supply.

The power adapter must be used indoors only, and must not be subjected to damp conditions.

The power adapter does not have any user serviceable parts.

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug – disconnect it from the mains – and then cut it off of the mains lead and immediately dispose of it in a safe manner. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

WARNING:

Do not attempt to open any part of the power adaptor or plug.

DISPOSAL OF THE UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items.

Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill.

Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.



Important Safety Information:

Please read these notes carefully BEFORE using your Tower appliance

- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- If the supply cord or appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer, its service agent or a similarly qualified person.
- DO NOT let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- DO NOT place the appliance near a heat source.
- The use of accessory attachments is not recommended by the appliance manufacturer apart from those supplied with this product.
- DO NOT pull the plug out by the cord as this may damage the plug and/or the cable.
- Switch off and unplug before fitting or removing tools/ attachments, once charged and before cleaning.
- Close supervision is necessary when any appliance is used by or near children.
- Children should not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance should not be undertaken by children without supervision.
- Take care when any appliance is used near pets.
- Not suitable for carpets with long fibres as the bristles will damage the fibres.

- Keep the vacuum cleaner moving over the carpet surface at all times to avoid damaging the carpet fibres.
- DO NOT use this product for anything other than its intended use.
- DO NOT immerse cords, plugs or any part of the appliance in water or any other liquid.
- This appliance is for household use only.
- DO NOT use the appliance outdoors.
- DO NOT handle the appliance or plug with wet hands.
- Keep hair, loose clothing, fingers and all body parts away from moving parts.
- DO NOT use to pick up hazardous or abrasive liquids (solvents, corrosive products, detergents, etc), flammable liquids such as alcohol, gasoline or use in an area where they might be present.
- DO NOT use the appliance without the dust container filter in place.
- DO NOT pick up anything that is burning or smoking such as cigarettes, matches or hot ashes.
- DO NOT vacuum any large, sharp, or broken objects, such as pieces of glass.
- DO NOT vacuum water or any other liquid.
- Use extra care when cleaning on stairs.
- Use only manufacturer's recommended accessories.
- This product is fitted with a thermal cut-out, which will activate if the motor overheats due to blocked air inlets. If the appliance cuts out, allow it to cool for 1 hour, then empty the dust container and clean all of the filters.
- In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the Customer Support Team:
+44 (0) 333 220 6066

Before First Use:

Read all instructions and safety information carefully before first use. Please retain this information for future reference.

1. Remove the product from the box.
2. Remove any packaging from the product.
3. Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.
4. Charge the rechargeable battery
5. Dispose of the packaging in a responsible manner.

Charging the Unit:

1. This unit can be charged directly from the mains using the included mains adaptor.
2. Connect the adaptor's jack to the unit's charging port and plug the other end into an active mains socket, ensuring the socket switch is turned to the ON position.
3. During charging the 3 LED indicators illuminate incrementally until all lights are illuminated.
4. To disconnect the battery from the unit press the battery release switch and slide the battery up and away from the unit.
5. To replace the battery slide back in to place until there is an audible click.

Turning the Appliance ON/OFF and Speed Selection:

 
1. Once the appliance is fully charged, press the On/Off/Speed Selection button located on the handle to turn the unit on. The unit will operate at the low speed setting.
2. Press the ON/OFF/Speed Selection button again while the unit is in operation to select the turbo speed setting.
3. Press the ON/OFF/Speed Selection button again while operating at the turbo speed setting to turn the unit off.

Using the Extension Pole:

1. To connect the pole to the vacuum cleaner, push it into the corresponding slot on the main body of the unit until it locks into place.
2. To remove the extension pole and use the vacuum cleaner as a handheld cleaner, press the extension pole release button on the main body of the unit and pull the pole away.

Using the Accessories:

This vacuum cleaner comes with a 2 in 1 Brush and Crevice tool and a Crevice Nozzle for vacuuming

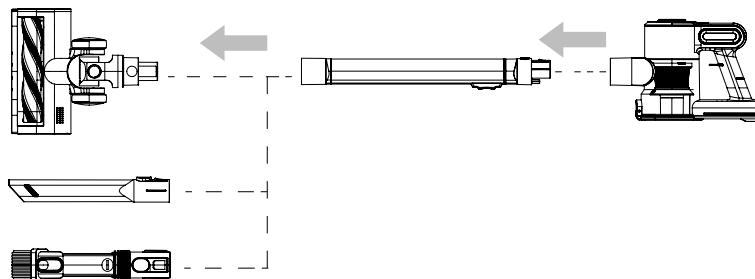

corners and cleaning delicate surfaces.

Note: Keep the brush free of fibres, hairs, and other objects that could impede proper functioning. Always remove these types of objects when the brush picks them up.

Connecting an accessory to the extension pole:

Attach the accessory to the end of the extension pole. Ensure the accessory clicks in to place and is firmly connected before turning on the appliance, to prevent it from falling off whilst in use.

Connecting an accessory to the handheld unit:

Attach the accessory to the slot at the front of the main body of the unit until it clicks into place.

Removing Accessories:

To remove the accessory press the release button on the accessory tool and pull away from the extension pole or main unit.

Note: Use only on short-haired carpet. It should NOT be used on long-haired carpets as the fibres will damage the system.


Troubleshooting

Problem	Possible Solution
The vacuum will not work	Ensure the vacuum cleaner is fully charged. Check that there are no blockages to the dust tank or filter and remove as necessary. This appliance is equipped with a motor protective thermo-stat. If for some reason it overheats, the thermostat will automatically turn the suction motor off. Should this occur, allow it to cool for 1 hour, then empty the dust container and clean all of the filters.
Vacuum will not pick-up or suction power is weak	The dust container may be full, or the filter may require cleaning. Empty the dust container and clean the filter. There may be blockages in the filter or dust tank. Check for blockages and clean the filter and dust tank.
Dust is escaping from the vacuum	The filter may installed incorrectly, or the dust container may be full. Empty the dust container and reassemble the filter system.
There is a strange noise coming from the vacuum.	The airflow may be restricted or blocked. Check for blockages and clean the filter and pole.


Cleaning & Care

Emptying the Dust Tank:

 Hold the unit over a bin and press the dust quick release button. Empty the contents of the dust tank. Once empty, push the cover back into place until there is an audible click.

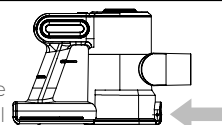

Cleaning the Filter:

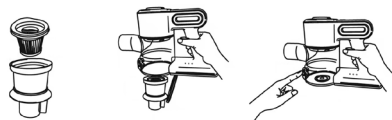 

1. Press the filter release button at the top of the unit to open the filter housing.
2. Remove the top filter from the dust tank.
3. Tap it lightly against a dustbin or sink to remove particles.
4. Wash the filter regularly to ensure maximum suction performance. Allow to dry for a period of at least 24 hours at room temperature before replacing it into the unit.
5. Next, unlock the latch at the bottom of the dust tank to open it and access the filter inside.
6. Take out the filter housing from inside the dust tank, pull the filter out, and clean it as detailed above.

- 
7. Once the top filter is thoroughly dry, place it back into the filter housing, ensuring it is correctly secured into place, and push the housing lid down until it clicks into place.
 8. Once the bottom filter is thoroughly dry, open the dust tank, place the filter back inside it, and twist it until it clicks securely into place. To close the dust tank, push the bottom latch upwards into a horizontal position until it clicks into place.
 9. The vacuum cleaner is now ready for normal use.

Cleaning the Unit Body:

1. Before cleaning the unit body, ensure the unit is disconnected from the mains supply and not in operation.
2. Use a damp cloth to clean the unit body. Never use any abrasive cleaning materials or solvents, as these could cause damage to the surface of the unit.

WARNING! DO NOT allow any liquids into the unit, as this could cause damage to the electrical components and cause it to malfunction.

Cleaning floor head brush bar:

Remove fluff, hairs and other dirt from the brush regularly.

Clearing Blockages:

If the dust tank is overfilled, the filter is clogged up, or the vacuum picks up a larger piece of debris, the vacuum may become clogged.

Should this occur, carry out the following steps to unclog the vacuum:

1. Check the dust tank and empty it if necessary.
 2. Check the filter for any debris and rinse it under running water if necessary, as detailed in the sections above.
 3. Detach any attachments from the unit and check for blockages.
- 
- 

Storing the Appliance:

1. Store the appliance in a cool, dry place, preferably inside its original packaging, and out of the reach of children.

Notes

Notes

Notes

TOWER®

over 100 YEARS of quality

thank you!

We hope you enjoy your appliance for many years

This product is guaranteed for 12 months from the date of original purchase. If any defect arises due to faulty materials or workmanship, the faulty products must be returned to the place of purchase.

Refund or replacement is at the discretion of the retailer.

The Following Conditions Apply:

The product must be returned to the retailer with proof of purchase or a receipt. The product must be installed and used in accordance with the instructions contained in this instruction guide.

It must be used only for domestic purposes.

It does not cover wear and tear, damage, misuse or consumable parts.

Tower has limited liability for incidental or consequential loss or damage.

This guarantee is valid in the UK and Eire only.

The standard one year guarantee is only extended to the maximum available for each particular product upon registration of the product within 28 days of purchase. If you do not register the product with us within the 28 day period, your product is guaranteed for 1 year only.

To validate your extended warranty, please visit
www.towerhousewares.co.uk and register with us online.

Please note that length of extended warranty offered is dependent on product type and that each qualifying product needs to be registered individually in order to extend its warranty past the standard 1 year.

Extended warranty is only valid with proof of purchase or receipt.

Your warranty becomes void should you decide to use non Tower spare parts.

Spare parts can be purchased from
www.towerhousewares.co.uk

Should you have a problem with your appliance, or need any spare parts, please call our Customer Support Team on:

+44 (0) 333 220 6066

