

www.charlestaylortrading.com info@charlestaylortrading.com





Required
1 x 13mm spanner
Pozi 2 screwdriver

Step 1



This Pack includes: 1 x right side, 1 x left side, 1 x seat back, 1 x seat base, 1 x 5.0 100mm screw,  $10 \times M8$  bolt,  $10 \times M8$  nut,  $10 \times M8$  washer.

Step 2



Insert 4 x M8 bolts into the pre-drilled holes in the right side leg. Ensure the bolt head is on the outside of the leg.

Step 3



Position the base on the front 2 bolts and bottom rear bolt of the right side leg.

Step 4



To fix the leg and base together fit a washer and nut on each bolt and tighten with fingers.

Step 5



Insert a bolt into the pre-drilled hole in the arm rest of the right leg.

Step 6




Position the seat back on the 2 bolts of the right side leg and fix in place with a nut and washer on each bolt

Step 7



To attach the left side leg turn the bench over, insert 5 bolts in the pre-drilled holes of the left leg and position on the back and base. Secure with nut and washer on each bolt.

Step 8

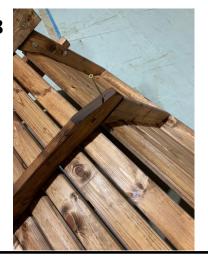

Secure the back and base with 1x 100mm screw.
Using a 13mm spanner tighten all nuts.