



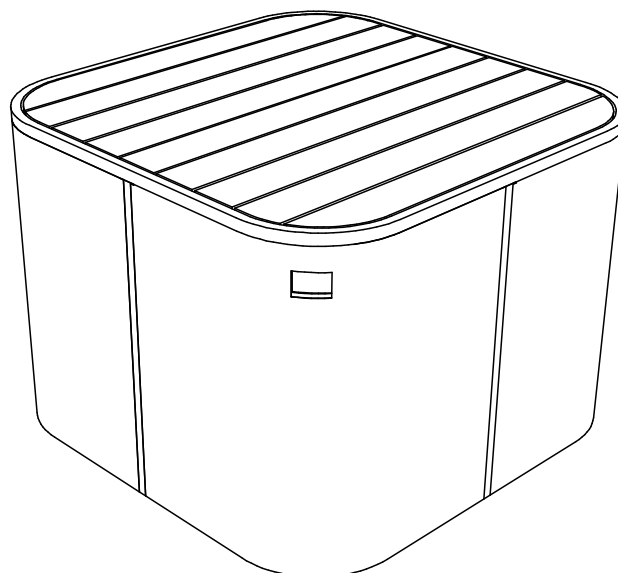


ASSEMBLY INSTRUCTION


SOLARO 5 Piece Rattan Dining Set PLU: 166656

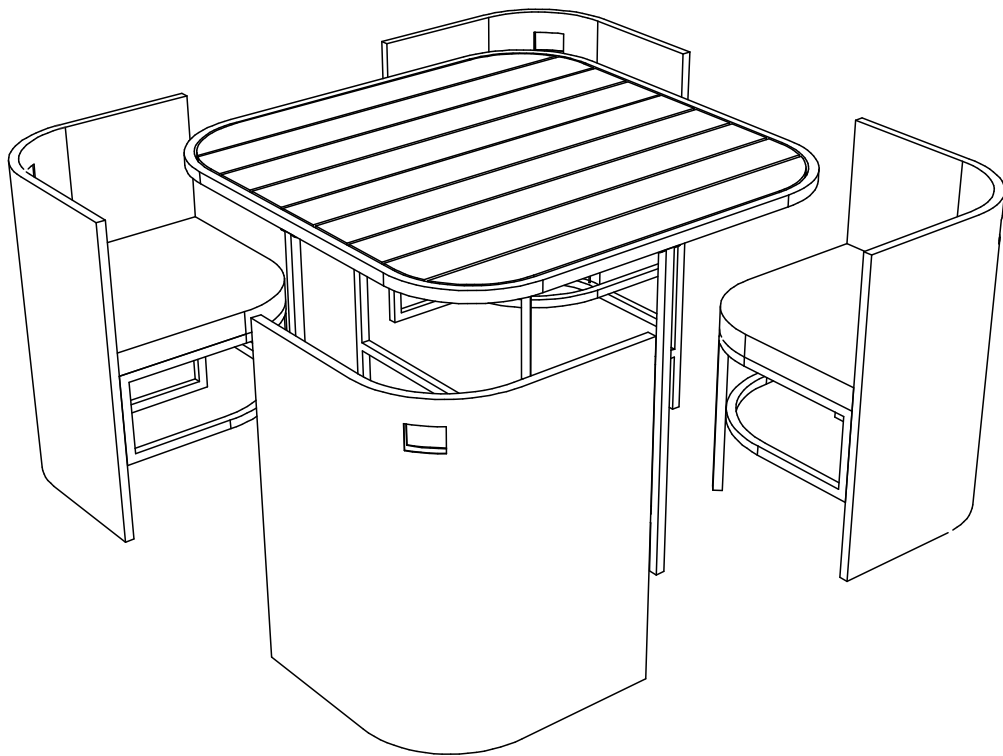


PART LIST

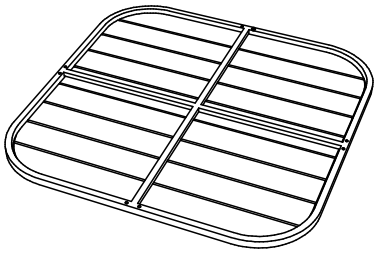


Ⓐ x1

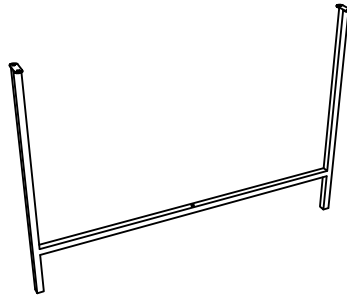


Ⓑ x1

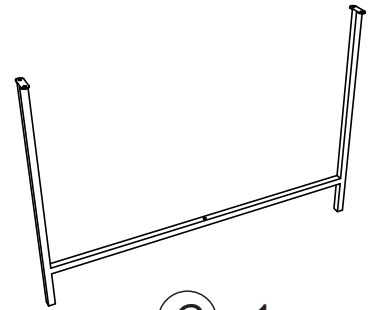


Ⓒ x1

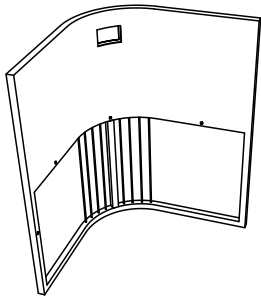

Ⓔ x4

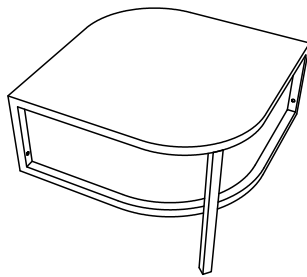

Ⓕ x4

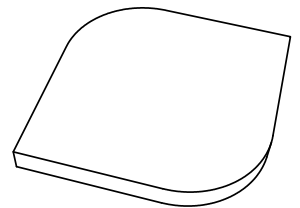

Ⓖ x4

HARDWARES



Bolt M6x45mm = 20pcs




Bolt M6x20mm = 8pcs




Bolt M6x50mm = 1pc



Washer M6 = 30pcs




Nuts M6 = 1pc












Allenkey = 2pcs

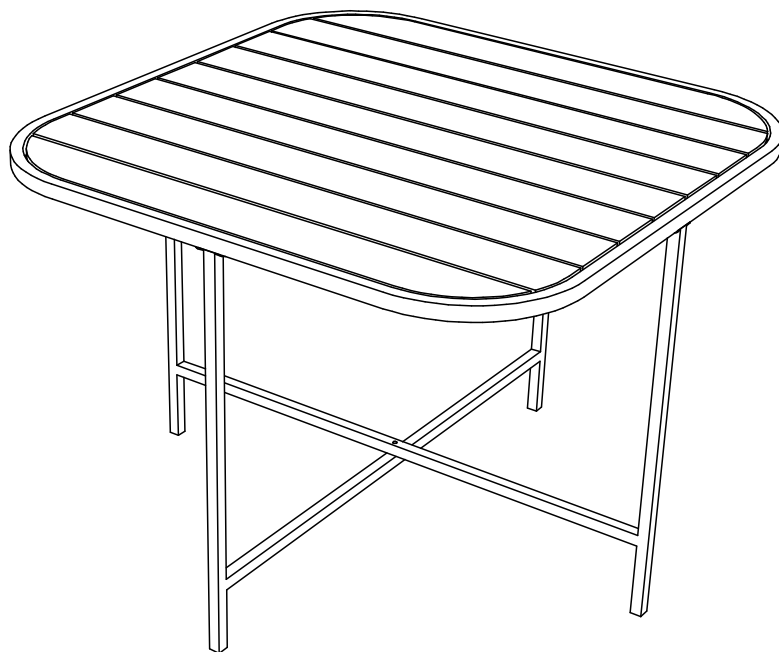

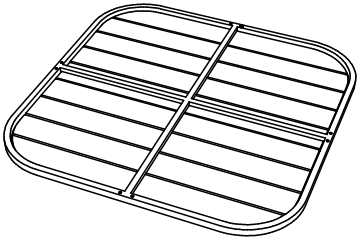
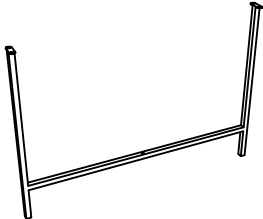
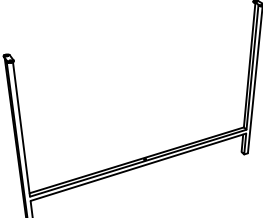
Wrench M6 = 1pc






A		1 PC
B		1 PC
C		1 PC

2	 M6x20mm	8 PCS
3	 Bolt M6x50mm	1 PC
4	 Washer M6	10 PCS
5	 Nuts M6	1 PC
6	 Allenkey	1 PC
7	 Wrench M6 = 1pc	1 PC



1

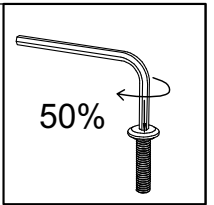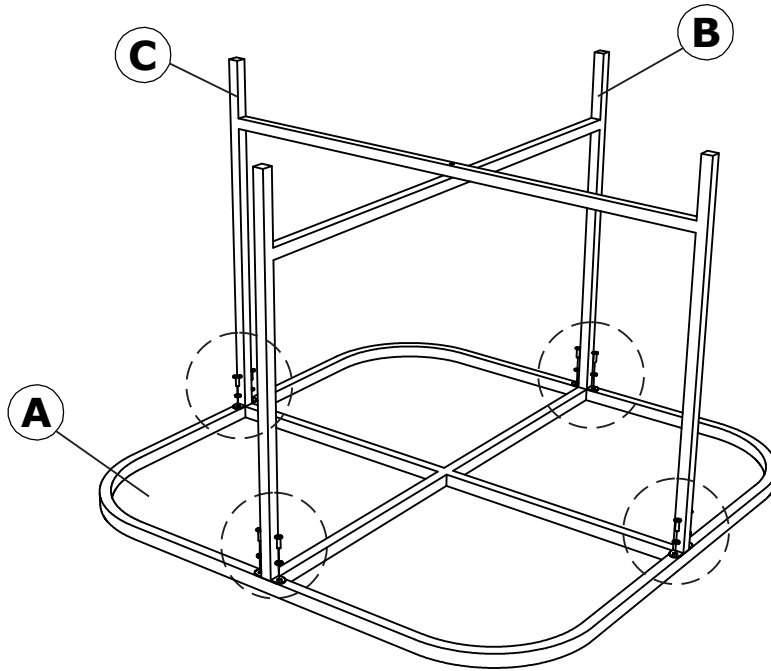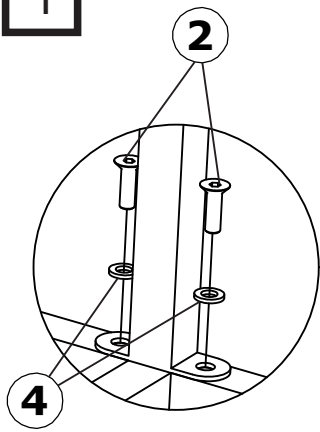


2

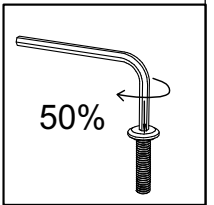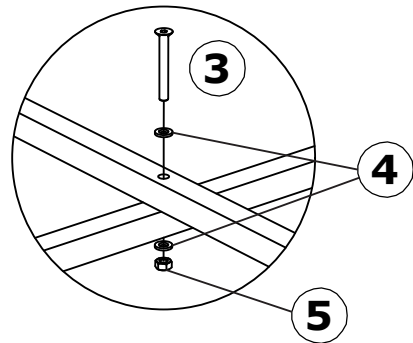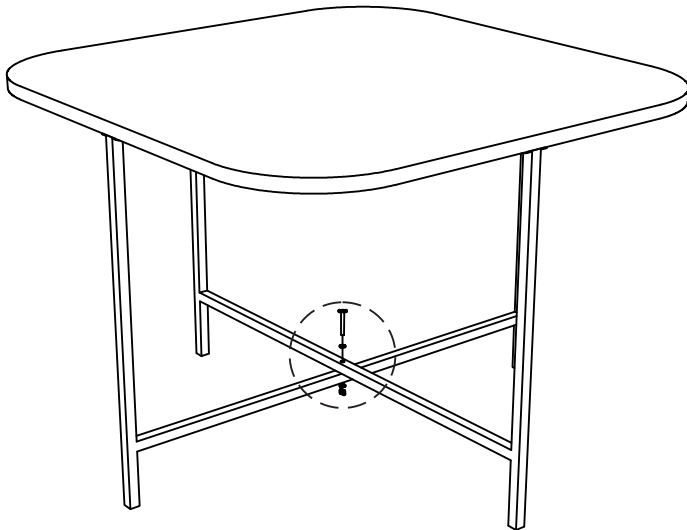

3

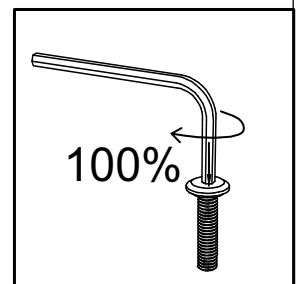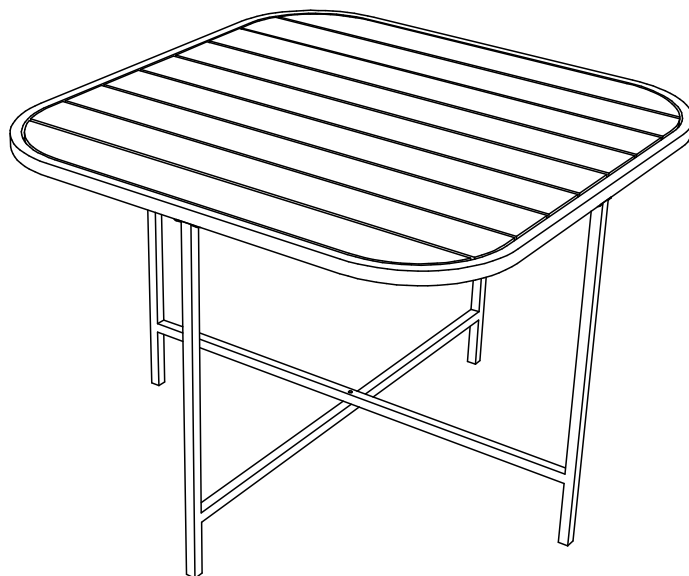

x4

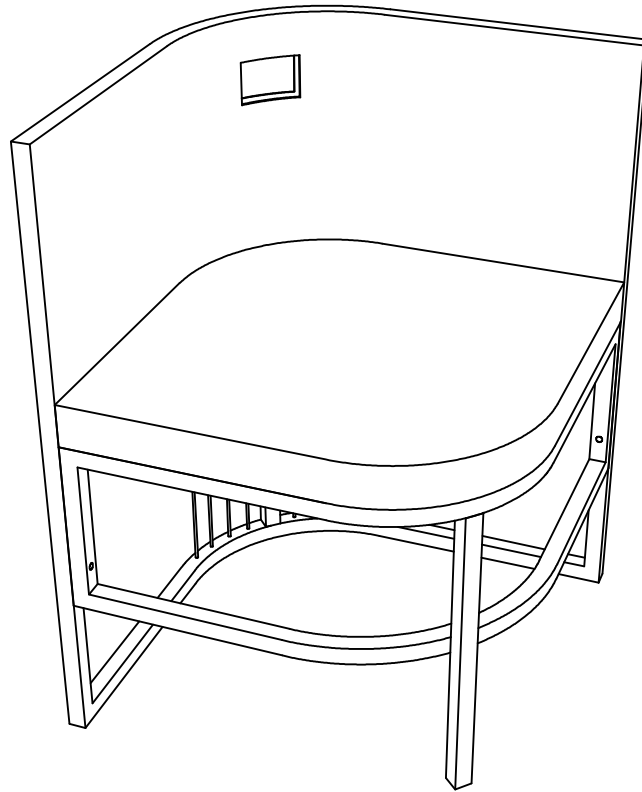


E		4 PCS
F		4 PCS
G		4 PCS

1	 Bolt M6x45mm	20 PCS
4	 Washer M6	20 PCS
6	 Allenkey	1 PC


1

x4

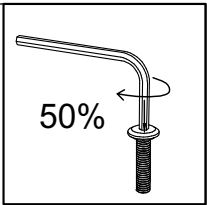



E

F

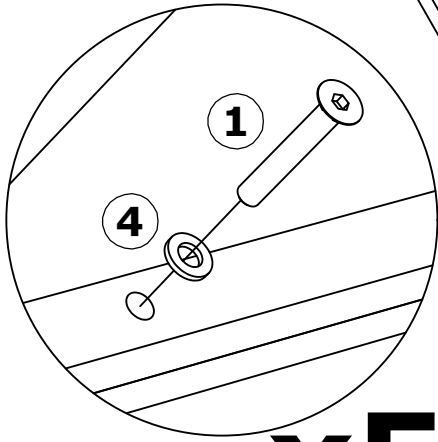

x5

2

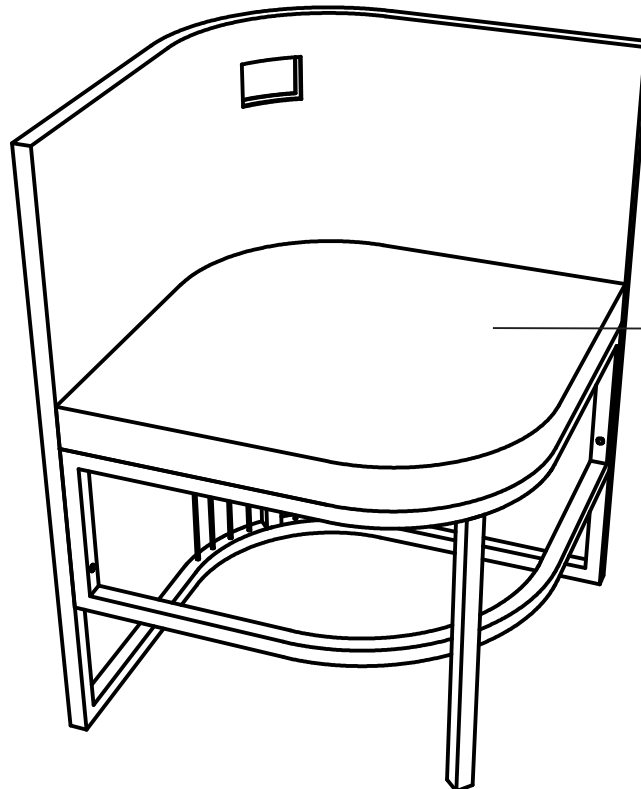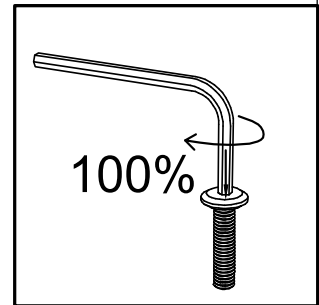

G

FINISH