


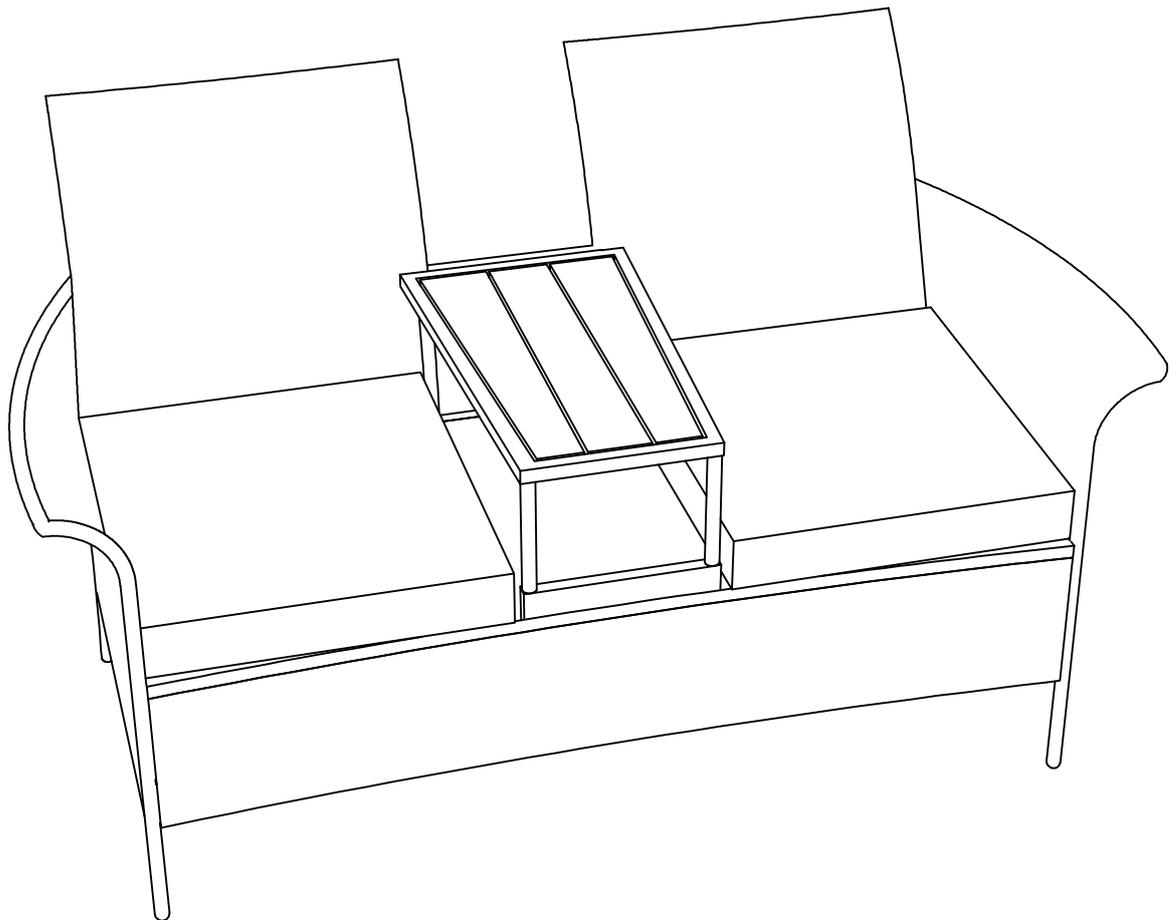


# ASSEMBLY INSTRUCTION


## VERONA Rattan Companion Bench PLU: 166657




# PART LIST

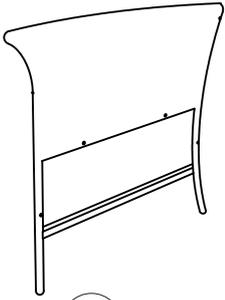


**A** x1

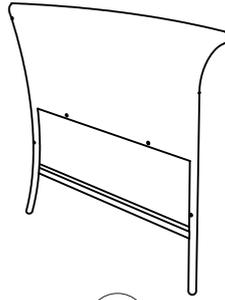


**B** x1

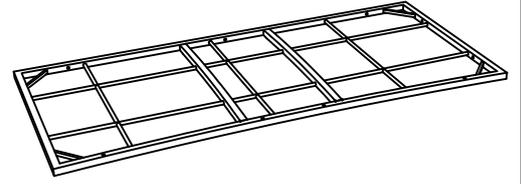


**C** x1

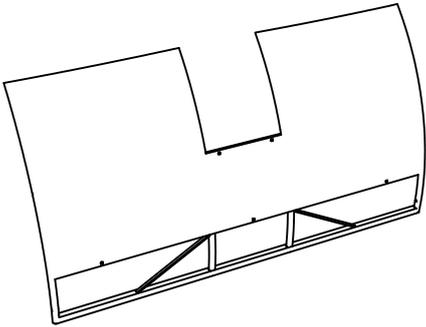


**D** x1

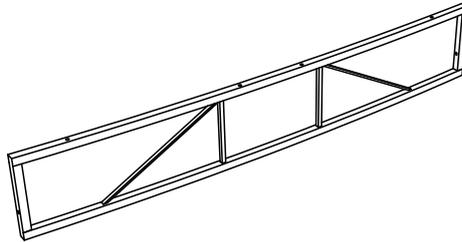


**E** x1

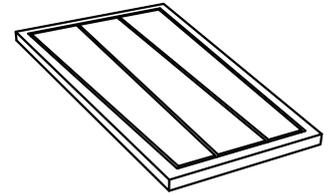

**F** x1

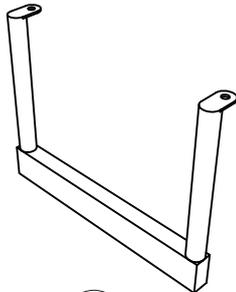

**G** x1

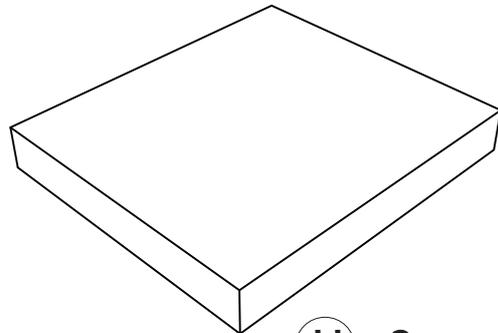

**H** x2

# HARDWARES



**1**  
Bolt M6x45mm = 17pcs



**2**  
Bolt M6x20mm = 2pcs



**3**  
Bolt M6x60mm = 2pcs






**4**  
Washer M6 = 21pcs





**5**  
Allenkey = 2pcs



1

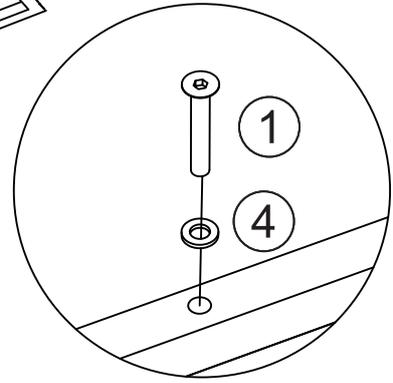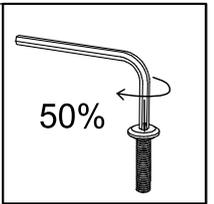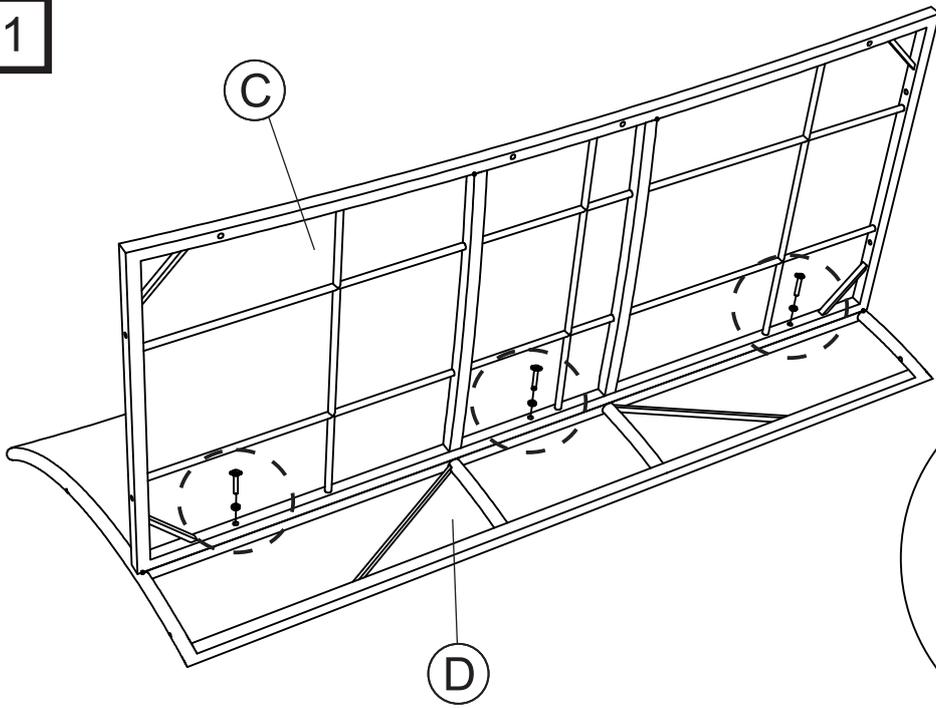



2

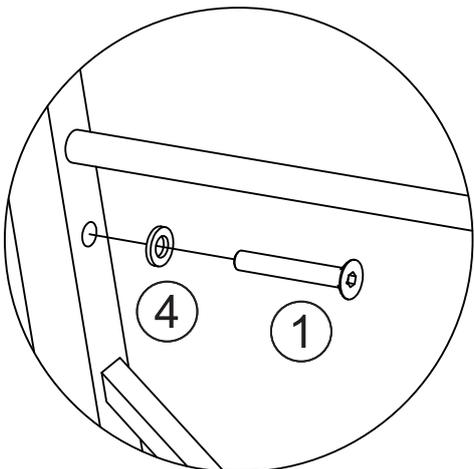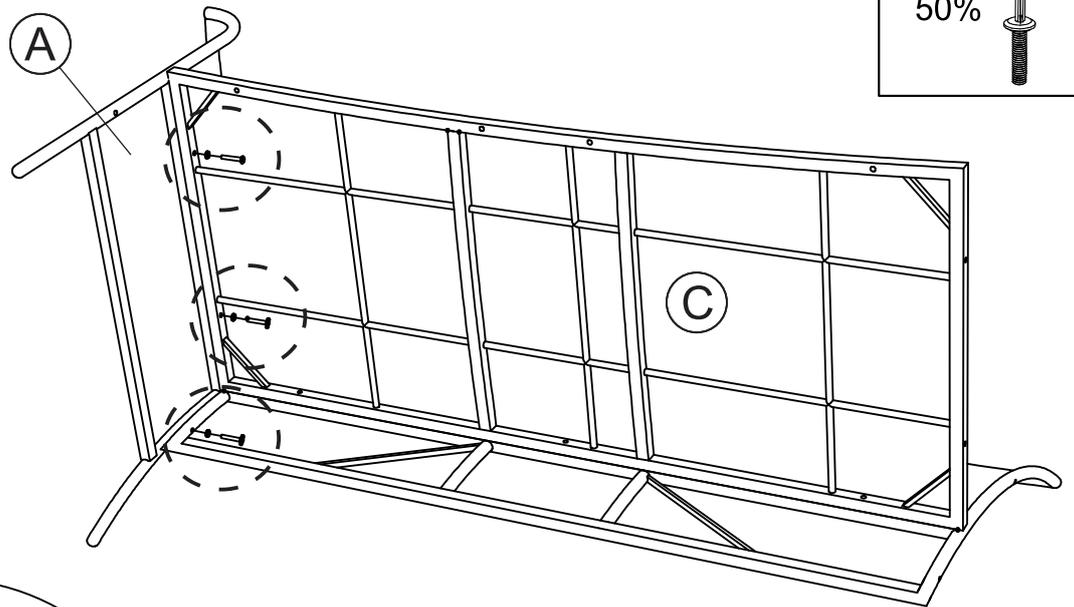



3

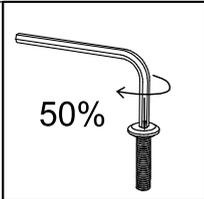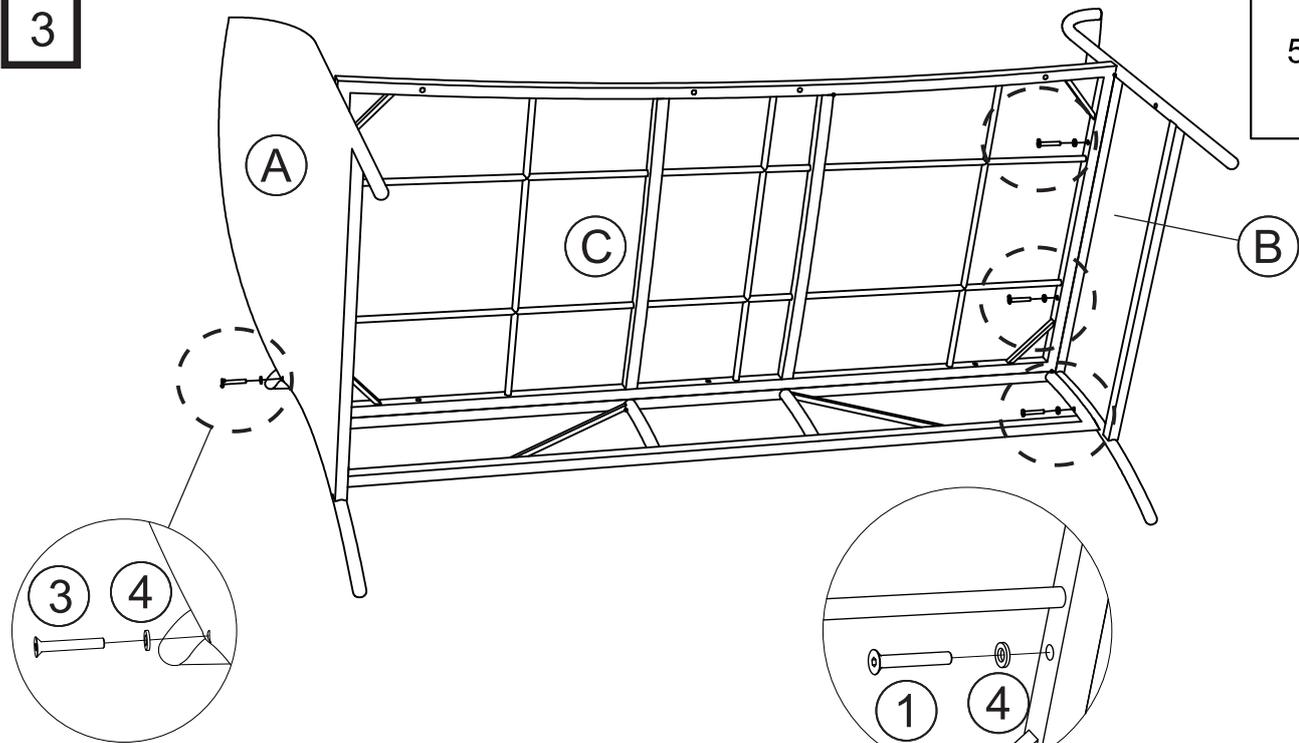



4

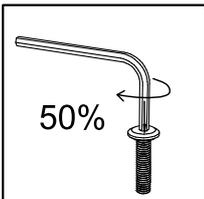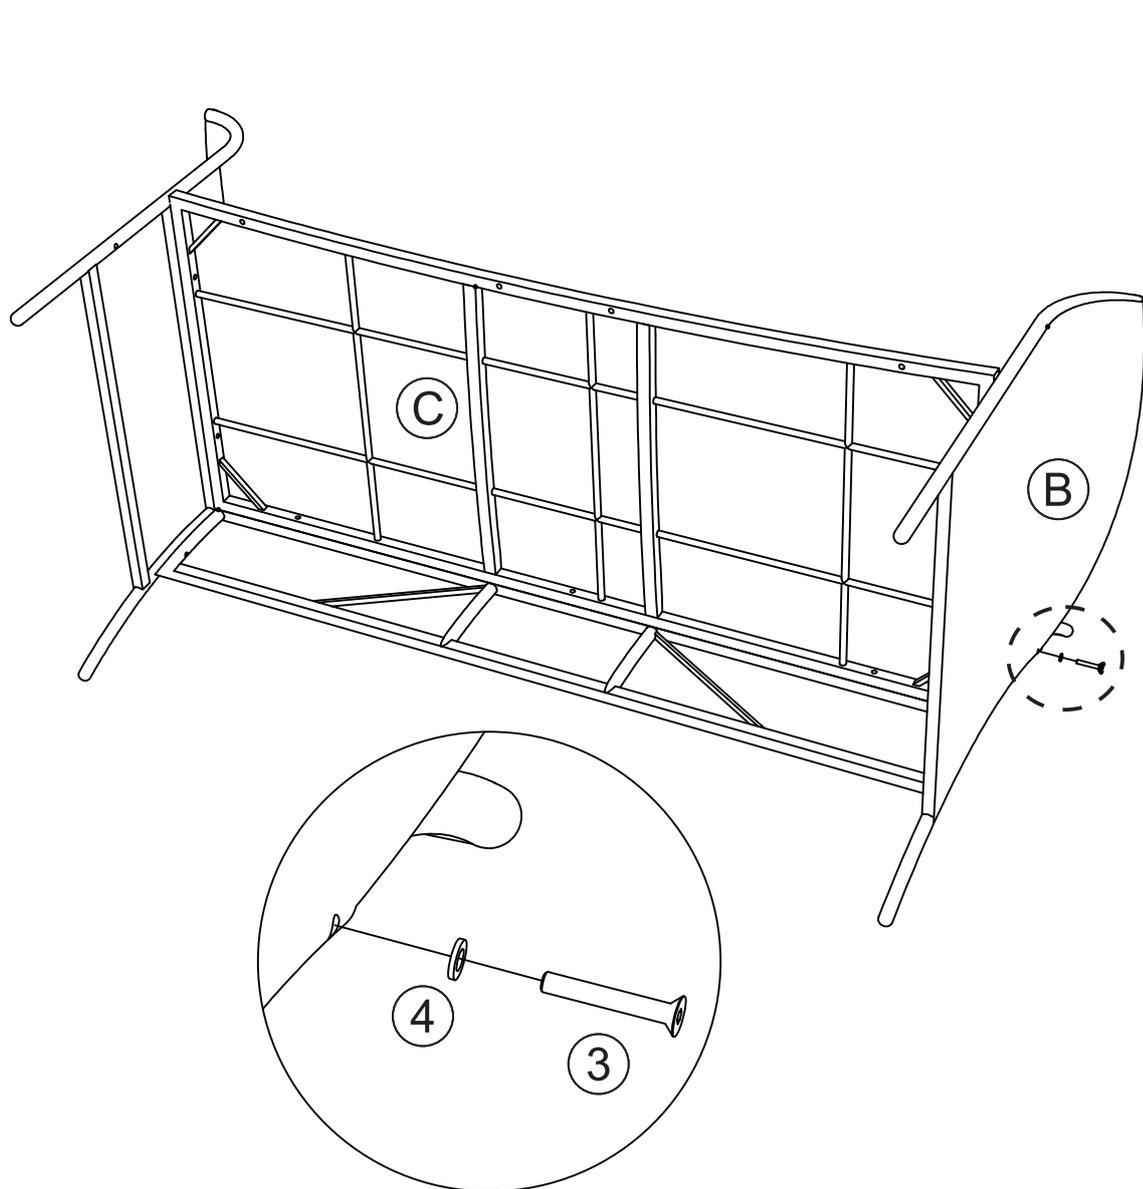



5

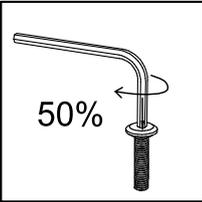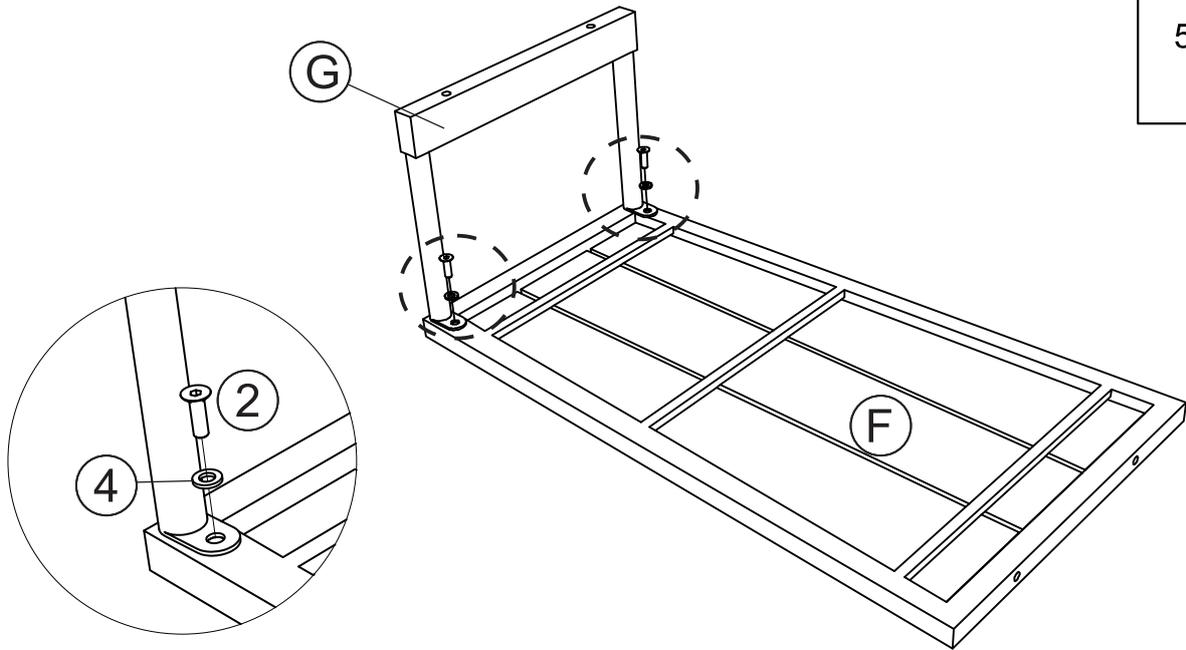



6

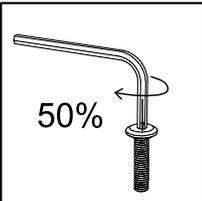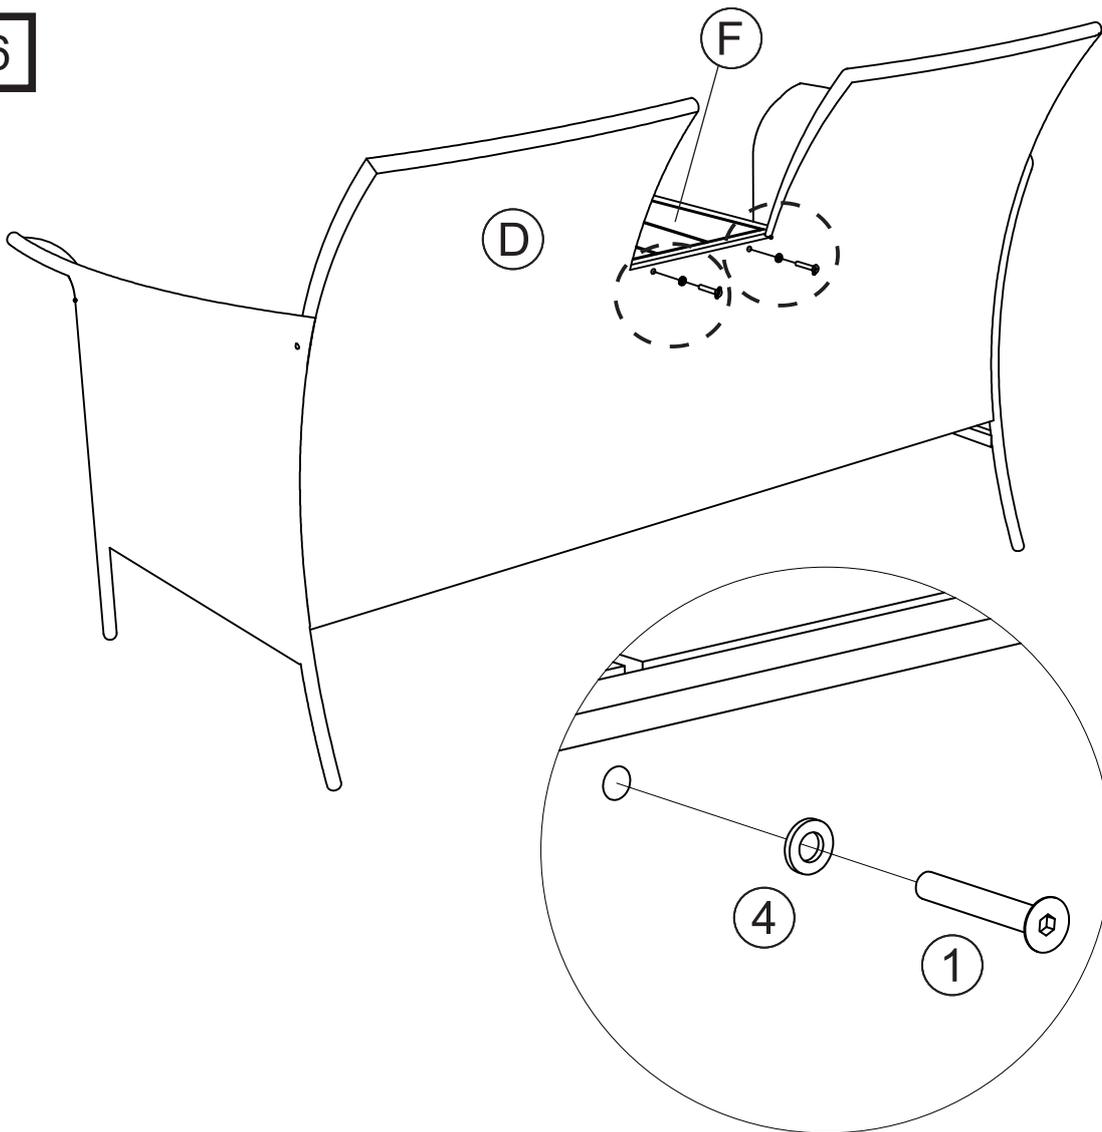



7

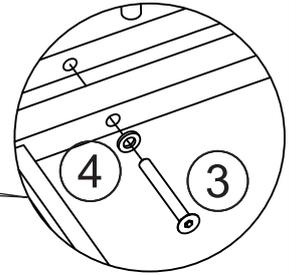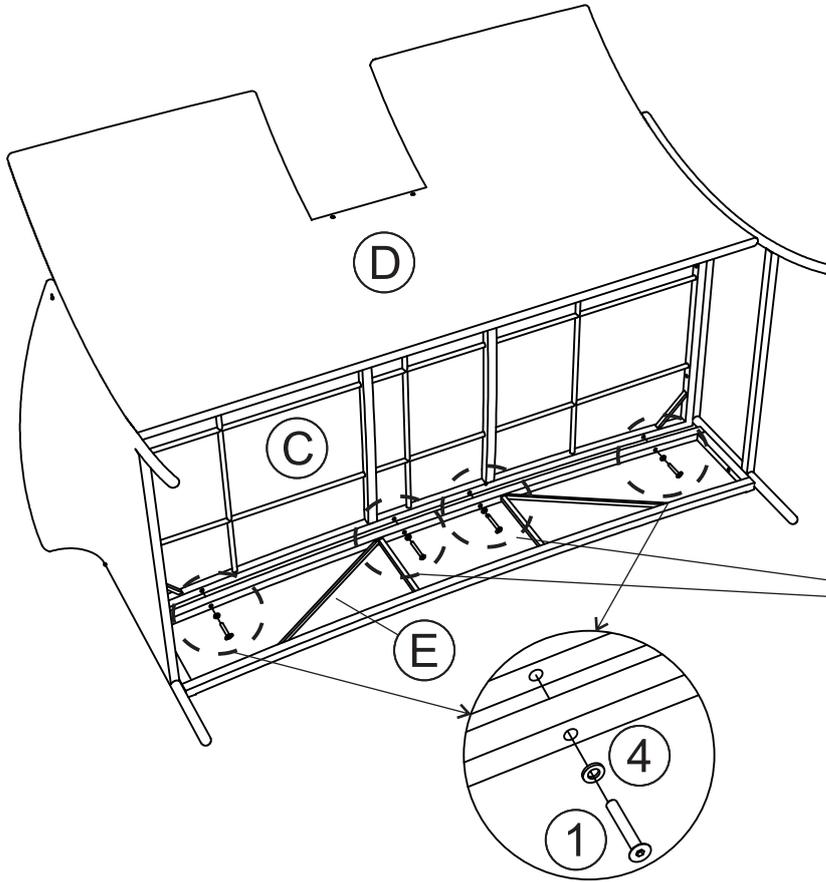

8

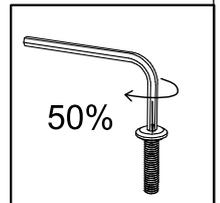
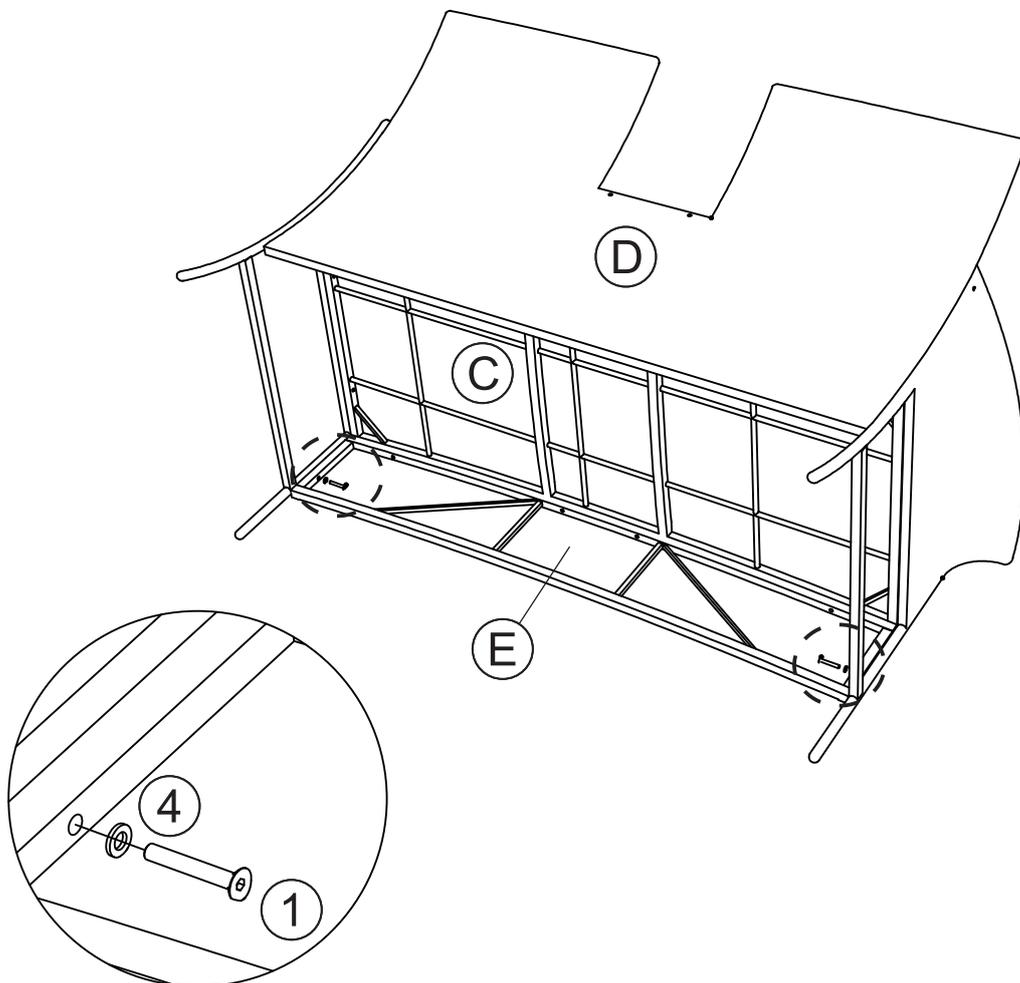


9

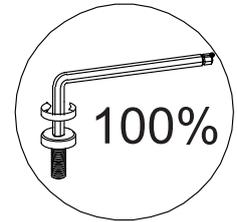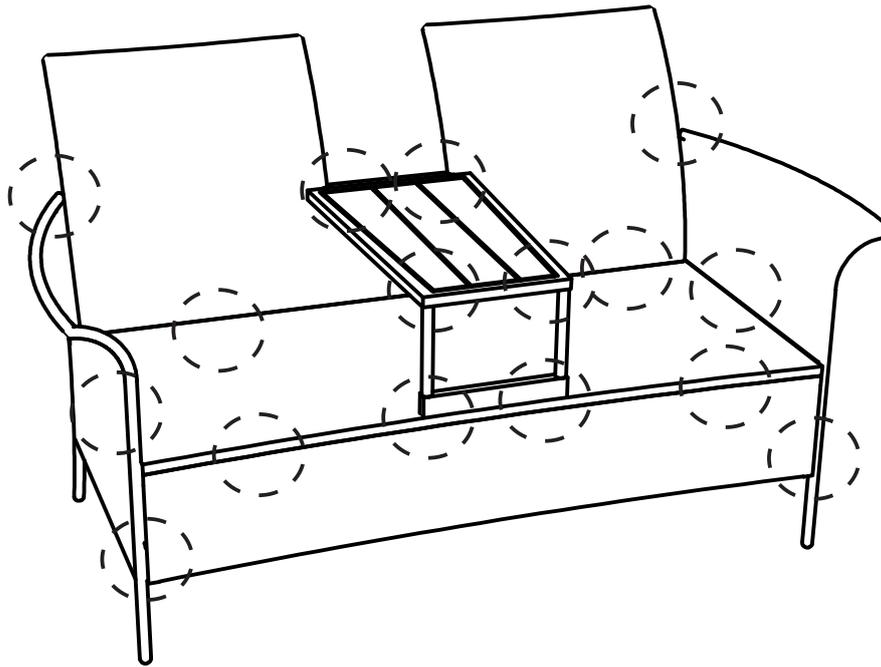

x21

10

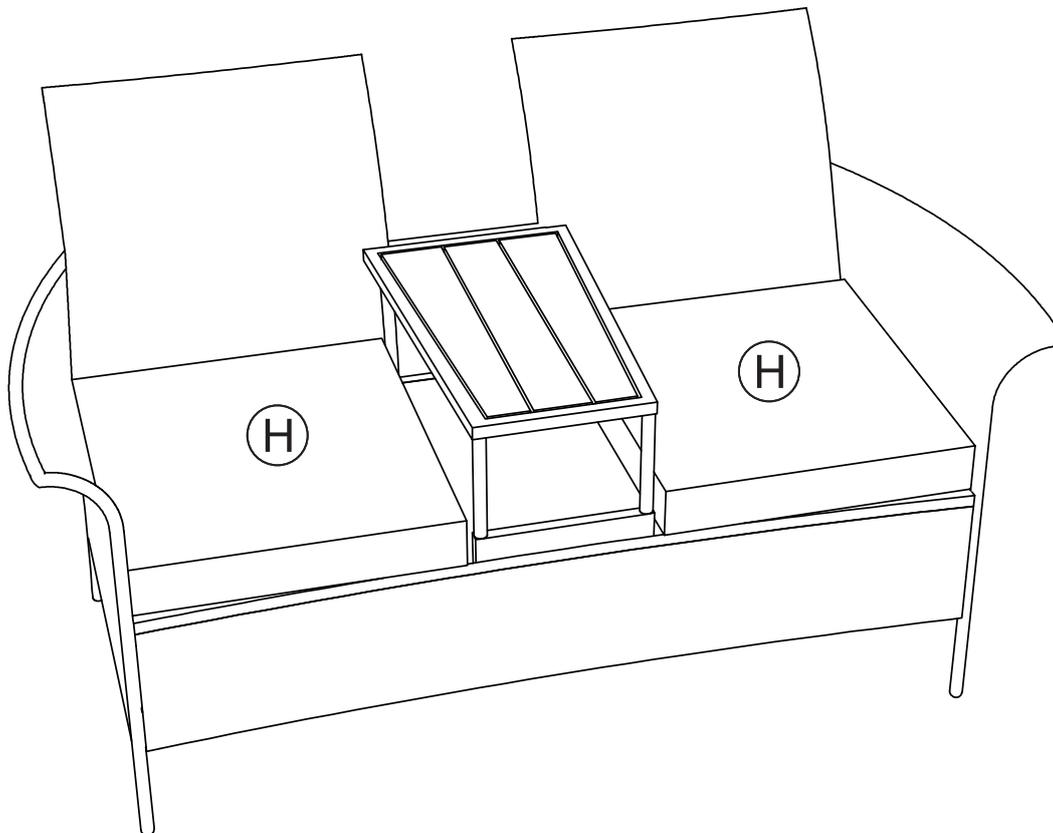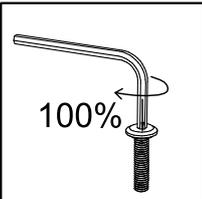

**FINISH**