



NO DRILL EXTENDABLE EYELET POLE- NO SCREWS REQUIRED

- Two people are recommended for the installation of this product.
- For safety, please use a step ladder.
- This product is for use inside the window recess.
- A minimum width of 70cm and a maximum width of 120cm.
- Overall width of pole including finials is 85cm - 135cm.


1. Remove the left-hand finial/bracket and slide the eyelet curtain on to the pole. Ensure the last eyelet hangs free at the end of each pole; reattach the finial/bracket.

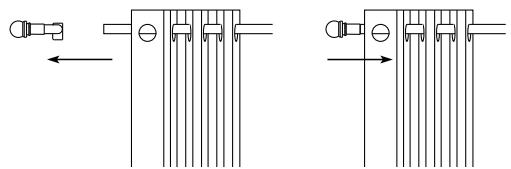


2. Unlock pole (see sticker number 1 on pole).

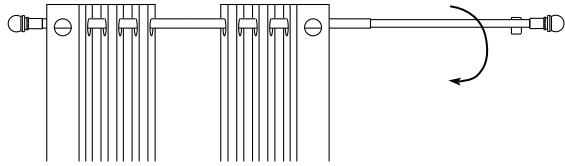


3. Place left bracket in upper left corner of the window recess and extend the pole to right hand corner.

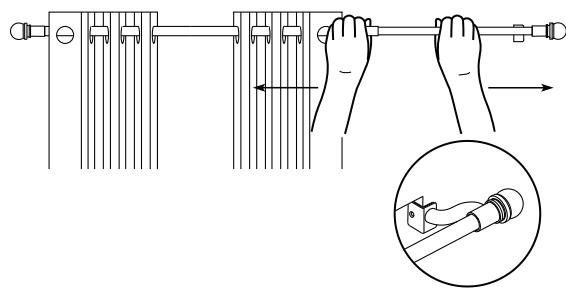

4. With a hand on each pole, push the poles outwards applying firm pressure in both directions to brace against each wall. To finally tension the pole, twist the thin rod away from you (see sticker number 2 on pole).

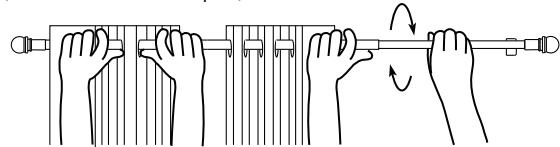

5. Twist right hand end finial away from you until resistance is felt. This tension allows the pole and the brackets to fit flush to the wall. Remove stickers after completing installation.

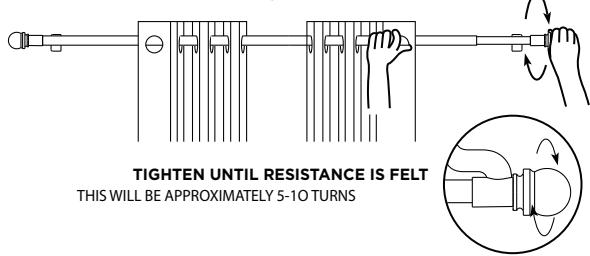

6. Finally hook the end curtain eyelet over the pole finials to complete the look.

