




Assembly Instruction

①*1pc		A*4+1EXT	 M6*35MM
②*1pc		B*10+1EXT	 M6*20MM
③*1pc		C*2+1EXT	 M6*16MM
④*4pcs		D*2+1EXT	
⑤*1pc		H*1	 M6


STEP 1

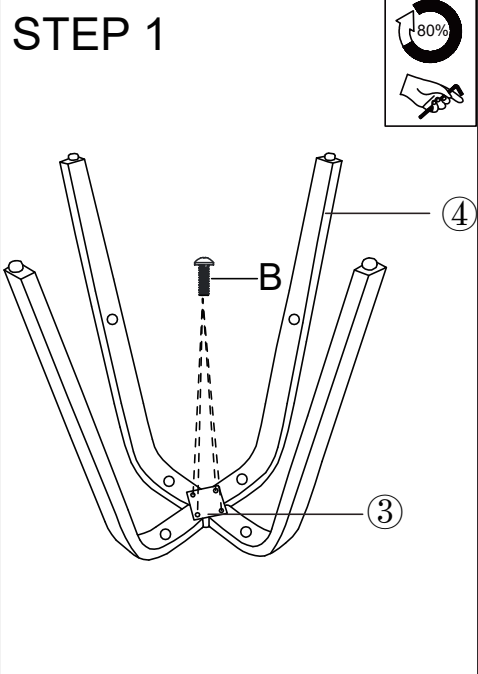

STEP 2

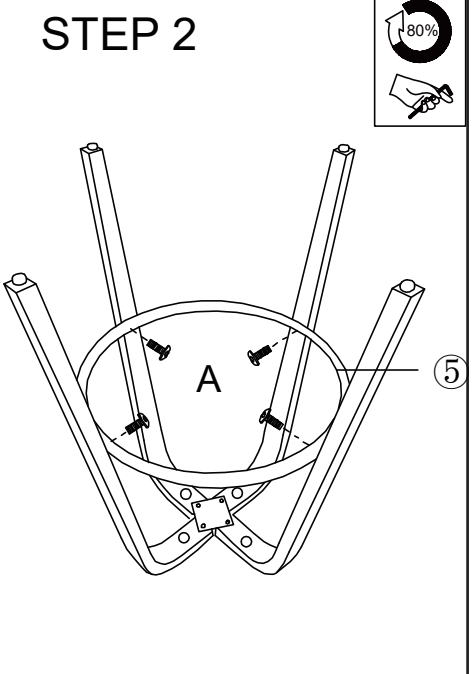


STEP 3

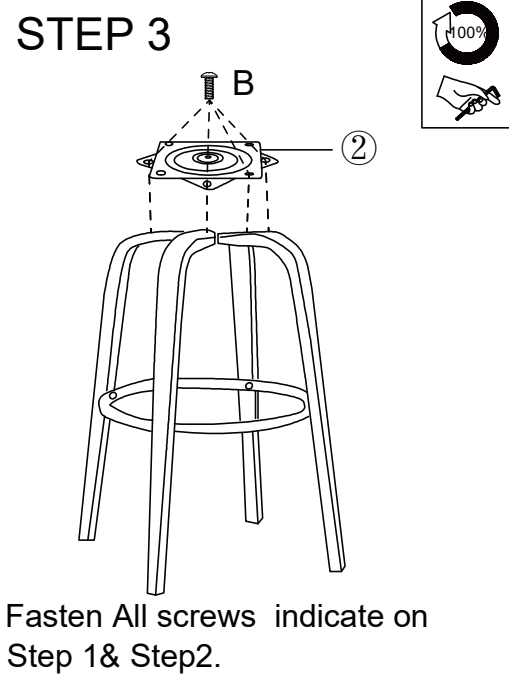

Fasten All screws indicate on Step 1& Step2.

STEP 3

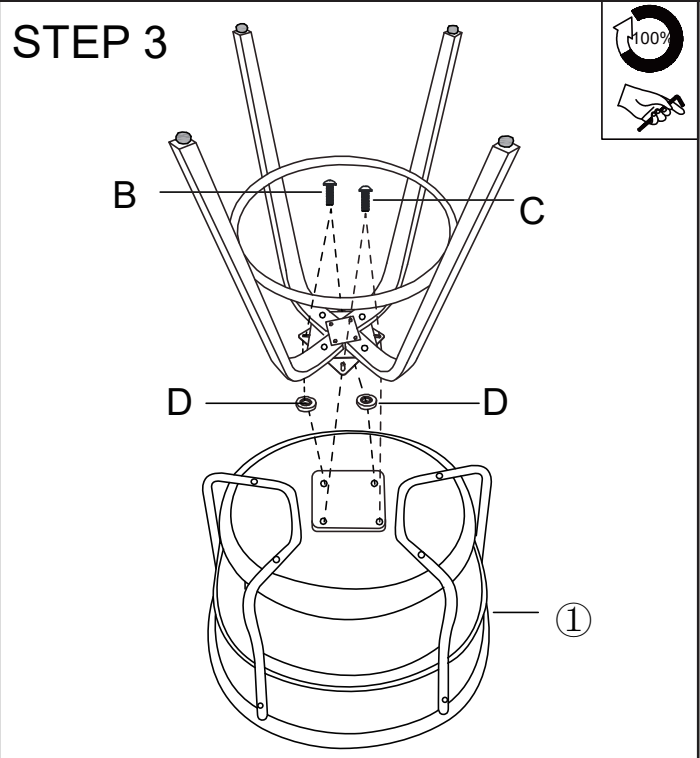

STEP 4

