











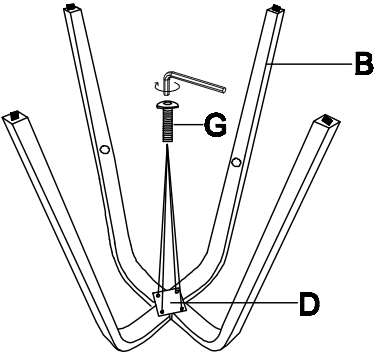

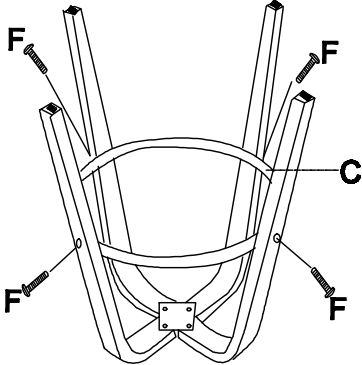

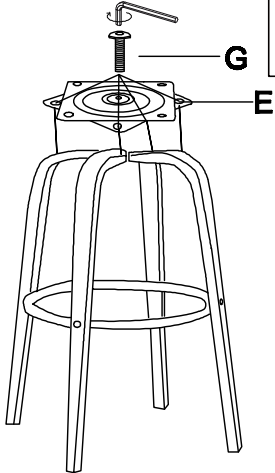

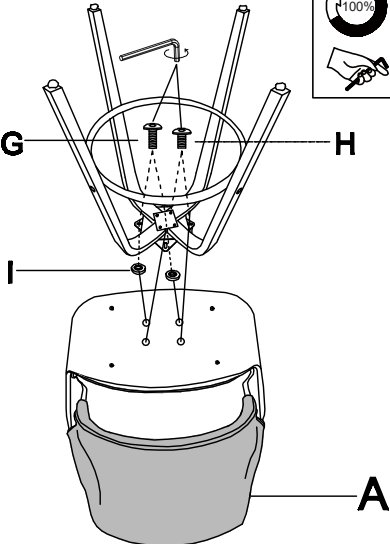
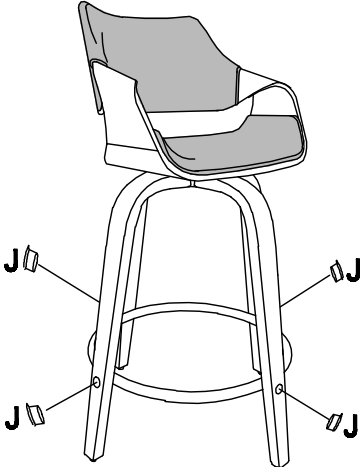


# Assembly Instruction

A*1		F*4+1EXT	 M6*25MM
B*4		G*10+1EXT	 M6*20MM
C*1		H*2+1EXT	 M6*16MM
D*1		I*2	
E*1		J*4	
		K*1	 M6

<b>STEP1</b>  	<b>STEP2</b> 80%  	<b>STEP3</b>   Fasten All screws indicated on Step 1&Step 2.
<b>STEP4</b>  	<b>STEP5</b> 	<b>STEP6</b> 